


# Features & Functions Guide

# Welcome to the Kia Family!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.



**Getting Started  
With Your New  
Kia Video**

## Using This Features & Functions Guide

The information contained in this guide is a brief overview of the operation and features of your new Kia vehicle.

This Features & Functions Guide and the specific operational and safety information it provides are not a substitute for your Owner’s Manual. In the interest of your safety and that of the vehicle’s occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read the Owner’s Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance of or after the fact and assumes no liability in connection with such changes.

[www.kia.com](http://www.kia.com)

Consumer Affairs - Roadside Assistance<sup>†12</sup>: 1-800-333-4KIA (800-333-4542)

Always check the Owner’s Manual for complete operating information and safety warnings.

<sup>†</sup>LEGAL DISCLAIMERS ON [PAGE 152](#) | <sup>\*</sup>IF EQUIPPED



## Videos & Navigation

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by clicking or tapping the video links at the top of pages in this document. If the video does not automatically load, copy the URL and paste it into a browser window to access the video.

You can also view the videos by visiting the following website:

[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

**This document is interactive:** from the [Table of Contents](#) page, you can click or tap on any subject to immediately access that page. To return to the Table of Contents, click/tap the home icon at the top left of the page (🏠). For longer sections that cover more than one page, you can navigate between pages using the arrows (◀▶).

This document is a PDF designed to be viewed on a smart device and/or downloaded to a desktop computer. Pages can be printed using legal (8.5" x 14") paper.


**REMINDER:** When accessing videos on your mobile device, standard cellular data rates may apply.


*The video resources should not be accessed while you are operating your Kia vehicle.*


# Getting Started


As you get to know your new Kia, you can explore this booklet to better understand how to operate its many features and systems. You can find the complete Table of Contents on the next three pages, but first, be sure to review the following to better understand some of your Kia’s most used features:


1	<a href="#">Smart Key with Remote Start / Remote Smart Parking Assist 2 (RSPA2)*</a>	134
2	<a href="#">Front Seat Restraint Adjustment / Power Adjustable Driver’s Seat</a>	119
3	<a href="#">Seat Warmers / Ventilated Seats*</a>	117
4	<a href="#">2nd-Row Seats - Slide and Fold/Unfold</a>	124
5	<a href="#">Windshield/Rear Wipers &amp; Washers</a>	90
6	<a href="#">Smart Cruise Control (SCC) / Navigation-based SCC*</a>	60
7	<a href="#">Normal Maintenance Schedule</a>	151
8	<a href="#">Vehicle Settings - Infotainment System</a>	28
9	<a href="#">Bluetooth® Wireless Technology</a>	95
10	<a href="#">Kia Connect Activation / Kia Connect Assistance</a>	99
11	<a href="#">Kia Access App Download</a>	101
12	<a href="#">Kia Access App Features Guide</a>	102
13	<a href="#">Kia Connect with Navigation</a>	103
14	<a href="#">Android Auto™ / Apple CarPlay® Setup</a>	93


**Getting Started With Your New Kia Video**


**Your New Kia Important Care Tips Video**

**Vehicle Cameras Important Tips Video**

**Navigation System Important Tips Video**

**Over the Air (OTA) Updates Video**

**Digital Features & Services Video**

**Matte Paint Care Video**

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver’s primary responsibility is in the safe and legal operation of a vehicle, and handheld devices, other equipment or vehicle systems which take the driver’s eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.*

\*IF EQUIPPED



# Table Of Contents

<b>WELCOME TO THE KIA FAMILY!</b>	02
<b>VIDEOS &amp; NAVIGATION</b>	03
<b>GETTING STARTED</b>	04
<b>INSTRUMENT CLUSTER</b>	
Instrument Cluster Overview	08
Climate Controls	09
Distance to Empty (DTE) / Range	10
Indicators & Warning Lights	12
Electric Vehicle (EV) Indicators	13
Energy Consumption	15
Charge Warning Messages on Instrument Cluster LCD	16
Tire Pressure Monitoring System (TPMS)	20
Drive Mode Integrated Control System	22
All Wheel Drive (AWD/TERRAIN MODE)*	23
Instrument Cluster LCD Modes	24
<b>VEHICLE SETTINGS</b>	
Trip Modes / Utility Information View	25
Head-Up Display (HUD)* - 12" Display	26
Vehicle Settings - Infotainment System	27
Power Button	30
<b>ELECTRIC VEHICLE (EV) FEATURES</b>	
Charging Connector - Auto/Lock Mode	32
Scheduled Charging	33
Charging Your EV	34
EV Charge Transfer / Vehicle to Load (V2L) / 125V Inverter	37
EV Mode - Infotainment System	39
Regenerative Braking	41
<b>ADVANCED DRIVER ASSISTANCE SYSTEMS (ADAS)</b>	
Forward Collision-Avoidance Assist 2 (FCA2)	45
Blind-spot Collision-Avoidance Assist (BCA)	49
Lane Keeping Assist (LKA)	51
Blind-spot View Monitor (BVM)*	54
Safe Exit Assist (SEA)	55
Driver Attention Warning (DAW)	56
Leading Vehicle Departure Alert (LVDA)	57
Lane Following Assist 2 (LFA2)	58
Smart Cruise Control (SCC)	60
Navigation-based Smart Cruise Control (NSCC)	64
Highway Driving Assist 2 (HDA2)	65
Surround View Monitor (SVM)*	67
Remote Smart Parking Assist 2 (RSPA2)*	69
Rear View Monitor (RVM)	72
Rear Cross-traffic Collision-Avoidance Assist (RCCA)	74
Reverse/Forward*/Side* Parking Collision-Avoidance Assist (PCA)*	76
Forward/Reverse/Side* Parking Distance Warning (PDW)	77
Intelligent Speed Limit Assist (ISLA)	78

*Continued on next page*

# Table Of Contents

[Continued from previous page](#)

## DRIVER’S PANEL

<a href="#">Instrument Cluster Illumination Control</a>	<a href="#">80</a>
<a href="#">Electronic Stability Control (ESC)</a>	<a href="#">80</a>
<a href="#">Hill-start Assist Control (HAC)</a>	<a href="#">81</a>
<a href="#">Power Windows, Window Lock &amp; Central Door Lock</a>	<a href="#">82</a>
<a href="#">Automatic Door Lock/Unlock</a>	<a href="#">83</a>
<a href="#">Power/Heated Outside Mirrors</a>	<a href="#">83</a>
<a href="#">Electronic Child Safety Lock System*</a>	<a href="#">83</a>
<a href="#">Power Folding Outside Mirrors*</a>	<a href="#">84</a>

## STEERING WHEEL CONTROLS

<a href="#">EV Gear Shift</a>	<a href="#">85</a>
<a href="#">Heated Steering Wheel*</a>	<a href="#">86</a>
<a href="#">Headlights &amp; High Beams</a>	<a href="#">87</a>
<a href="#">High Beam Assist (HBA)</a>	<a href="#">88</a>
<a href="#">Turn Signals</a>	<a href="#">89</a>
<a href="#">Windshield/Rear Wipers &amp; Washers</a>	<a href="#">90</a>
<a href="#">Lifting Wipers (Wiper Service Mode)</a>	<a href="#">91</a>
<a href="#">Power Tilt/Telescoping Steering Wheel*</a>	<a href="#">92</a>

## INFOTAINMENT SYSTEM

<a href="#">Android Auto™ Setup</a>	<a href="#">93</a>
<a href="#">Apple CarPlay® Setup</a>	<a href="#">94</a>
<a href="#">Bluetooth® Wireless Technology</a>	<a href="#">95</a>
<a href="#">Steering Wheel Audio Controls</a>	<a href="#">98</a>
<a href="#">Kia Connect Activation</a>	<a href="#">99</a>
<a href="#">Kia Connect Assistance*</a>	<a href="#">100</a>
<a href="#">Kia Access App Download</a>	<a href="#">101</a>
<a href="#">Kia Access App Features Guide</a>	<a href="#">102</a>
<a href="#">Kia Connect with Navigation</a>	<a href="#">103</a>

## CENTER PANEL

<a href="#">Digital Clock - Infotainment System</a>	<a href="#">106</a>
<a href="#">USB-C Charger Ports*</a>	<a href="#">106</a>
<a href="#">USB-C Ports &amp; Power Outlets</a>	<a href="#">107</a>
<a href="#">Wireless Smartphone Charging System</a>	<a href="#">108</a>
<a href="#">Automatic Climate Control</a>	<a href="#">110</a>
<a href="#">Electronic Parking Brake (EPB)</a>	<a href="#">114</a>
<a href="#">Auto Hold</a>	<a href="#">115</a>

## SEATING

<a href="#">Seat Warmers / Ventilated Seats*</a>	<a href="#">117</a>
<a href="#">Infotainment System Seats Settings*</a>	<a href="#">118</a>
<a href="#">Driver Position Memory System*</a>	<a href="#">118</a>
<a href="#">Front Seat Headrest Adjustment*</a>	<a href="#">119</a>
<a href="#">Power Adjustable Driver’s Seat</a>	<a href="#">120</a>
<a href="#">Relaxation Seats* / Ergo Motion*</a>	<a href="#">121</a>
<a href="#">2nd-Row Seats - Walk-In Switches</a>	<a href="#">122</a>
<a href="#">2nd-Row Seats - Slide and Fold/Unfold</a>	<a href="#">124</a>
<a href="#">3rd-Row Seats - Reclining and Folding</a>	<a href="#">125</a>
<a href="#">Rear Occupant Alert (ROA) with Door Monitoring</a>	<a href="#">126</a>

[Continued on next page](#)

\*IF EQUIPPED

# Table Of Contents

[Continued from previous page](#)

**OTHER KEY FEATURES**  
[Full Display Mirror \(FDM\)\\*](#) . . . . . 127  
[HomeLink® with Auto-Dimming Rearview Mirror\\*](#) . . . . . 128  
[Electronic Hood / 12V Battery Access](#) . . . . . 131  
[Sun Visor](#) . . . . . 131  
[Exterior Flush Door Handle Operation](#) . . . . . 132  
[Smart Key with Remote Start / Remote Smart Parking Assist \(RSPA\)\\*](#) . . . . . 134  
[Digital Key 2](#) . . . . . 136  
[Finger Print Module \(FPM\)](#) . . . . . 140  
[Smart Power Liftgate\\*](#) . . . . . 141  
[Map/Room Lamps](#) . . . . . 144  
[Sunroof Operation](#) . . . . . 146  
[Tire Mobility Kit](#) . . . . . 148

**SAFETY FEATURES**  
[Occupant Detection System \(ODS\) / Passenger Airbag Off Indicator.](#) . . . . . 149  
[Seat Belts](#) . . . . . 150

**[NORMAL MAINTENANCE SCHEDULE](#)** . . . . . 151

**[LEGAL DISCLAIMERS](#)** . . . . . 152

 
\*IF EQUIPPED




## INSTRUMENT CLUSTER

### Instrument Cluster Overview


- A** POWER (PWR) Gauge - Energy consumption rate
- B** CHARGE (CHG) Gauge - Charge status of the regenerative brakes
- C** Battery State of Charge (SOC) Gauge
- D** Speedometer
- E** Distance to Empty / Range
- F** Gear indicator
- G** Odometer
- H** Regenerative braking level indicator

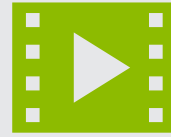

 **Panoramic  
Display Overview  
Video**

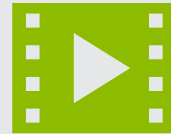

**EV Overview &  
Operation Video**

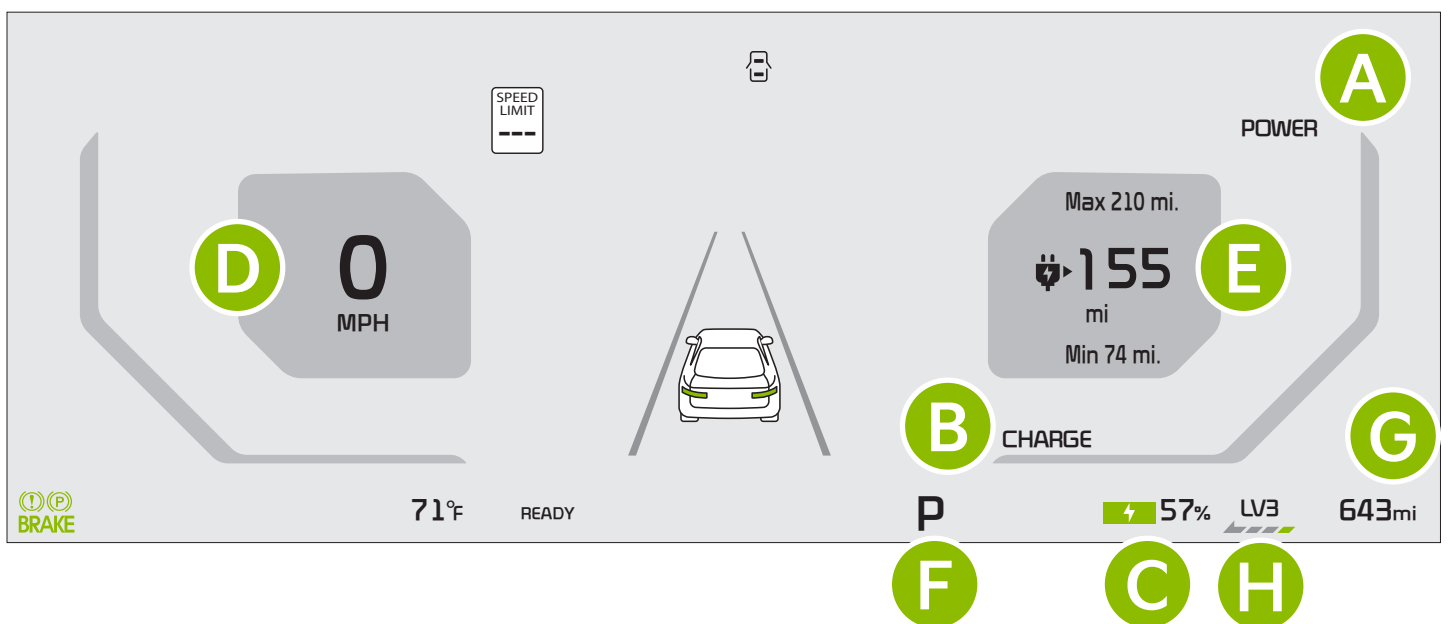 

Your vehicle's Instrument Cluster & indicator light locations may differ from those in the illustrations. For more information on the Instrument Cluster, the LCD Warning Messages and the function of all indicator and warning lights, please refer to section 5 of the Owner's Manual.



Illustration(s) are for demonstration purposes only. Some indicators and warning lights may not appear in illustrations. On the vehicle, they may appear in the LCD.



## Climate Controls

  Adjust the climate controls on the instrument panel display:

- A** Driver's ONLY select button
- B** SYNC button - Press to sync the driver and passenger temperature
- C** Climate control system screen ON/OFF button
- D** Front-windshield defroster button
- E** Rear-window defroster button
- F** Air intake control button
- G** Air conditioning button
- H** AUTO (automatic control) button
- I** Fan speed control button
- J** Front/rear climate control switching button
- K** Mode selection button
- L** Driver's side temperature control button
- M** Passenger's side temperature control button

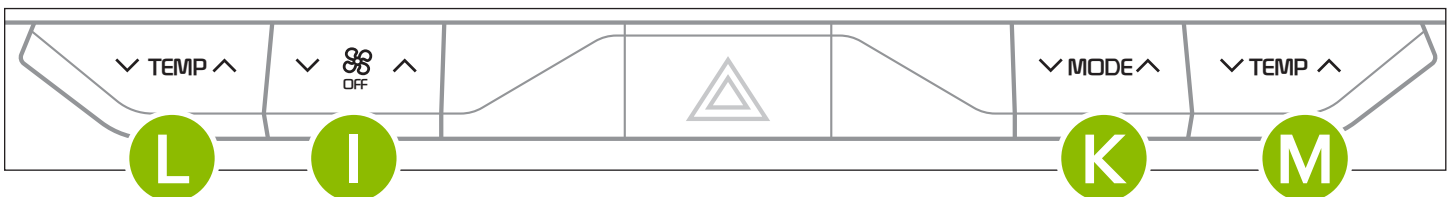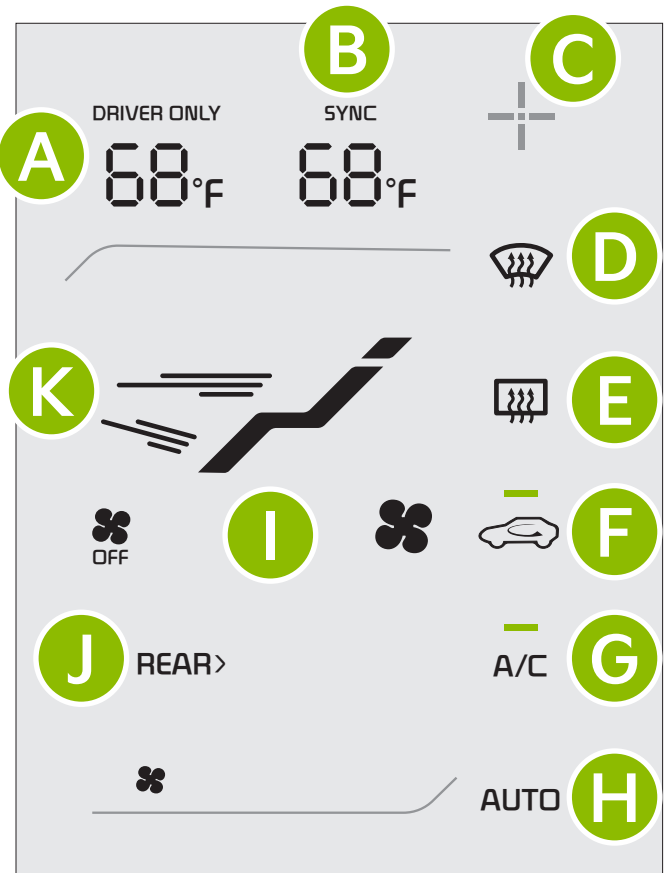


See Automatic Climate Control information on [page 109](#).

*Illustration(s) are for demonstration purposes only.*



## Distance to Empty (DTE) / Range

 Distance to Empty (DTE) or Range **A** is the estimated distance an EV can be driven with the remaining electric energy until the battery reaches zero. Min **B** is the Distance to empty with high energy consumption. Max **C** is the Distance to empty with low energy consumption. DTE can vary depending on the selected drive mode, current driving conditions (outside temperature, rain, snow, wind, road surfaces), traffic, driving patterns, air conditioner, cargo weight, heater use, and other factors.

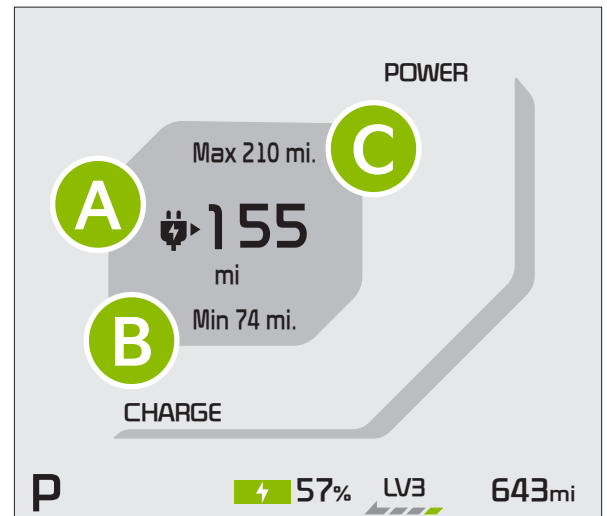

### QUICK TIPS

- When decelerating or driving downhill, regenerative braking charges the high voltage battery which minimizes energy loss and increases the Distance to Empty or Range
- When you set a destination via the on-board navigation system, DTE is calculated based on the route selected. By setting a final destination, DTE accuracy may improve. By knowing the final location, the vehicle can better predict the amount of battery energy it will need to reach that destination
- When operating the climate control, use the DRIVER ONLY function to conserve energy
- In cold weather, use scheduled heating to reduce the amount of energy consumption

### REMINDERS:

- If DTE displays “Zero Miles,” you need to charge the vehicle immediately
- Distance to empty may depend on many factors such as the charge amount of the high voltage battery, weather, temperature, durability of the battery, geographical features, and driving style
- Operating the climate control system may reduce the Distance to Empty

 
[\*Continued on next page\*](#)

*Illustration(s) are for demonstration purposes only.*

## Distance to Empty (DTE) / Range

[\*Continued from previous page\*](#)



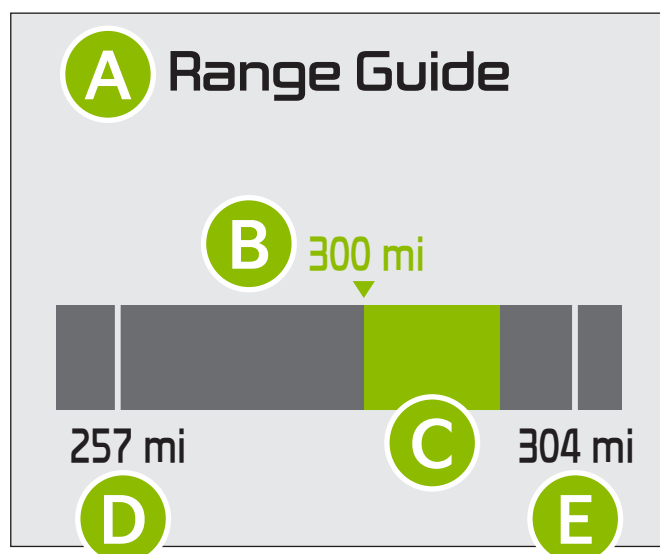































- A Range Guide:** may help drivers achieve economic driving.
- B Distance to Empty (DTE):** uses the driving history and current battery charge status to analyze DTE
- C Energy Consumption Gauge:** when having reached an energy-saving level it will be visually indicated with a green or range bar:
  - Green:** driving with less energy than usual
  - Orange:** Driving with more energy than usual
- D** Distance to empty using high energy consumption
- E** Distance to empty using low energy consumption



*Illustration(s) are for demonstration purposes only.*



Indicators & Warning Lights

-  High Beam Indicator
-  High Beam Assist Indicator
-  Light ON Indicator
-  Low Beam Indicator
-  AUTO HOLD Indicator
-  Master Warning Light
-  Electronic Brakeforce Distribution (EBD) System Warning Light  
(Two separate indicators on Instrument Cluster lit at same time)
-  Icy Road Warning Light\*
-  Immobilizer Indicator\*
-  Seat Belt Warning Light
-  Low Tire Pressure Warning Light / Tire Pressure Monitoring System (TPMS) Malfunction Indicator\*
-  Electronic Stability Control (ESC) Indicator / ESC Malfunction Indicator
-  Electronic Stability Control (ESC) OFF Light
-  Parking Brake & Brake Fluid Warning Light
-  Electronic Power Steering (EPS) Warning Light
-  Airbag Warning Light
-  All-Wheel Drive (AWD) Warning Light\*
-  Anti-lock Braking System (ABS) Warning Light
-  CRUISE Cruise Indicator\*
-  LED Headlamp Warning Light\*
-  EPB Electronic Parking Brake (EPB)
-  Forward Safety Warning Light
-  Lane Safety Indicator\*
-  Highway Lane Change Assist Indicator\*
-  EV Service Warning Light
-  READY READY Indicator
-  EV Temperature Warning\*
-  Charging System Warning Light
-  Regenerative Brake Warning Light  
(Two separate indicators on Instrument Cluster lit at same time)
-  Charging Cable Connection Indicator
-  Power Down Indicator
-  High Voltage Battery Low Level Warning Light
-  12V Battery
-  SNOW SNOW Mode Indicator
-  ECO ECO Mode Indicator
-  SPORT SPORT Mode Indicator
-  Turn Signal Indicator
-  Lane Following Assist Indicator
-  Emergency Steering Warning Light\*

Your vehicle's Instrument Cluster & indicator light locations may differ from those in the illustrations. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD. For more information please refer to section 5 in the Owner's Manual.

\*IF EQUIPPED





## Electric Vehicle (EV) Indicators

### A Battery State of Charge (SOC)

**Gauge:** The State of Charge gauge displays the high-voltage battery charge status

 


EV Energy  
Consumption  
Video

### B Power / Charge Gauge: The Power/

Charge gauge provides information on the energy consumption rate of

the vehicle and the charge status of the regenerative brakes

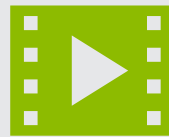

Tips for  
Economical  
Driving Video

- **POWER** - Shows the energy consumption rate of the vehicle when driving uphill or accelerating. The more electric energy used, the higher the gauge level
- **CHARGE** - Shows the charging status of the battery when it is being charged by the regenerative brakes. The more electric energy charged, the lower the gauge level

**C Distance to Empty (DTE):** DTE is the estimated distance the vehicle can be driven with the remaining high-voltage battery level. The DTE will vary according to the selected drive mode and Climate Control settings



[Continued on next page](#)

*Illustration(s) are for demonstration purposes only.*



# Electric Vehicle (EV) Indicators

[Continued from previous page](#)

READY

**Ready Indicator** - Illuminates when the vehicle is ready to drive.

When the ready indicator light is blinking, the vehicle has detected a possible malfunction. Have an authorized Kia dealer address the concern as soon as possible.



**EV Service Indicator** - Illuminates when there is a malfunction

related to the electric vehicle control system. Have an authorized Kia dealer address the concern as soon as possible.



**Power Down Indicator** - Illuminates when the vehicle's speed and performance are limited for the safety of the electric vehicle.



**Charging Indicator** - Shows the charging status of the high-voltage battery. When charging, the green indicator turns on. The indicator turns off when not charging.



**High Voltage Battery Low Level Warning Light** - Illuminates when the high-voltage battery charge level is insufficient.



**Regenerative Brake Warning Lights** - Both lights illuminate when the regenerative brake system is not functioning correctly.

*Your vehicle's Instrument Cluster & indicator light locations may differ from those in the illustrations. For more information on the Instrument Cluster, the LCD Warning Messages and the function of all indicator and warning lights, please refer to section 5 of the Owner's Manual.*

*This illustration is for demonstration purposes only.*

*Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.*



# Energy Consumption

There are several factors that contribute to your electric vehicle's energy consumption, including maintenance of your vehicle, driving style, weather, durability of the battery and environmental conditions.



**EV Energy  
Consumption  
Video**

Below are tips to help reduce energy consumption:

- Use Scheduled Climate settings to preheat or precool the vehicle before driving
- When plugged in, keep your vehicle in good condition with regular maintenance
- Don't rest your foot (or ride) on the brake pedal
- Use the climate control system less often and use the Driver Only setting, when possible
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicle
- Ensure wheels are aligned correctly
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

*For more information, refer to section 1 of the Owner's Manual.*



## Charge Warning Messages on Instrument Cluster LCD

Low EV Battery



**Low Battery Warning** - When the high-voltage battery level drops to 25% (20% for extended type battery) or less, this warning message appears on the Instrument Cluster and the warning indicator light illuminates. Charge the high-voltage battery immediately.

Charge immediately.  
Power limited



**Charge immediately. Power limited** - When the high-voltage battery level drops to 15% (10% for extended type battery) or less, this warning message appears on the Instrument Cluster, the warning indicator light illuminates and the power down warning light turns on simultaneously.

The vehicle's power will be reduced to minimize the energy consumption of the high-voltage battery. Charge the high-voltage battery immediately.

Power limited



**Power limited** - This warning message appears when the vehicle's power is limited for the following reasons:

1. When the high-voltage battery is below a certain level, or voltage is decreasing
2. When the temperature of the motor or high-voltage battery is too high or too low
3. When there is a problem with the cooling system or a failure that may interrupt normal driving

[\*Continued on next page\*](#)

*These illustrations are for demonstration purposes only. Some messages may appear differently. See your Owner's Manual for more information.*



## Charge Warning Messages on Instrument Cluster LCD

[Continued from previous page](#)

Power limited  
due to low EV battery  
temperature.  
Charge battery

### **Power limited due to low EV battery**

**temperature. Charge battery -** When the outside temperature is low and you turn the vehicle on or off, this warning message may appear on the Instrument Cluster. If the battery level is low and the vehicle is parked outside for a long time, vehicle power may be limited. Charging the battery before driving helps increase power.

Stop safely and  
check power supply



### **Stop vehicle and check power supply -**

When there is a failure in the 12V power supply system, this warning message appears on the Instrument Cluster. Park the vehicle in a safe location and have it towed to the nearest Kia dealer for inspection.

### **REMINDERS:**

 
- When these warning messages are displayed, do not accelerate or start the vehicle suddenly
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

[Continued on next page](#)


*These illustrations are for demonstration purposes only. Some messages may appear differently. See your Owner's Manual for more information.*

# Charge Warning Messages on Instrument Cluster LCD


[Continued from previous page](#)

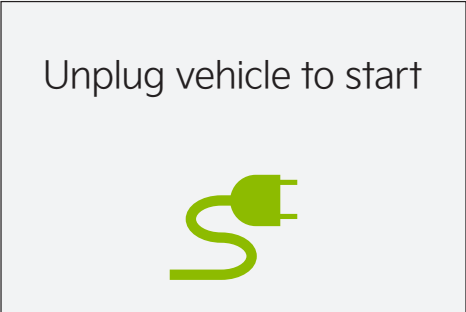

 **Unplug vehicle to start** - This warning will appear when attempting to start the vehicle with the connector plugged into the charger. Remove the charging connector and then start the vehicle.

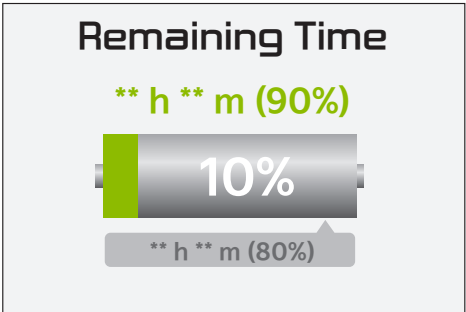

 **Remaining Time** - Displays the remaining time to charge the battery to the selected target battery charge level, current SOC and the charging rate.

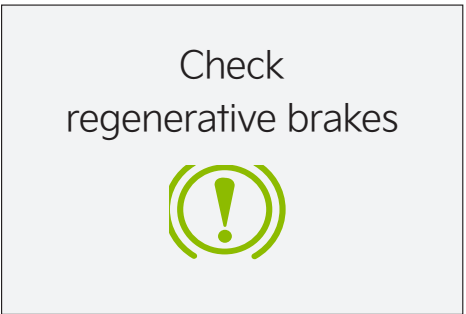

**Check Regenerative Brakes** - Displays when the regenerative brake system does not work properly. In this case, have your vehicle inspected by an authorized Kia dealer.

[Continued on next page](#)

Not all warnings and messages are displayed. These illustrations are for demonstration purposes only. Some messages may appear differently. See section 1 in the Owner's Manual for more information.

# Charge Warning Messages on Instrument Cluster LCD

[Continued from previous page](#)

Charging Stopped.  
Check the AC charger

## **Charging Stopped. Check the AC/DC**

**charger** - When there is a problem with the external AC or DC charger, when the AC charger stops charging or when the charging cable is damaged, this message will appear. Check whether there is a problem with the charger or cable. If no problem is found, see an authorized Kia dealer for further assistance.

Charging Interrupted.  
Please check the DC  
charger



Charging Stopped.  
Check the  
cable connection

## **Charging Stopped. Check the cable**

**connection** - When the charging connector is not correctly connected to the charging inlet or the charging connector lock release button is pressed, this message will appear. If this occurs, separate the charging connector and re-connect it. Check whether there is any problem (external damage, foreign substances, etc.) with the charging connector and charging inlet. If the problem continues, see an authorized Kia dealer for assistance.



### **REMINDERS:**


- When these warning messages are displayed, do not accelerate or start the vehicle suddenly
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

*Illustrations are for demonstration purposes only. Some messages may appear differently. See section 1 in the Owner's Manual for more information.*



## Tire Pressure Monitoring System (TPMS)<sup>†21</sup>






The TPMS indicator  functions as both a Low Tire Pressure Light and TPMS Malfunction Indicator.

The indicator will illuminate if it detects one or more tires is significantly under inflated.

The indicator may also illuminate in the following conditions:

 
- The vehicle has a spare tire installed without TPMS
- The tire pressure drops due to the outside temperature becoming significantly lower

The LCD screen in the Instrument Cluster will display the Low Tire Pressure indicator  showing which tire is underinflated. Inflate the tire(s) to specifications using an accurate digital tire pressure gauge to turn off Low Tire Pressure Light . See front driver's door jamb for PSI specification.

When there is a problem with the TPMS, the TPMS Malfunction Indicator  will blink for approximately one minute and then illuminate — see dealer for service.



**Tire Pressure  
Monitoring  
Video**

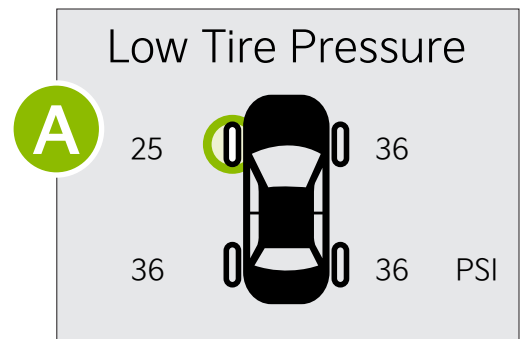

[\*Continued on next page\*](#)

*These illustrations are for demonstration purposes only.*

*Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) may interfere with TPMS system, which may cause the Malfunction Warning Indicator to illuminate.*

*For more information, refer to section 7 in the Owner's Manual.*





# Tire Pressure Monitoring System (TPMS)<sup>†21</sup>

[\*Continued from previous page\*](#)

### QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once per month. Only adjust tire pressure on “cold tires” that have been sitting for 3 hours or more, and tires that are not hot in temperature from direct sunlight or heat
- For proper maintenance and optimal EV economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- A significant drop in temperature can cause tire inflation pressures to drop, which may activate the TPMS light. Manually confirm tire pressures after significant changes in temperature or altitude

### REMINDERS:

- Check the recommended tire pressure label located on the left side of driver’s door jamb, visible when the door is open
- Consult your dealer for service if the Low Tire Pressure Light remains illuminated after inflating your tire(s)

*For more information, refer to section 7 in the Owner’s Manual.*



 
## Drive Mode Integrated Control System

There are four distinct driving modes, as well as MY DRIVE\* mode. An indicator in the Instrument Cluster will illuminate to show which drive mode you have selected (no indicator will appear for the NORMAL mode). Press the DRIVE MODE button **A** to select the following modes:


- **ECO** - This mode can help enhance electric energy efficiency by managing battery usage. The acceleration response may be slightly reduced in this mode. ECO mode automatically changes the 2WD/4WD\* driving mode depending on the road conditions
- **NORMAL** - This mode balances drivability and efficiency. Normal mode automatically changes the 2WD/4WD\* driving mode depending on the road conditions
- **SPORT** - This mode provides enhanced dynamic drivability on snow and keep 4WD\*. The electric energy efficiency may decrease in this mode
- **SNOW\*** - Snow mode is used to appropriately distribute the vehicle's traction forces and prevent wheel slippage when driving on snowy or slippery roads
- **MY DRIVE Mode\*** - In MY DRIVE mode, the driver can select separate modes and combine them on the Infotainment System



Drive Mode /  
Tow Mode  
Video

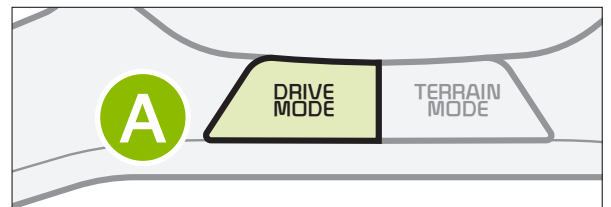

 (Button located center bottom of steering wheel.  
Button configuration may vary)

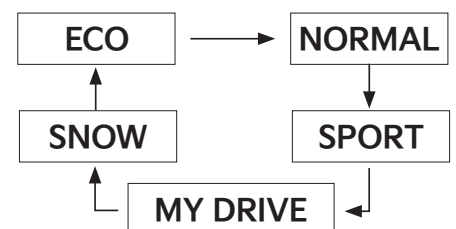

### QUICK TIP

- To help reduce energy consumption:
  - Drive at a moderate speed, accelerating smoothly and at a moderate rate
  - Keep tires inflated to the recommended pressure and wheels aligned properly

*Button configuration may vary.  
Images are for illustrative purposes  
only and may not reflect actual  
feature or operation.*

*For more information on driving  
modes, refer to section 6 in the  
Owner's Manual or contact your  
local dealership.*



### All Wheel Drive (AWD/TERRAIN Mode)\*

 
When you select TERRAIN mode, by pressing the TERRAIN button **A**, it helps the vehicle to maintain its best driving performance by controlling all wheels, engine, transmission and braking according to road conditions such as snow, mud, sand, etc.



**All Wheel Drive (AWD/TERRAIN Mode)\* Video**

- **MUD mode:** MUD mode is used to ensure safe driving by appropriately distributing the vehicle's traction forces when driving on muddy, unpaved or rough roads
- **SAND mode:** SAND mode is used to ensure safe driving by appropriately distributing the vehicle's traction forces when driving on sandy, graveled or unpaved off-roads
- **SNOW mode:** SNOW mode is used to appropriately distribute the vehicle's traction forces and prevent wheel slippage when driving on snowy or slippery road

When the TERRAIN mode is deactivated, a vibration may be felt as the traction forces on the front and rear wheels of the vehicle are released. This vibration is not a mechanical failure.

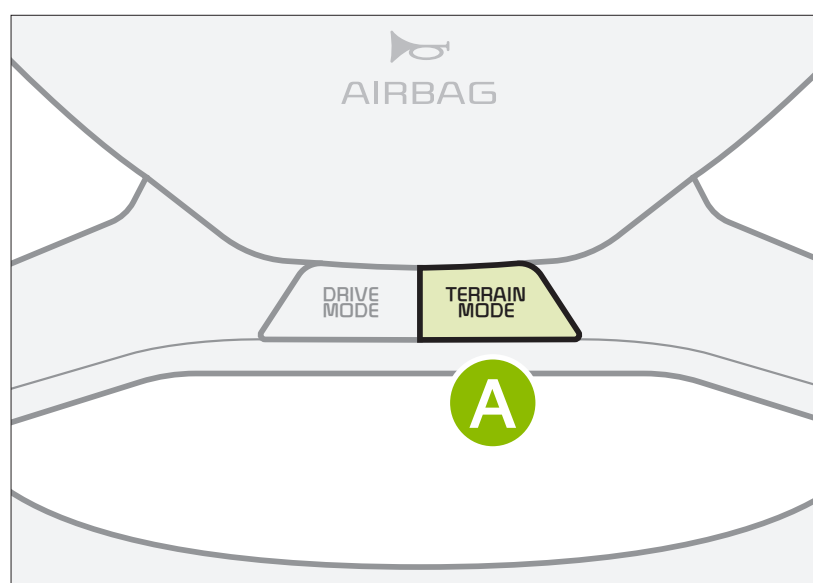

(Button located center bottom of steering wheel. Button configuration may vary)

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.



## Instrument Cluster LCD Modes

Press Mode button  **A** to scroll through different Instrument Cluster LCD Modes.

 
**Driving Assist Mode:** Displays information for Driver Assistance Systems

**Navigation Mode:** Displays information related to the navigation system

**Utility Information Mode:** Displays information related to driving, warnings, etc.



**Panoramic Display Overview Video**

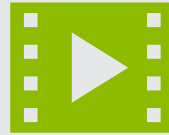

**Steering Wheel Controls Video**



(Buttons located on left side of Steering Wheel.  
Button configuration may vary)

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. For more information, refer to section 5 in the Owner's Manual.


Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.



## Trip Modes / Utility Information View

 
The Trip Modes or Utility Information Mode is a driver information system that displays information related to range, tire pressure, current trip information, average energy consumption after charging, accumulated trip info after since last reset and energy flow. It appears on the LCD display when the Power button is in the ON position and the Instrument Cluster is in the Utility Information Mode.

To cycle through the Instrument Cluster LCD modes **A**, press the Mode button **B** on the Left side of the Steering Wheel.

When in the Utility Information Mode , press the OK button **C** up/down to cycle through the screens. When displaying trip information screens, press and hold the OK button **C** to reset to zero.

### REMINDERS:

- Appearance of Utility Information display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

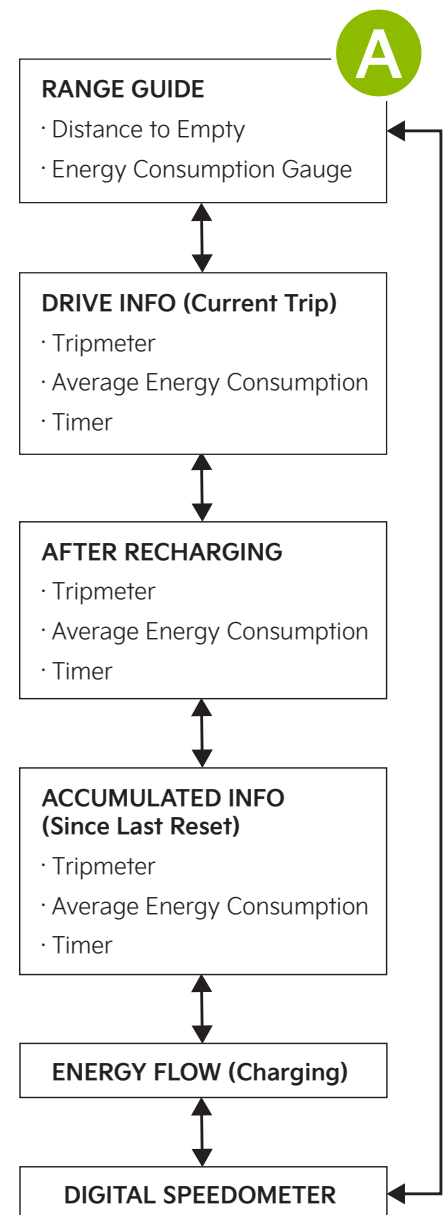

(Buttons located on left side of Steering Wheel.  
Button configuration may vary)

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. For more information, refer to section 5 in the Owner's Manual.



## Head-Up Display (HUD) - 12" Display<sup>\*†4,8</sup>

Augmented Reality Head-Up Display (HUD) is a semi-transparent display that is designed to project certain information from the Instrument Cluster and Navigation System onto the windshield glass.

When in augmented reality mode, HUD shows:


- Turn By Turn (TBT) navigation information
- Traffic information
- Speedometer information
- SCC set speed information
- SCC Vehicle Distance information
- Blind-spot Safety information
- Highway Auto Speed Change information<sup>\*</sup>
- Lane Safety
- Highway Driving Assist information<sup>\*</sup>
- Lane Following Assist
- Augmented Reality Mode information for TBT, Lane Safety, Front Vehicle indicator<sup>\*</sup>, Leading Vehicle Departure Alert, Highway Lane Change



Head-Up 12" Display Video



EV Features & Settings Video

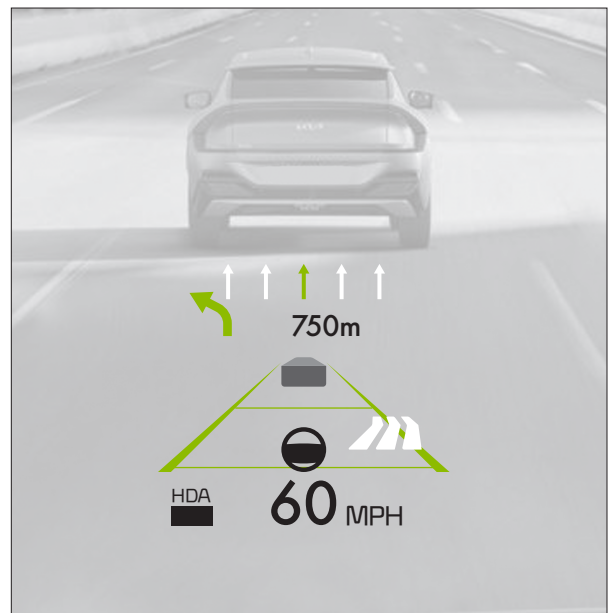 

*Image is for illustrative purposes only and may not reflect actual features or operation.*

[Continued on next page](#)

*These illustrations are for demonstration purposes only. Some messages may appear differently. See your Owner's Manual for more information.*

*When engaged, HUD is a supplemental system. Do not solely rely on the system, always drive safely, and pay attention to the driving conditions on the road. See section 5 in the Owner's Manual for more information about HUD and other relevant sections for additional vehicle features.*



## Head-Up Display (HUD) - 12" Display<sup>\*†4,8</sup>

[Continued from previous page](#)

### Head-Up Display (HUD) Settings

Drivers can adjust the HUD settings from the Vehicle Settings. Press the **SETUP** button on the Infotainment System. Select **VEHICLE**, then HEAD-UP DISPLAY. HUD settings include:

- Display Height: Adjust the height of the HUD image on the windshield glass
- Augmented Reality Matching Adjustment: Adjusts the position of the content
- Brightness: Adjust the intensity of the HUD brightness

### REMINDERS:

- The HUD image on the windshield glass may not be visible in these cases:
  - The driver has poor sitting posture
  - The driver is wearing polarized sunglasses
  - There is an object covering the HUD
  - The driver is driving on a wet road
  - There is excessive lighting inside or outside the vehicle
  - Modifications made to the windshield, such as tinting or other aftermarket treatments, could affect the HUD. When replacing the front windshield glass of vehicles equipped with the HUD, owners must replace it with windshield glass designed for HUD operation. Otherwise, duplicated images may be displayed on the windshield glass
  - If Turn By Turn navigation information is selected as HUD content, TBT information will not be displayed on the LCD

*These illustrations are for demonstration purposes only. Some messages may appear differently. See your Owner's Manual for more information.*

*When engaged, HUD is a supplemental system. Do not solely rely on the system, always drive safely, and pay attention to the driving conditions on the road. See section 5 in the Owner's Manual for more information.*



Head-Up 12" Display Video




EV Features & Settings Video



# Vehicle Settings - Infotainment System

To enter Vehicle Settings, press the **SETUP** key or the onscreen **SETUP** button, when the vehicle is at a standstill, Gear Shift in Park, and while the Power button is in the ON mode. Then select **VEHICLE** to enter the Vehicle Settings menu.



EV Features & Settings Video

## Type 1 Vehicle Settings\*:

### Driver Assistance:

 
- Driving Convenience
- Speed Limit
- Warning Method
- Driver Attention Warning
- Driving Safety
- Parking Safety

### Digital Keys:

- Smartphone Key
- NFC Card Key
- Digital Key Information

### Active Sound Design\*:

- Largest, Moderate, Smallest, Change/Off

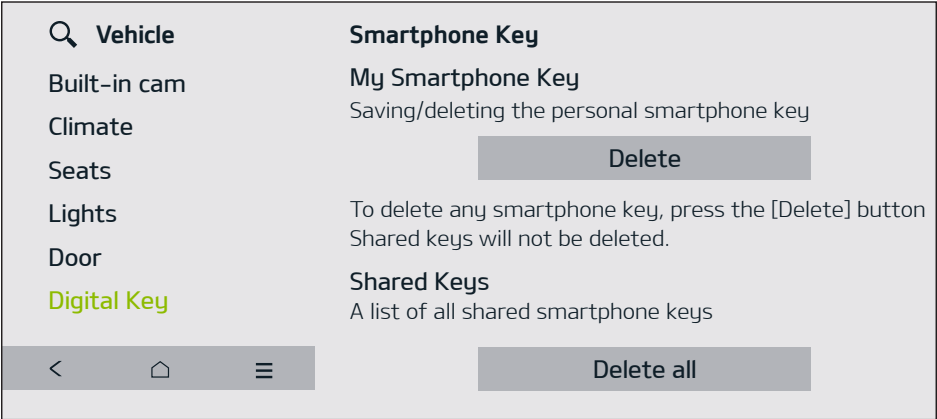

Screen illustration is for demonstration purposes only.

[Continued on next page](#)

These illustrations are for demonstration purposes only. Some messages may appear differently. See your Owner’s Manual for more information.

\*IF EQUIPPED





## Vehicle Settings - Infotainment System

[\*Continued from previous page\*](#)

### Drive Mode:

- MY DRIVE MODE
- Brake Mode
- Driving Mode Change Alert
- Climate Control ECO Mode

### Climate:

- Recirculate Air
- Automatic Ventilation
- Defog/Defrost Options
- Climate Features

### Seats:

- Seating Easy Access
- Seat Position Change Alert
- Smart Support
- Ergo-motion Seat

### Lights:

- Ambient Lighting
- One Touch Turn Signal
- Welcome Mirror/Light
- Headlight Delay
- Lighting Patterns
- High Beam Assist
- Interior Lights always on

### Door:

- Automatically Lock
- Automatically Unlock
- Approach Unlock
- 2 Press Unlock
- Power Liftgate
- Power Liftgate Opening Speed
- Power Liftgate Opening Height
- Smart Liftgate
- Remote Window Control

### Convenience:

- Rear Occupant Alert\*
- Service Interval
- Wireless Charging System for Mobile Devices
- Auto Rear Wiper (in R)

*Driving while distracted is dangerous and should be avoided. Do not attempt to change vehicle system settings while driving. Actual vehicle settings may vary by model. For more information, refer to the Car Infotainment System Quick Reference Guide.*



## Power Button<sup>†10</sup>

### To start the vehicle:

1. Depress the brake pedal
2. Press the POWER button **A** while Gear Shift is in Park or Neutral **B**



 
**EV Power & Gear Shift Button Video**

To turn the vehicle power OFF, press the POWER button.

To use the POWER button, you must have the Smart Key fob on your person.

### Power Button positions:

- **OFF** - The vehicle is off
- **ACC (Accessory)** - The vehicle is in accessory position. Limited functions are available
- **ON** - Some vehicle functions are on. Warning lights can be checked
- **START/RUN** - The READY indicator will illuminate and the vehicle is ready to drive

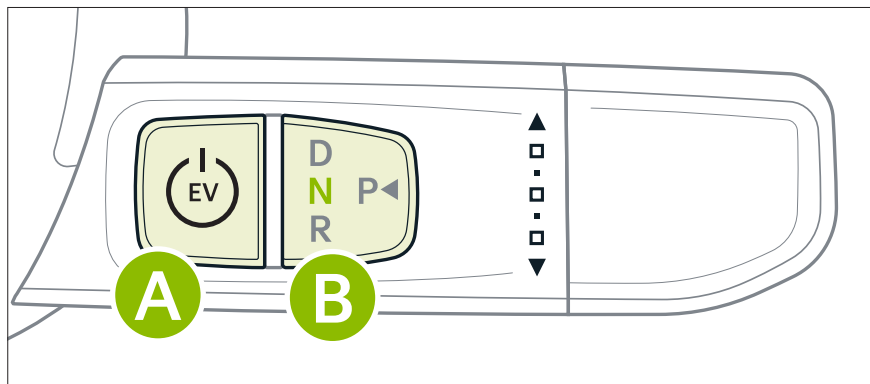

*(Buttons located on left side of Steering Wheel.  
Button configuration may vary)*

[Continued on next page](#)

*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.*

*Driving while distracted is dangerous and should be avoided. Do not attempt to change vehicle system settings while driving.*

*For more information, refer to section 5 in the Owner's Manual.*



# Power Button<sup>†10</sup>

[Continued from previous page](#)

### QUICK TIPS

- To use electrical accessories:
  - **ACC position**
    - When in the OFF position and without depressing the brake pedal, press the POWER button once
  - **ON position**
    - When already in the ACC position and without depressing the brake pedal, press the POWER button again
    - When in the OFF position (not illuminated) and without depressing the brake pedal, press the POWER button twice

### REMINDERS:

- **In an emergency situation while the vehicle is in motion, you are able to turn the vehicle off and to the ACC position by pressing the POWER button for more than 2 seconds or 3 times consecutively within 3 seconds**
- If the battery is weak or the smart key is not working properly, check that the shift lever is in the P (Park) position. Place the Smart Key on the key recognition area located on the center console, and then press the Power button for about 10 seconds in the ACC state. With the vehicle in the off position, restart the vehicle
- Do not turn the vehicle off by pushing the POWER button while the vehicle is in motion. If the vehicle has been turned off, the power brake and power steering system cannot operate
- With the vehicle off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control

*Refer to section 5 in the Owner's Manual for more information.*

 


## Charging Connector - Auto/Lock Mode

The Charging Connector can be set to be locked or unlocked while in the charging inlet and charging. To select the locking mode, go to Vehicle Settings in the Infotainment System. Press the **SETUP** key on the Infotainment System or the **SETUP** button on the screen. Select **VEHICLE**, then ECO VEHICLE. Select CHARGING CONNECTOR LOCK.




**EV Charging,  
Charger Door,  
Lock Release, Instant  
Charging Video**

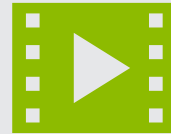


**EV Charging  
Settings Video**

 **Unlock charging connector in emergency** - If the charging cable does not detach due to battery discharge and failure of the electric wires, open the hood **A** and slightly pull the emergency release hatch as shown below **B**. The charging connector will then unlock.

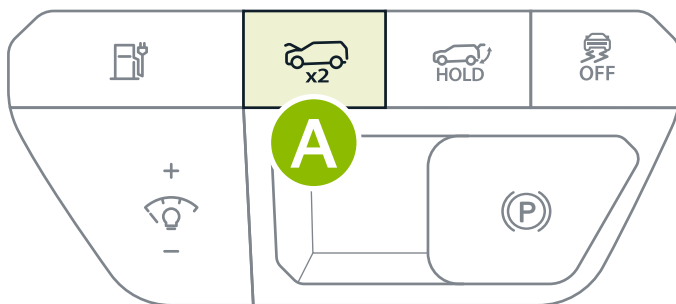

 (Button located on driver's panel, left of the steering wheel.)

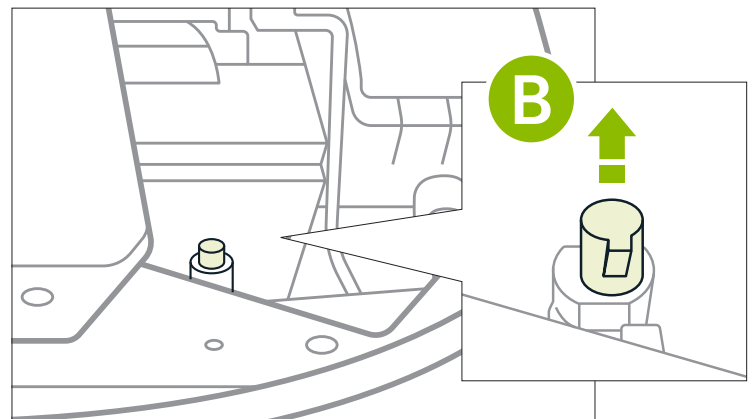

(Button located on right side of hood compartment)

### QUICK TIPS

- If in lock mode & the doors are unlocked, the charging connector unlocks. If the charging cable is not disconnected within 15 seconds, the connector will automatically lock again
- If the charging connector is unlocked but all the doors are locked, the connector will automatically lock
- If charging does not work, disconnect the connector and try charging again

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

 


## Scheduled Charging


Charging times can be set through the Infotainment System EV Settings. Select EV, AC CHARGER then SCHEDULED CHARGING. You can also use the Scheduled Charging\* feature on the Kia Connect app.

The Kia Connect<sup>†1</sup> app can help you find the nearest charging station, and also displays charging status and Scheduled Charging information. On your smartphone, go to an app store or marketplace to download the Kia Connect app.


**Deactivate Scheduled Charging** - Press and hold the Charging button **A** for 2 seconds to disable the scheduled charging feature when immediate charging is required. Scheduled charging can also be deactivated in the Vehicle Settings in the Infotainment System or Kia Connect<sup>†2</sup> app.

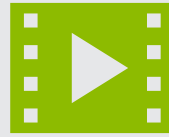

 **EV Charging,  
Charger Door,  
Lock Release, Instant  
Charging Video**

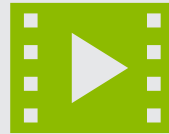

**EV Charging  
Settings Video**

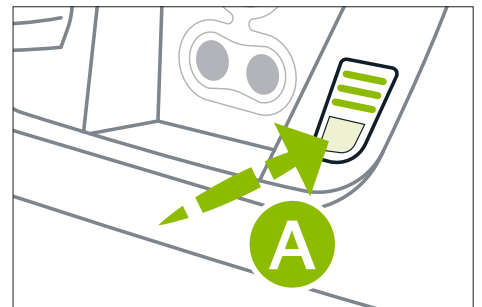 

*(Button located inside charge port panel.  
Button configuration may vary)*

### QUICK TIP

- When you press the Deactivate Scheduled Charging button the reserved charging setting will temporarily disable, and start immediate charging mode. If you need to completely deactivate the scheduled charge setting, change the setting in the Infotainment System's Vehicle Settings or the Kia Connect smartphone app.

### REMINDERS:

- When Scheduled Charging is set and the charger is plugged in, charging of the electric vehicle will not begin until the time and date set
- For more detail and/or subsequent steps in charging your vehicle, including safety precautions that should be taken, see section 1 in the Owner's Manual
- Scheduled charging may not be available at public chargers

*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.*



## Charging Your EV

### AC Charging or “Normal” / Level 2 Charging

An AC Charger or Level 2 Charger, 240-volt/50-amp, is the recommended charging system for your EV. This type of charger uses 240 volts of electricity and takes approximately 7-9 hours for a full charge, depending on the battery type - standard or extended. This charger may be able to be installed at your home by a qualified electrician or can be found at a public charging station.



**EV Charging Settings Video**



**EV Charging - Voice Notifications Video**

#### REMINDER:

- The shape of the charger and how to use the charger may be different for each manufacturer. Please see section 1 in the Owner’s Manual for more information.

### DC Charging or “Fast” / “Ultrafast” / Level 3 Charging

A DC Charger or “Fast” / “Ultrafast” / Level 3 Charger is usually found at public charging stations. When the vehicle battery is at about 10% charge, the “Fast” DC Charger (50 kW) may charge the EV to about 80% in approximately 63 minutes. The “Ultrafast” DC Charger (350kW) may charge the EV to 80% in approximately 20 minutes.

#### REMINDER:

- Kia does not recommend primarily charging with a DC charger because it can reduce the lifespan of the battery.

#### QUICK TIP

- An AC Charger or Level 2 Charger, 240-volt/50-amp, is recommended for regular charging of the vehicle.

#### REMINDER:

- For more detail and/or subsequent steps in charging your vehicle, including safety precautions that should be taken, please see section 1 in the Owner’s Manual.


[\*Continued on next page\*](#)

 


## Charging Your EV


[Continued from previous page](#)

### To charge your EV:


- Press the “P” button **A** on the Gear Shift to place the transmission in Park. Engage the parking brake by pulling up the Electronic Parking Brake (EPB) button **B** and then power off the vehicle
- Ensure scheduled charging is not set on the Infotainment System or the Kia Access App. You can also press the Scheduled Charging Off button **C** near the charge port
- To open the charge port door, press the left edge of the charge port door **D** or press the Charging Door Open button **E** on the Driver’s Panel inside (the charging door can be opened when the vehicle is unlocked)
- Hold the charging connector handle and connect it to the vehicle’s charging inlet **F** by pushing the connector until you hear a clicking sound
- Charging begins automatically (ensure the charge indicator light  is illuminated red on your Instrument Cluster, indicating the vehicle is charging, and ensure scheduled charging is not set)

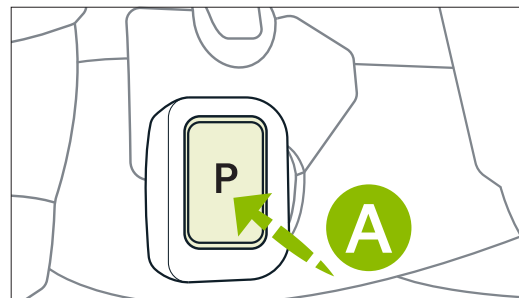


(Located on end of Gear Stalk)

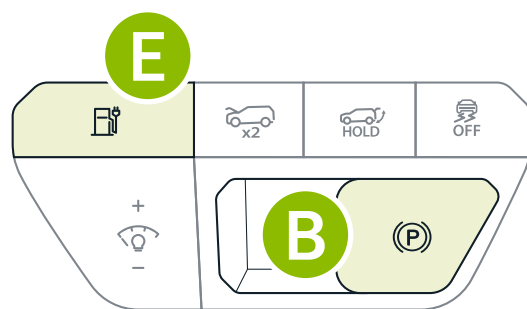 

 (Panel located on left side of Steering Wheel)

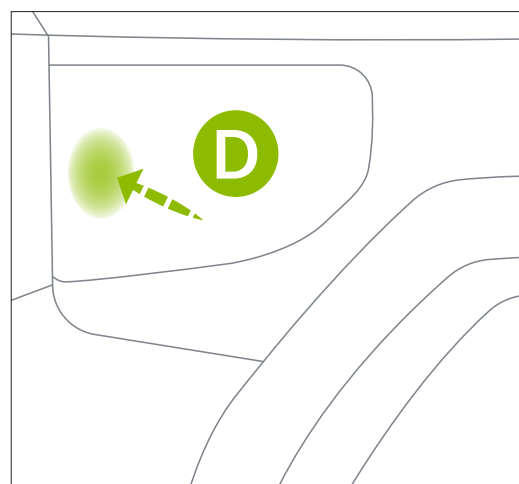

 (Charge door located at right rear of vehicle)

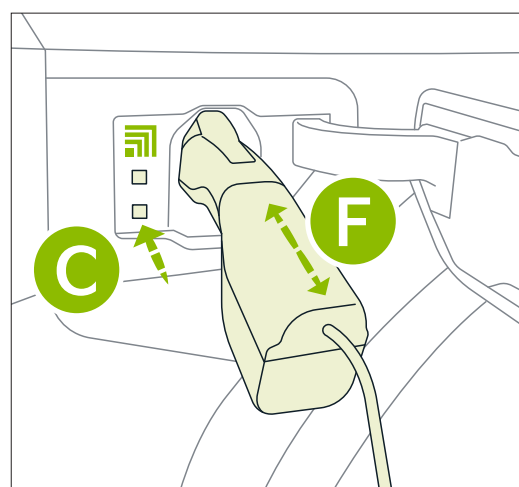

(Charge port located at right rear of vehicle)

[Continued on next page](#)

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.




## Charging Your EV

 [Continued from previous page](#)

### Checking the Charging Status

The charging status can be checked by viewing the charging status indicator **A** next to the charging inlet or on the dash panel, in the Instrument Cluster, or by using the Kia Access App. The lights will progressively become lit as the vehicle approaches a full charge.

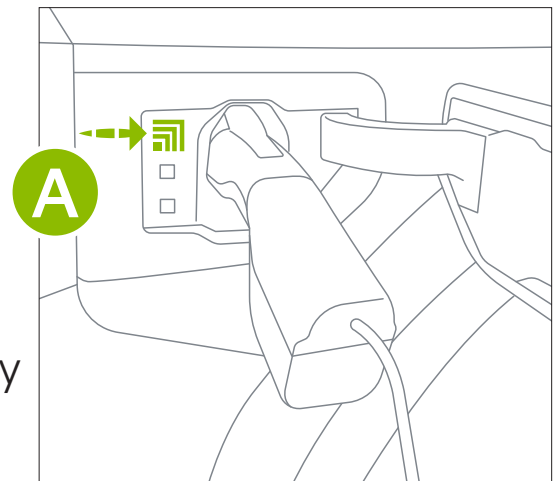

(Trickle / normal charge shown)

### REMINDER:

- For more detail and/or subsequent steps in charging your vehicle, including safety precautions that should be taken, please see section 1 of the Owner's Manual.

*Images are for illustrative purposes only and may not reflect actual feature or operation.*





## EV Charge Transfer / Vehicle to Load (V2L) / 125V Inverter\*

 
EV Charge Transfer / Vehicle to Load (V2L) allows you to use the vehicle's high voltage battery to power certain electrical devices like home appliances or other electronic devices. V2L can also be used to charge items like electric bikes or another electric vehicle.

If equipped, there are two ports in the interior and exterior. The interior port **A** is in the rear hatch and the other is the charging port for your EV. If your EV's high-voltage battery discharges to the limit set, the system will automatically stop supply to the ports. Set your EV's battery discharge limit in the Infotainment System's Settings. Press the EV button onscreen. Select VEHICLE TO LOAD (V2L), and EV CHARGE TRANSFER SETTINGS **B**.


**Interior Port** - The EV Power button needs to be on to operate the port. Use the Smart Key fob mechanical key to unlock the power outlet cover. Check the indicators on the port to ensure power is on.

**A**

Closed

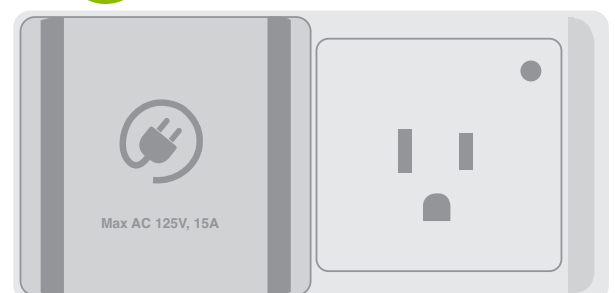

Open

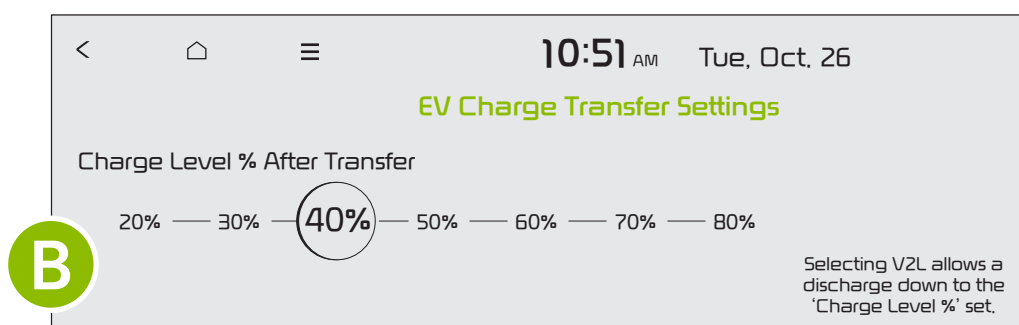 

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 1 in the Owner's Manual for more information.

[Continued on next page](#)




# EV Charge Transfer / Vehicle to Load (V2L) / 125V Inverter\*

 [Continued from previous page](#)

**Exterior Port** - Open the cover of the V2L connector and connect your appliance or electronic device. Connect the V2L connector to the charging inlet on the EV, and press the button on the connector.

### REMINDER:


- Maximum wattage is 1.9 kW, or 1,900 watts.

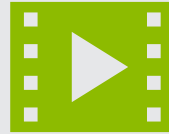

**EV Charge Transfer / Vehicle to Load (V2L) Video**



 **EV Utility Mode Video**

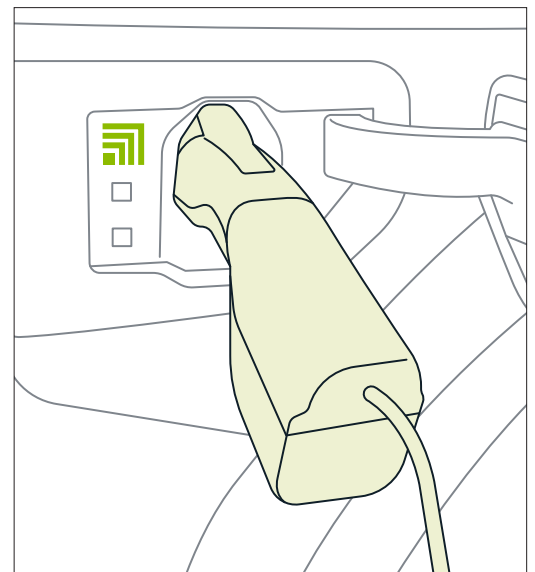

*(Trickle / normal charge shown)*

*Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 1 in the Owner's Manual for more information.*



## EV Mode - Infotainment System

 
EV Mode on the Infotainment System screen allows you to navigate several menus that include information on available range, energy information, next departure setting, charging and climate info, vehicle-to-load (V2L) setting, nearby charging stations and EV settings. To go to EV Mode, swipe the Home screen to see the menu buttons. Press the EV button to enter EV Mode.



**EV Features & Settings Video**



**EV Battery Conditioning Mode Video**

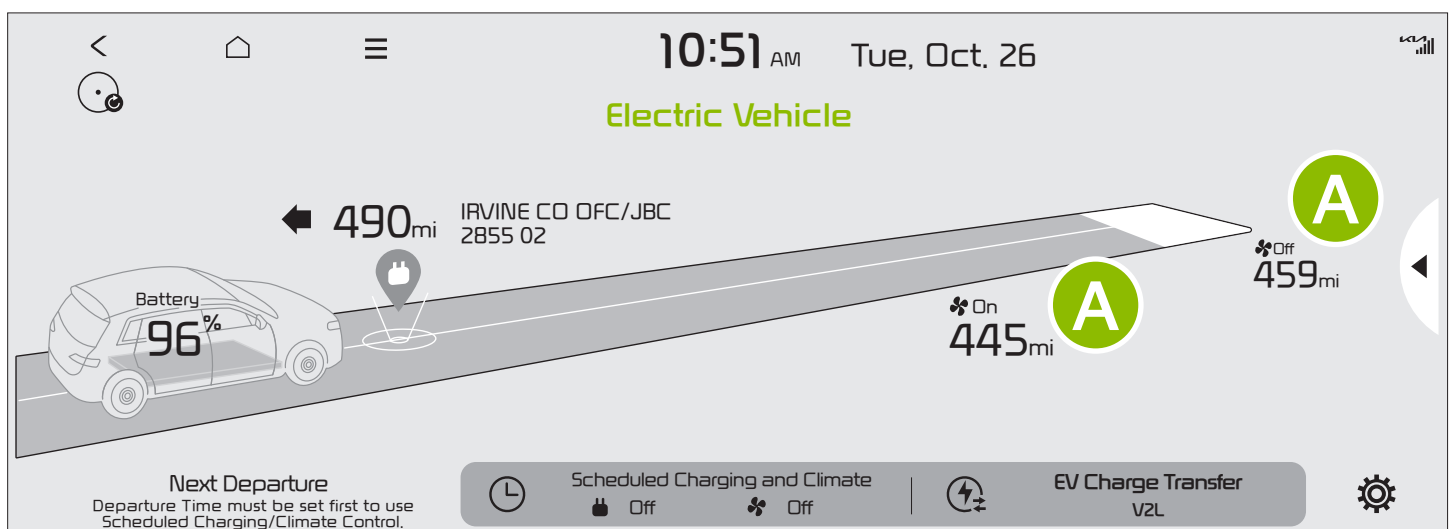

**A Available Range** - Displays the estimated available driving distance according to the vehicle's current location and charge amount. The first distance is with the Climate Control on. The second is with the Climate Control off.

The estimated range is based on a number of factors and assumes optimal driving conditions and efficient driving habits. Actual range will vary with options, driving conditions, driving habits, vehicle maintenance, charging practice, battery age, weather, temperature and your vehicle's condition. Battery capacity will decrease with time and use. For more information on range, please see [www.fueleconomy.gov](http://www.fueleconomy.gov)


[Continued on next page](#)

*Images are for illustrative purposes only and may not reflect actual feature or operation.*



## EV Mode - Infotainment System

 [Continued from previous page](#)

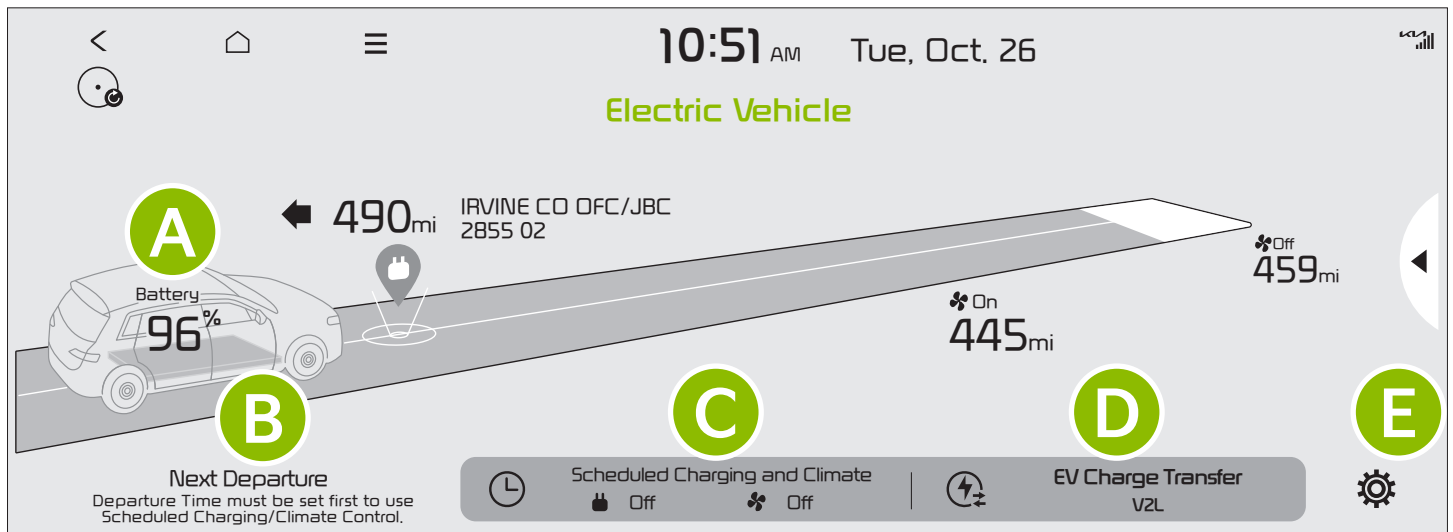

- A Energy Information** - Displays battery charge information and electrical power consumption
- B Next Departure** - Displays the date and time set for the next battery charge
- C Schedule Charging and Climate** - Allows the user to set the charging schedule and climate
- D Vehicle to Load (V2L) / EV Charge Transfer** - Displays the battery discharge limit when powering external equipment and devices
- E EV Settings** - Allows the user to change the Winter mode, warning and EV Route settings

See section 1 of the Owner's Manual or the Car Infotainment System's Quick Reference Guide for more detailed information on screens.

Illustration is for demonstration purposes only. Some items may appear different or vary in illustrations.



## Regenerative Braking

The regenerative braking system charges the battery when coasting or when you use the brakes to stop the vehicle. Use the paddle switches to adjust the regenerative braking level from 0 to 3 during decelerating or braking. The level will be displayed on the Instrument Cluster **A**.

 


**Regenerative Braking Video**

- Pull the left paddle switch **B** to increase regenerative braking and deceleration
- Pull the right paddle switch **C** to decrease regenerative braking and deceleration

The paddle switches do not operate when:

- Both paddle switches are pulled at the same time
- The vehicle is decelerating by depressing the brake pedal
- Cruise Control or Smart Cruise Control (SCC) is active

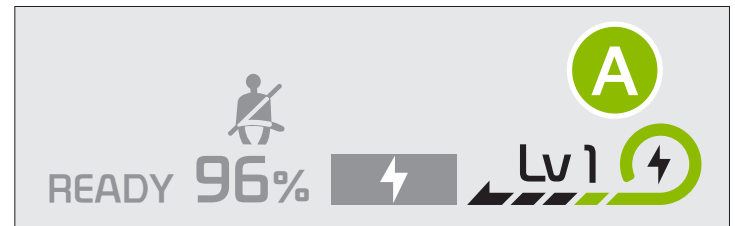

(Indicator on lower left corner of Instrument display)



[Continued on next page](#)

*For more information on regenerative braking, i-Pedal driving or the Smart Regeneration System, please refer to section 6 in the Owner's Manual.*

*Images are for illustrative purposes only and may not reflect actual feature or operation.*




## Regenerative Braking

 [Continued from previous page](#)


### i-Pedal

i-Pedal driving controls the vehicle speed by the accelerator pedal, both acceleration and deceleration. To activate i-Pedal:

- Pull the left side paddle switch **A** to Level 3 regenerative braking (see indicator on Instrument Cluster)
- Then pull the left side paddle switch **A** once again when the regenerative braking level is set to Level 3

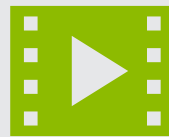

Regenerative Braking Video

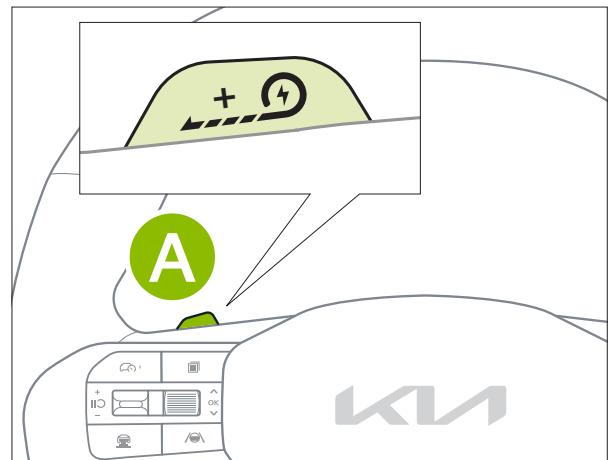 

The i-Pedal indicator symbol will be illuminated on the Instrument Cluster.

### QUICK TIP

- Each of the different Drive Modes allows the regenerative braking level to be set at the driver's preference.

### REMINDERS:

- The driver's seat belt must be fastened to operate i-Pedal driving
- i-Pedal will reset after each vehicle power cycle

[Continued on next page](#)

*Do not solely rely on i-pedal driving to stop the vehicle, as it may not be able to stop the vehicle depending on vehicle and road conditions. Always use pedal braking when necessary. Pay attention to the road condition ahead and apply the brake if necessary.*

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*For more information on regenerative braking, i-Pedal driving or the Smart Regeneration System, please refer to section 6 in the Owner's Manual.*



## Regenerative Braking

[Continued from previous page](#)

### One pedal driving

 
One-Pedal Driving increases the regenerative braking amount to above level 3 and may slow the vehicle down by pulling down the left switch.

- Pull and hold the left paddle switch **A** while coasting to activate One-Pedal Driving
- When the vehicle speed is above 2 mph, release the left paddle switch **A** for less than 0.5 seconds to return to the previously set level of regenerative braking
- When the vehicle speed is below 2 mph, One-Pedal Driving can stop the vehicle even though the left paddle switch is released


### REMINDER:

- The driver's seat belt must be fastened to operate one-pedal driving.

[Continued on next page](#)

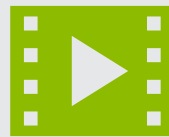

Regenerative Braking Video

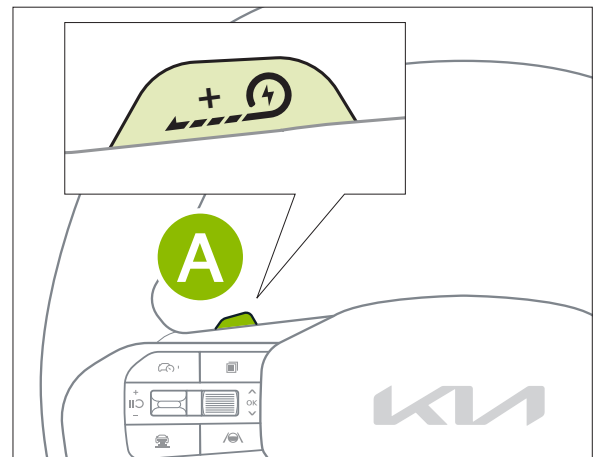 

*For more information on regenerative braking, i-Pedal driving or the Smart Regeneration System, please refer to section 6 in the Owner's Manual.*

*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.*

*Do not solely rely on one-pedal driving to stop the vehicle, as it may not be able to stop the vehicle depending on vehicle and road conditions. Always use pedal braking when necessary and pay attention to the road conditions ahead and apply the brake if necessary.*





## Regenerative Braking

[Continued from previous page](#)

### Smart Regeneration System

 
This system is designed to automatically adjust the regenerative braking level based on a vehicle being detected in front and road conditions.

- Activate Smart Regeneration in the Electric Vehicle Settings on the Infotainment System by pressing SETUP, VEHICLE and ECO VEHICLE, and then SMART REGENERATION. AUTO **A** will be displayed on the Instrument Cluster
- Pull and hold the right paddle switch **B** for more than 1 second to turn on/off the automatic change of the regenerative braking.


The minimum regenerative braking level can be adjusted when in AUTO mode by using the left and right paddle switches



Regenerative Braking Video

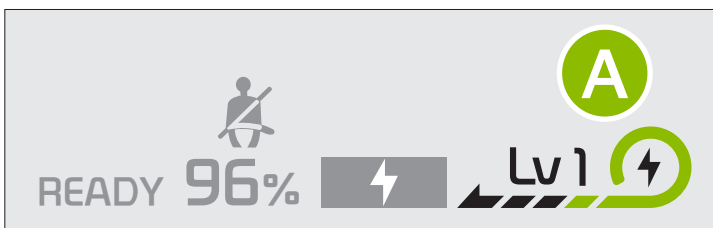

 (Indicator on lower left corner of Instrument display)

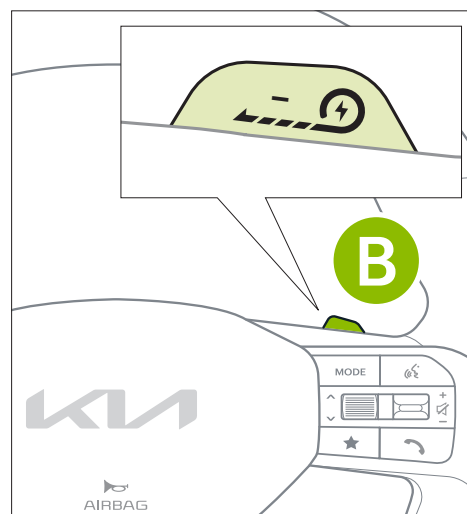

For more information on regenerative braking, i-Pedal driving or the Smart Regeneration System, please refer to section 6 in the Owner's Manual.

Smart Regeneration is a supplemental system for the driver's convenience. Do not solely rely on this system to stop the vehicle or avoid collisions. Always cautiously look ahead to prevent unexpected or sudden situations.

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.





## Forward Collision-Avoidance Assist 2 (FCA2)<sup>†4</sup>

Forward Collision-Avoidance Assist is designed to detect a vehicle, a powered two-wheeler, a pedestrian, or a cyclist ahead on the road and may warn the driver of a possible collision with a warning message **A** on the Instrument Cluster and a warning sound. If FCA detects an increased risk of collision, it may automatically apply the brakes to potentially reduce the effects of a possible collision **B**.

 
 
 
 
**Junction Turning function** **C** may help avoid a collision with an oncoming vehicle detected in an adjacent lane when turning left at a crossroad with the turn signal on by applying emergency braking.

**Junction Crossing function** **D** may help avoid a collision with oncoming vehicles detected on the left or right side when crossing an intersection by applying emergency braking.

**Direct Oncoming Response** function may reduce the vehicle speed and temporarily apply braking when FCA detects a vehicle is approaching directly in front.



**Forward Collision-Avoidance Assist 2 (FCA2) Video**

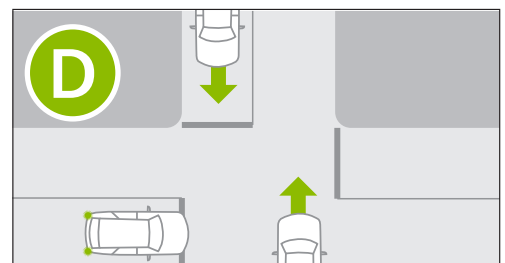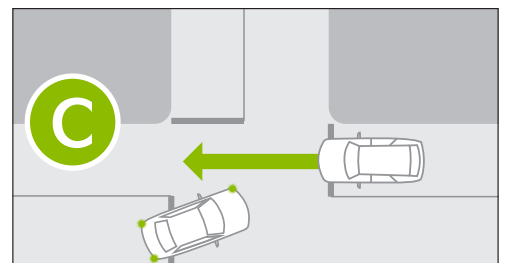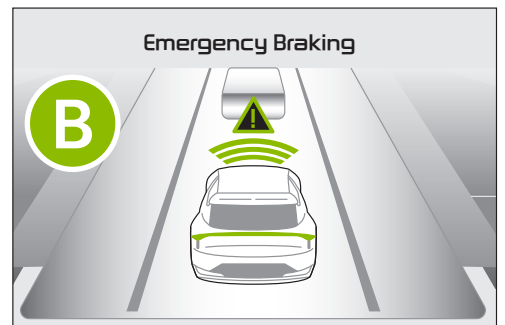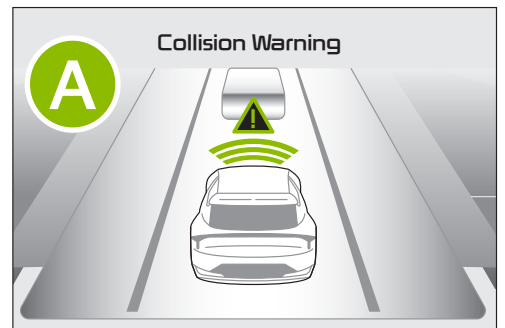

(Junction Crossing)

[Continued on next page](#)

Refer to the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



## Forward Collision-Avoidance Assist 2 (FCA2)<sup>†4</sup>

 
[Continued from previous page](#)

### Lane-Change Oncoming function **A**


may help avoid a possible collision with a detected oncoming vehicle when changing lanes by assisting the driver's steering.

**Lane-Change Side function **B**** may help avoid a possible collision with the vehicle detected ahead in the next lane when changing lanes by assisting the driver's steering.


**Evasive Steering Assist function **C**** may help avoid a possible collision with a vehicle, pedestrian or cyclist detected ahead in the same lane. When a risk of collision is detected, Evasive Steering Assist function will warn the driver and if the driver steers to avoid collision it may assist the driver's steering. If FCA detects a risk of collision with a pedestrian or cyclist, it may warn the driver and potentially assist the driver's steering.

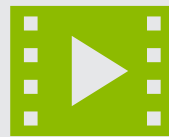

 
Forward Collision-Avoidance Assist 2 (FCA2) Video

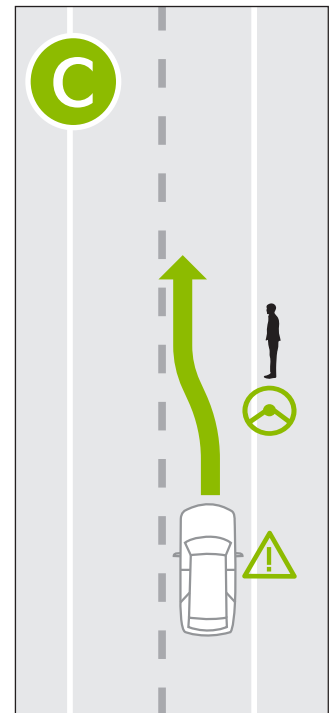

(Evasive Steering Assist)

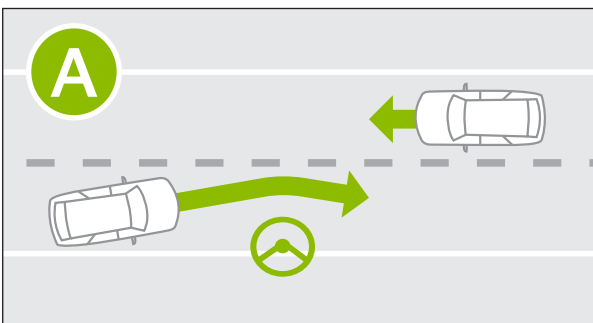 

(Lane Changing - Oncoming Traffic)

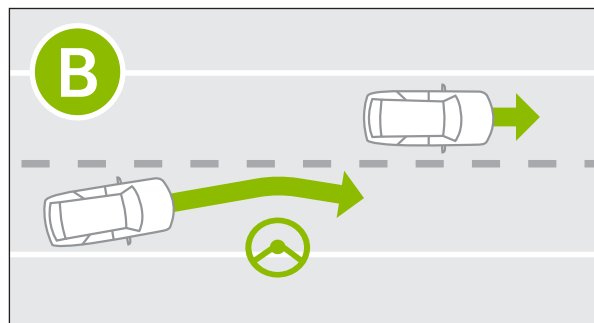 

(Lane Changing - Side)

### REMINDER:

- Once the risk factors are not detected, these functions will deactivate.

[Continued on next page](#)

Refer to the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



## Forward Collision-Avoidance Assist 2 (FCA2)<sup>†4</sup>

[Continued from previous page](#)

### FCA Settings:

- FCA features can be turned ON/OFF by going to the Vehicle Settings in the Infotainment System
- To access settings, press the **SETUP** button on the Infotainment System. Select the **VEHICLE** button to enter the Vehicle Settings. Select DRIVER ASSISTANCE, and in DRIVING SAFETY, scroll through the selections and press the button to toggle the features on or off
- **Forward Safety Warning Timing:** When in DRIVING SAFETY, select STANDARD or LATE. Use 'Standard' in normal driving conditions. If the Warning Timing seems sensitive, change it to 'Late'
- **Warning Methods:** To adjust the Warning Methods settings, go to Vehicle Settings, Driver Assistance, and under WARNING METHODS, you can adjust the Warning Volume, activate Haptic Warning and Driving Safety Priority



Forward Collision-Avoidance Assist 2 (FCA2) Video

### FCA will become active when the:

- Ignition is on or the Power button is ON
- Vehicle is traveling faster than 5 mph
- Electronic Stability Control (ESC) is ON

[Continued on next page](#)


Forward Collision-Avoidance Assist (FCA) is not a substitute for safe driving and may not detect all objects in front of the vehicle. Always drive safely and use caution. Actual User Settings steps may vary by model. Refer to section 7 in the Owner's Manual for more information.



# Forward Collision-Avoidance Assist 2 (FCA2)<sup>†4</sup>

[Continued from previous page](#)

### REMINDERS:

- FCA will be activated by default when the ignition is cycled ON, even when previous setting was OFF
- FCA may warn the driver if the vehicle ahead is decelerating to turn or to pass a speed bump
- When the FCA system is off, the yellow FCA warning indicator is on in the Instrument Cluster 
- Adjusting the Warning Methods will adjust settings for other driver assistance systems



**Forward Collision-Avoidance Assist 2 (FCA2) Video**

*Forward Collision-Avoidance Assist (FCA) is not a substitute for safe driving and may not detect all objects in front of the vehicle. Always drive safely and use caution. Actual User Settings steps may vary by model. Refer to section 7 in the Owner's Manual for more information.*



 
 
## Blind-spot Collision-Avoidance Assist (BCA)<sup>†4</sup>

BCA is designed to detect approaching vehicles in the driver's blind spot areas and warn the driver of a possible collision with a warning light and a warning sound. If a collision risk is detected when exiting a parallel space, BCA may assist with braking to help avoid a collision.



Blind-spot  
Collision-  
Avoidance Assist  
(BCA) Video

**Vehicle detection:** **A** If another vehicle is detected within the BCA warning boundary **A**, an indicator may illuminate on the outside Rearview mirrors **B**, on the Instrument Cluster and the head-up display.\*

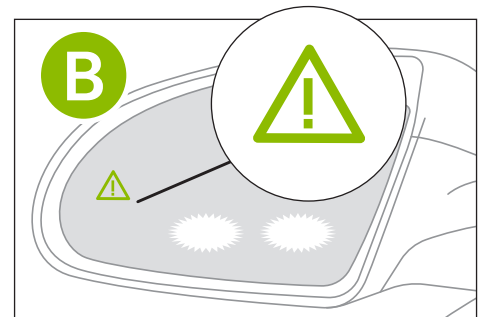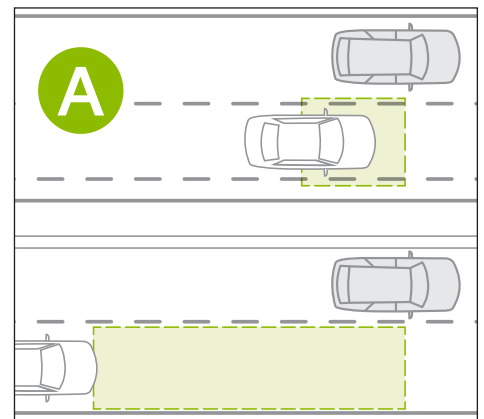

**Collision warning:** When the vehicle detection warning is on and the driver activates a turn signal, an indicator may flash on the outside rearview mirrors and the system may sound a warning, and the steering wheel may vibrate.\*

**Collision Warning Assist:** When you are driving forward out of a parking space, if BCA determines that there's a collision risk with an approaching vehicle in the blind spot, it may help avoid collision by applying the brake.

[Continued on next page](#)

*The images on this page are for illustrative purposes only and may not reflect actual feature or operation.*

*Refer to section 7 in the Owner's Manual for more information.*



# Blind-spot Collision-Avoidance Assist (BCA)<sup>†4</sup>

[Continued from previous page](#)

### BCA Settings:

- To enable BCA, press the **SETUP** button on the Infotainment System. Select the **VEHICLE** button to enter Vehicle Settings. Select DRIVER ASSISTANCE and then BLIND-SPOT SAFETY
- **Warning Methods:** To adjust the Warning Methods settings, go to Vehicle Settings, DRIVING SAFETY, and under WARNING METHODS, you can adjust the Warning Volume, activate Haptic Warning and Driving Safety Priority



Blind-spot  
Collision-  
Avoidance Assist  
(BCA) Video

### QUICK TIPS

- Adjusting the Warning Methods will adjust settings for other driver assistance systems
- Collision warning of BCA will activate when:
  - The system is turned on
  - Other vehicles are detected on the rear sides of the vehicle at speeds above 6mph
  - Vehicle speed is above approximately 25 mph

### REMINDERS:

- The BCA warning may sound when turning left into an intersection. Maintain a proper distance from oncoming vehicles
- BCA will not issue a warning if the vehicle speed is calculated to be 6 mph or more than the surrounding vehicles

*When engaged, BCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.*

*Refer to section 7 in the Owner's Manual for more information.*



## Lane Keeping Assist (LKA)\*†4

Lane Keeping Assist is designed to detect the lane markers on the road, and may assist the driver's steering to potentially help keep the vehicle in the lane. When turned on, the Instrument Cluster indicator will initially illuminate gray. It will remain white when the vehicle is traveling slower than 40 mph or when LKA does not detect the lane markers. When LKA detects the lane markers and can assist the steering, the Lane Safety icon will illuminate green.



Lane Keeping Assist (LKA) Video



(Buttons located on left side of Steering Wheel)

If LKA detects the vehicle moves toward outside of the driving lane, it may provide steering assist to prevent the vehicle from moving outside driving lane.

If the vehicle continues to move outside of the lane and crossing lane marking, LKA may give an audible or haptic warning according to your selection and display a Lane Departure Warning on the Instrument Cluster.

**To turn LKA on or off, press and hold the Lane Safety button  **A**.**

[\*Continued on next page\*](#)

*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.*

*Lane Keeping Assist is not a substitute for safe driving and may not always alert the driver if the vehicle is driven outside of its lane. Always drive safely and use caution.*






# Lane Keeping Assist (LKA)\*†4

[Continued from previous page](#)


## LKA Settings:

To enable LKA, press the **SETUP** button on the Infotainment System. Select the **VEHICLE** button to enter the Vehicle Settings. Select DRIVER ASSISTANCE then LANE SAFETY.

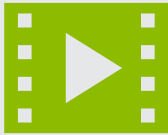

Lane Keeping Assist (LKA) Video

 - **Warning Methods:** To adjust the Warning Methods settings, go to VEHICLE SETTINGS, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust the Warning Volume, Lane Safety Audible Warning Off and Driving Safety Priority
- The images and colors in the Instrument Cluster may differ depending on the cluster type or theme selected from the settings menu

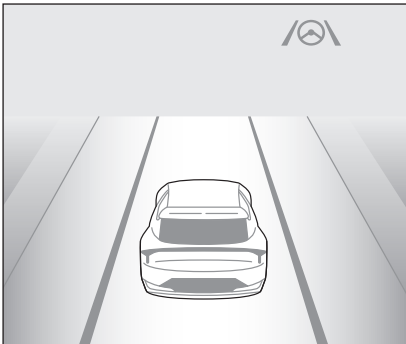

When the front-view camera does not detect the lane markers, they are displayed gray



When the front-view camera detects the lane markers, they are displayed white



When the front-view camera detects the vehicle moving outside of the lane being traveled in, a yellow marker will illuminate either on the left or right lane (shown in both images above)

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.

†LEGAL DISCLAIMERS ON [PAGE 152](#) | \*IF EQUIPPED





# Lane Keeping Assist (LKA)<sup>\*†4</sup>

[Continued from previous page](#)

LKA will operate under the following conditions:

- The vehicle speed exceeds approximately 40-120 mph
- LKA detects the lane the vehicle is traveling in
- The vehicle is between the lane markers.

### QUICK TIP

- Adjusting the Warning Methods will adjust settings for other driver assistance systems.

**REMINDER:** LKA will not issue a warning if the turn signals or hazard lights are activated.

*Images are for illustrative purposes only and may not reflect actual feature or operation.*



 
## Blind-spot View Monitor (BVM)\*†4

Blind-Spot View Monitor uses the wide-side view cameras to display the rear blind spot areas of the vehicle on the Instrument Cluster **A**, when the turn signal is activated, to help with lane changes.


To turn BVM on press the **SETUP** button on the Infotainment System. Select **VEHICLE**, then DRIVER ASSISTANCE, and under DRIVING SAFETY, select BLIND SPOT VIEW MONITOR.

When operating the turn signal **B**, BVM displays video of the blind-spot view for the direction indicated.


BVM will not operate when the Power button is OFF, a turn signal is deactivated or another warning screen comes up on the Instrument Cluster.

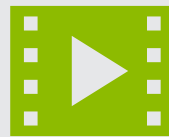

### Blind-spot View Monitor (BVM) Video

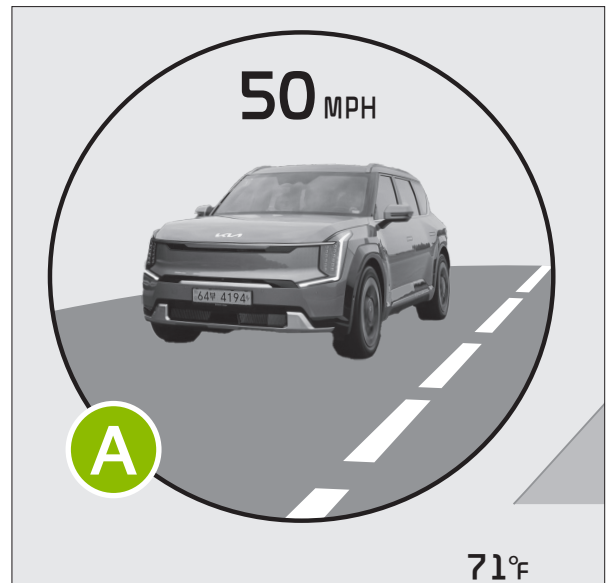 

 (LCD display showing right/left side of vehicle)

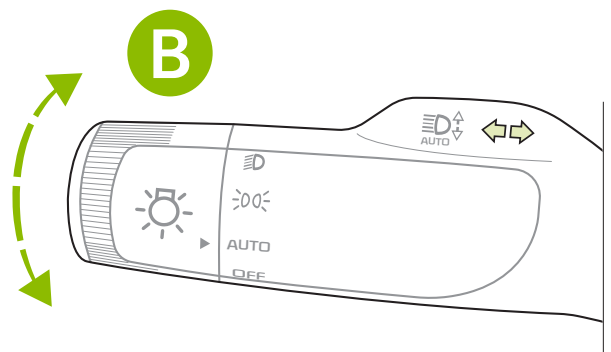

Images are for illustrative purposes only and may not reflect actual feature or operation. See section 7 in the Owner's Manual for more information



## Safe Exit Assist (SEA)<sup>\*†4</sup>

While the vehicle is stopped, and if Safe Exit Assist detects a vehicle approaching the rear corner of the vehicle and the driver or passenger opens a door, SEA may warn the driver with a message and sound a warning to help avoid a possible collision **A**.

In addition, when the Electronic Child Safety Lock button is ON **B** or in the LOCK position and the system detects a vehicle approaching the blind spot area, the Electronic Child Safety Lock button will not unlock the rear doors, even if the driver presses the button to open the doors.

 
To turn on SEA, press the **SETUP** button on the Infotainment System. Select **VEHICLE**, then select DRIVER ASSISTANCE, and under DRIVING SAFETY, select SAFE EXIT.

**Warning Methods:** To adjust the Warning Volume settings, go to VEHICLE SETTINGS, DRIVER ASSISTANCE and under WARNING METHODS, you can adjust the Warning Volume and Driving Safety Priority.



**REMINDER:** Adjusting the Warning Methods will adjust settings for other driver assistance systems.

*When engaged, these systems are not substitutes for safe practices and may not always warn occupants of unsafe conditions or approaching vehicles or objects. Always drive safely and use caution.*

*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. See section 7 in the Owner's Manual for more information.*

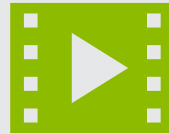

Safe Exit Assist (SEA) Video

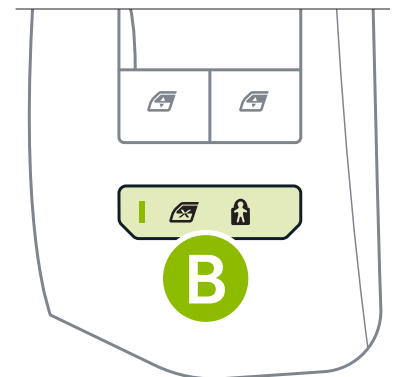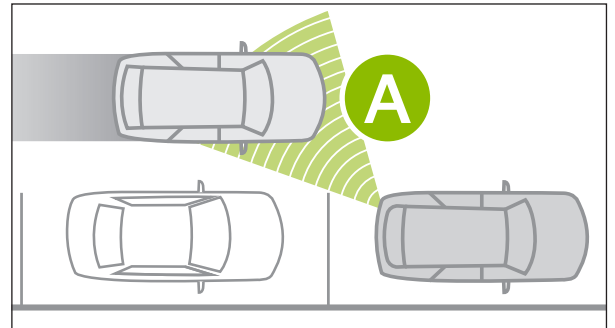  

(Button on driver's door panel)




## Driver Attention Warning (DAW)\*†5

 Driver Attention Warning is designed to alert the driver if it detects inattentive driving patterns and, in certain situations, can give a warning signal to take a break. When the driver's attention level has become low, the message "Consider taking a break" appears on the LCD **A** and a warning sounds to suggest the driver take a break.


### DAW Settings:

- To turn DAW on/off, with the ignition on, press the **SETUP** button on the Infotainment System, **VEHICLE**, DRIVER ASSISTANCE, and DRIVER ATTENTION WARNING

**REMINDER:** When activated, DAW does not display "Consider taking a break" message when the total trip driving time is less than 4 minutes.

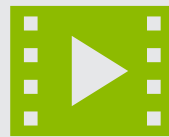

Driver Attention Warning (DAW) Video

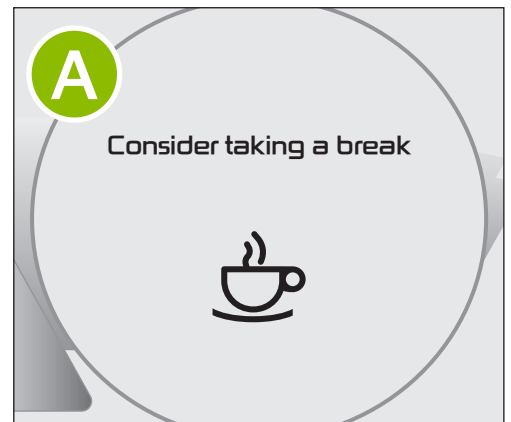 


*When engaged, Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.*

*Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 7 in the Owner's Manual for more information.*




## Leading Vehicle Departure Alert (LVDA)<sup>†4</sup>

 Leading Vehicle Departure Alert (LVDA) is designed to alert the driver if the LVDA system detects the vehicle directly in front start to move or depart from a stop. When LVDA is on, your vehicle is stopped and detects that the leading vehicle is driving away, LVDA sounds an alert to let you know you can start driving. If no action is taken after the vehicle in front drives away, then a message **A** will appear on the Instrument Cluster.

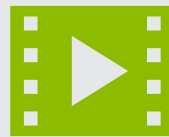

 Leading Vehicle Departure Alert (LVDA) Video

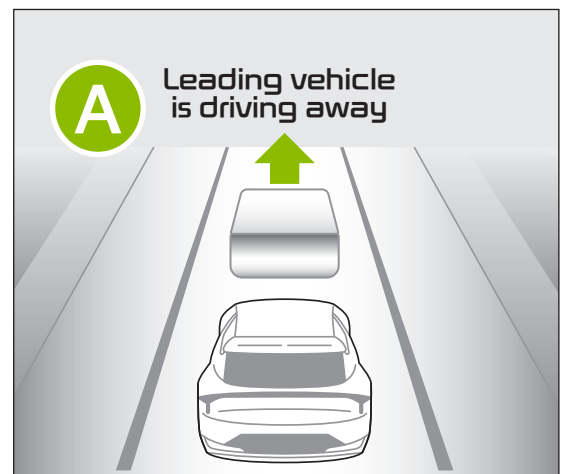

### LVDA Settings:

- To enable LVDA, press the **SETUP** button on the Infotainment System, VEHICLE, DRIVER ASSISTANCE, DRIVER ATTENTION WARNING and then LEADING VEHICLE DEPARTURE ALERT


**REMINDER:** Always check the front of the vehicle and road conditions before departure.


*The Leading Vehicle Departure Alert system is not a substitute for safe and proper driving. Always drive safely and use caution.*

*Images are for illustrative purposes only and may not reflect actual feature or operation.*




## Lane Following Assist 2 (LFA2)\*†4

 Lane Following Assist 2 (LFA2) is designed to assist the driver in maintaining the vehicle in the center of the lane **A** by monitoring the detected lane markings ahead and adjusting the steering. The Instrument Cluster indicator will initially illuminate gray  when turned ON. It will remain GRAY when LFA2 does not detect the lane markers. When LFA2 detects the lane markers and can assist the steering, the LFA2 icon will illuminate green **B**.

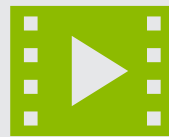

Lane Following Assist 2 (LFA2) Video

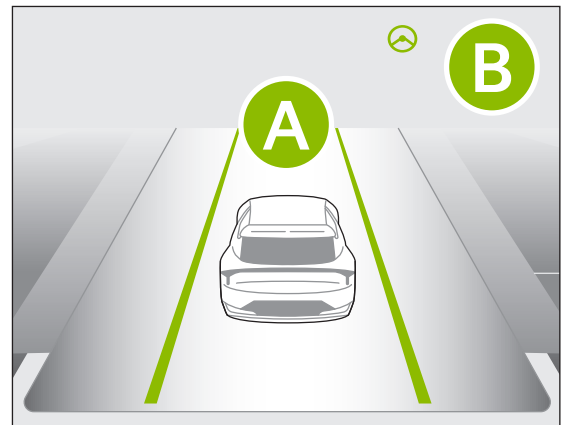 

**Hands-off Warning** - If the driver takes their hands off the Steering Wheel for several seconds, a warning message will appear on the Instrument Cluster, and an audible warning will sound. If both hands are not detected on the Steering Wheel, LFA2 will cancel.

LFA2 will operate when these conditions are met:

- LFA2 detects the lane markers the vehicle is traveling in
- The vehicle is traveling slower than 110 mph

[\*Continued on next page\*](#)

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*LFA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.*

*Actual Vehicle Settings steps may vary by model. See section 7 in the Owner's Manual for more detailed information, limitations and conditions.*

*When engaged, LFA is not a substitute for safe and proper driving. Always drive safely and use caution. LFA may not always alert the driver when the vehicle is approaching another vehicle.*



# Lane Following Assist 2 (LFA2)\*†4

[Continued from previous page](#)

## LFA Settings:

- Press the Lane Safety button **A** to turn on Lane Following Assist
- **Warning Methods:** To adjust the Warning Volume settings, go to VEHICLE SETTINGS, DRIVER ASSISTANCE and under WARNING METHODS, you can adjust the Warning Volume and Driving Safety Priority

**REMINDER:** Adjusting the Warning Methods will adjust settings for other driver assistance systems.



Lane Following Assist 2 (LFA2) Video



(Buttons located on left side of Steering Wheel)

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

LFA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

Actual Vehicle Settings steps may vary by model. See section 7 in the Owner’s Manual for more detailed information, limitations and conditions.

When engaged, LFA is not a substitute for safe and proper driving. Always drive safely and use caution. LFA may not always alert the driver when the vehicle is approaching another vehicle.

†LEGAL DISCLAIMERS ON [PAGE 152](#) | \*IF EQUIPPED



 


## Smart Cruise Control (SCC)<sup>†4</sup>


Smart Cruise Control is designed to maintain a predetermined distance from vehicles detected ahead by automatically adjusting the driving speed in certain circumstances. When traffic is detected, the vehicle is designed to automatically slow to maintain a set distance from traffic without depressing the accelerator or brake pedal. If SCC detects that the driver is attempting to overtake a vehicle in front, SCC may help by assisting acceleration.



Smart Cruise Control (SCC) with Overtaking Acceleration Assist Video

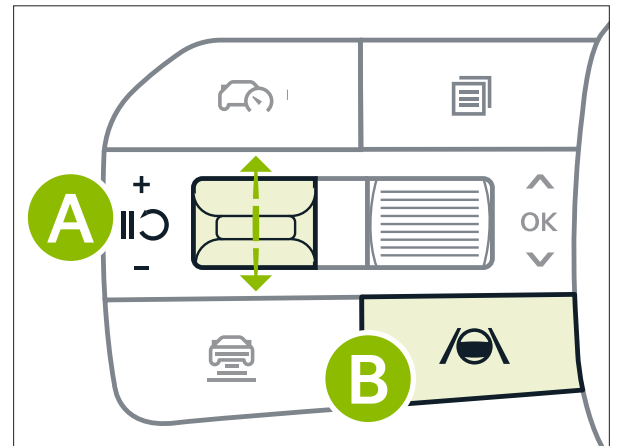

(Buttons located on left side of Steering Wheel)

When SCC is on and activated, the vehicle distance set, and the system detects a vehicle slowing or stopping, SCC may bring the vehicle to a complete stop. When the vehicle ahead starts to move forward, SCC re-engages. If the vehicle ahead stops for more than 3 seconds, the accelerator pedal or the  button **A** must be pressed to start moving the vehicle.

### To turn on, set/adjust the SCC speed:

- Press the Driving Assist button **B** to turn the system ON & set to the current vehicle speed (One-Touch Set). The cruise indicator will illuminate on the Instrument Cluster. SCC may decrease the speed to maintain the distance with the vehicle in front

[Continued on next page](#)

*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.*

*When engaged, SCC is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.*

*See section 7 in the Owner's Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation.*







 
## Smart Cruise Control (SCC)<sup>†4</sup>

[Continued from previous page](#)

### SCC Operation:

- **Increase speed:** Press the  switch **A** up to increase the set vehicle speed
- **Decrease speed:** Press the  switch **A** down to decrease the set vehicle speed
- The indicator light, set speed and vehicle distance will illuminate on the Instrument Panel screen **B**
- When SCC is canceled, the icon will illuminate gray **C**

**To set the vehicle distance:** Press the Vehicle Distance button **D** on the steering wheel. The image on the Instrument Cluster **B** will change when scrolling through the settings. Each time the button is pressed, the vehicle distance changes **E**.

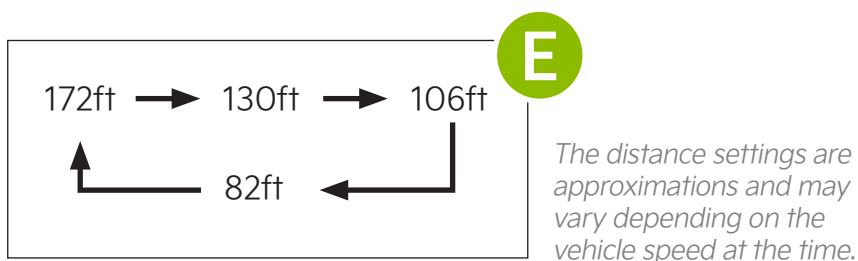


Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

When engaged, SCC is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.



See section 7 in the Owner's Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation.



 Smart Cruise Control (SCC) with Overtaking Acceleration Assist Video

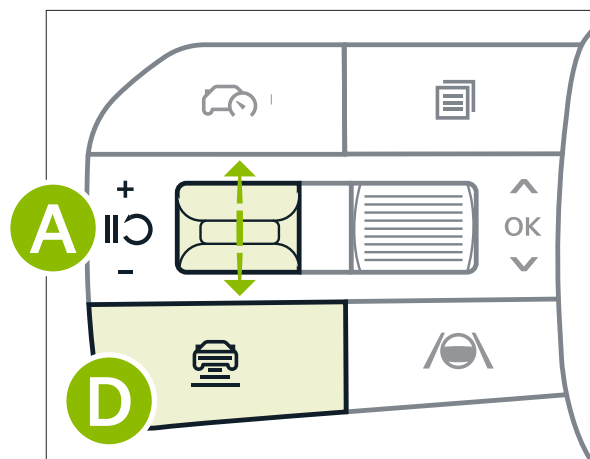

  (Buttons located on left side of Steering Wheel)

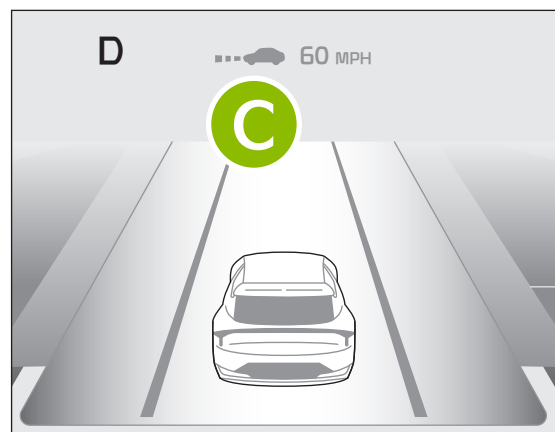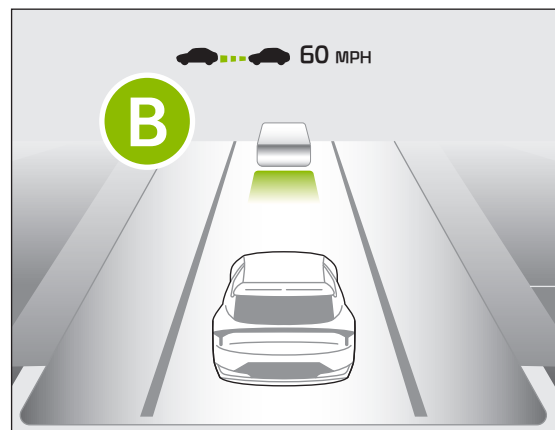

(Set speed and selected distance level are displayed on the LCD)

[Continued on next page](#)



## Smart Cruise Control (SCC)<sup>†4</sup>

[Continued from previous page](#)

 
### To pause or resume SCC operation:

Press the pause/resume  switch **A**.


The SCC indicator on the Instrument Panel will turn OFF.

**To turn SCC OFF:** Press the Driving Assist button **B**. The SCC indicator on the Instrument Panel will turn GRAY.

**To adjust the sensitivity of the SCC system:** Go to Vehicle Settings in the Infotainment System by pressing the **SETUP** button. Go to DRIVING CONVENIENCE and SMART CRUISE CONTROL. Here, set the distance, acceleration and reaction speed or select BASED ON DRIVING STYLE.

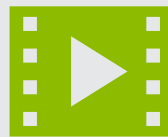

 Smart Cruise Control (SCC) with Overtaking Acceleration Assist Video

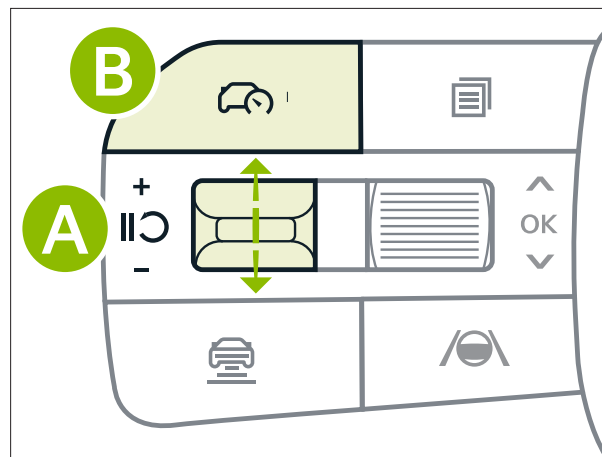

(Buttons located on left side of Steering Wheel)

### QUICK TIPS

- The speed setting for SCC can be adjusted under the following conditions:
  - When following a vehicle, there is no minimum speed requirement
  - If your vehicle speed is less than 20 mph, when SCC is turned on and activated, the vehicle speed will be set to 20 mph
  - Always keep the front-view camera and front radar sensor areas clean and free from debris to maintain optimal performance

[Continued on next page](#)

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

When engaged, SCC is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.

See section 7 in the Owner's Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation.



# Smart Cruise Control (SCC)<sup>†4</sup>

[Continued from previous page](#)

### REMINDERS:

- The Smart Cruise Control system will not activate until the brake pedal has been depressed at least once after the ignition is ON or engine starts
- SCC is canceled when the driver's door is opened, gear shift is changed out of D (Drive), EPB is activated and various other conditions. See the Owner's Manual for other conditions
- If SCC is left on, it can be activated inadvertently. Keep the system off when not in use to avoid setting a speed that the driver is not aware of
- SCC may decelerate if it detects a surrounding vehicle moving into your lane
- SCC may not recognize unexpected and sudden situations or complex driving situations, so always pay attention to driving conditions and control your vehicle speed

*When engaged, SCC is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.*

*See section 6 in the Owner's Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation. Button configuration may vary.*



## Navigation-based Smart Cruise Control (NSCC)\*†4,8

 
While Smart Cruise Control is operating, Navigation-based Smart Cruise Control may automatically adjust vehicle speed when driving on certain highways by using road information from the navigation function.

To turn on NSCC, go to the Vehicle Settings in the Infotainment System, select Driver Assistance, Driving Convenience, and Highway Auto Speed Change. When SCC is on and operating, the vehicle is driving on limited/controlled access highways and NSCC is turned on, then NSCC is enabled and the NAV icon **A** will illuminate green on the Instrument Cluster.

When NSCC detects a curve ahead, and NSCC activates and reduces the vehicle speed, the NAV icon **A** will blink. When the vehicle passes the curved road, the vehicle may return to its previously set SCC speed.

If Smart Cruise Control is temporarily unavailable due to a pause or rerouting, a gray NAV indicator **A** will appear on the cluster. When the accelerator pedal is pressed, a white (NAV) indicator will blink on the cluster.

**REMINDER:** NSCC is only available on certain controlled access roads and highways.

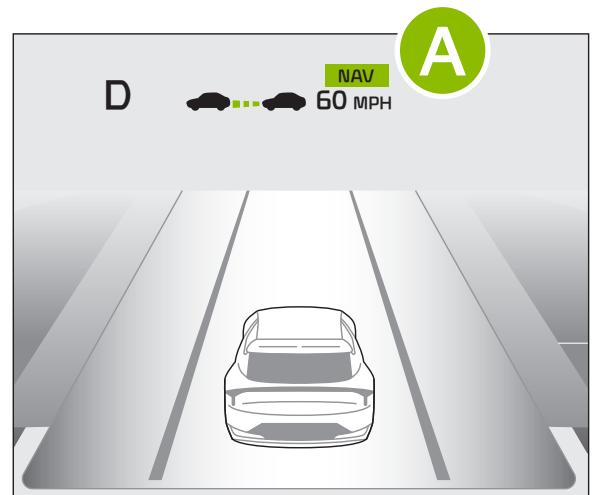

(Display on LCD screen)

See section 6 in the Owner's Manual for more information.

For more setting information, refer to the Car Infotainment System Quick Reference Guide.

NSCC and Cruise Control are supplemental systems and are not substitutes for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.

Images are for illustrative purposes only and may not reflect actual feature or operation.




## Highway Driving Assist 2 (HDA2)\*†4


 
Highway Driving Assist 2 (HDA2) is designed to adjust the speed of the vehicle when driving on limited/controlled access highways/freeways.

Highway Lane Change Assist may assist in changing lanes, if the driver has turned on the turn signal and if the system detects the lane change is possible.

When HDA2 is activated and the proper conditions are met, the Instrument Cluster indicator **A** will illuminate green. If proper conditions are not met, HDA2 will be in standby mode and the HDA2 indicator light **B** will illuminate gray. When in operation, and if both lanes are detected, the Instrument Cluster will show the lanes illuminated white and the HDA2 indicator illuminated green **A**.

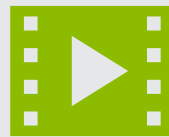

Highway Driving Assist 2 (HDA2) Video

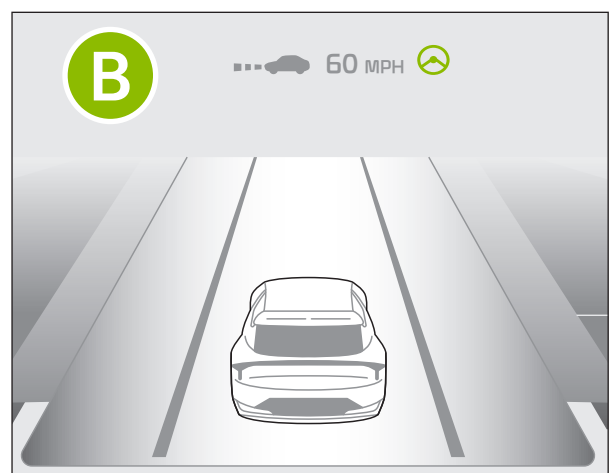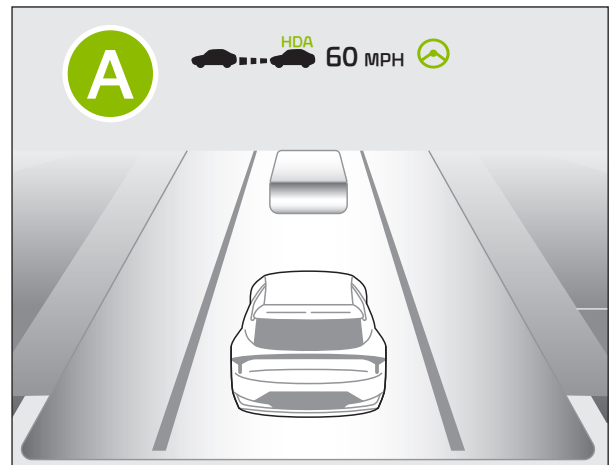  

[Continued on next page](#)

*When engaged, Highway Driving Assist is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways. Always drive safely and use caution.*

*Images are for illustrative purposes only and may not reflect actual feature or operation.*



# Highway Driving Assist 2 (HDA2)<sup>\*†4</sup>

[Continued from previous page](#)

**HDA2 will operate when these conditions are met:**



Highway Driving  
Assist 2 (HDA2)  
Video

- Driving on the main road of certain highways, and turning on Highway Driving Assist by pressing the Driving Assist button
- Entering the main road of certain highways while Lane Following Assist and Smart Cruise Control are operating

### HDA2 Settings:

- **To enable HDA2:** press the **SETUP** button on the Infotainment System, VEHICLE, DRIVER ASSISTANCE, DRIVER CONVENIENCE, and select HIGHWAY DRIVING ASSIST
- Select HIGHWAY LANE CHANGE ASSIST to activate this feature
- **Warning Methods:** To adjust the Warning Volume settings, go to VEHICLE SETTINGS, DRIVER ASSISTANCE and under WARNING METHODS, you can adjust the Warning Volume, activate Haptic Warning and Driving Safety Priority.

**REMINDERS:** Adjusting the Warning Methods will adjust settings for other driver assistance systems.

*When engaged, Highway Driving Assist is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways. Always drive safely and use caution.*

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*See section 6 in the Owner's Manual for more detailed information, limitations and conditions.*





## Surround View Monitor (SVM)<sup>\*†4</sup>

Surround View Monitor uses the wide view cameras and displays images around the vehicle through the Infotainment System screen to assist with parking.

- Press the Parking/View button **A** or shift into reverse to turn on Surround View Monitor
- Other view modes can be selected by touching the view icons **B** on the Surround View Monitor screen

 


Surround View Monitor (SVM) - 3D Video



(Button located in center panel)

- **Surround View Monitor Auto On:** To enable the front parking assist view screen when Parking Distance Warning is activated and the Gear Shift is in Drive, select Driver Assistance, Parking Safety, Surround View Monitor Auto On from the Vehicle Settings menu
- **Warning Methods:** To adjust the Warning Volume settings, go to VEHICLE SETTINGS, DRIVER ASSISTANCE and under WARNING METHODS, you can select PARKING SAFETY PRIORITY

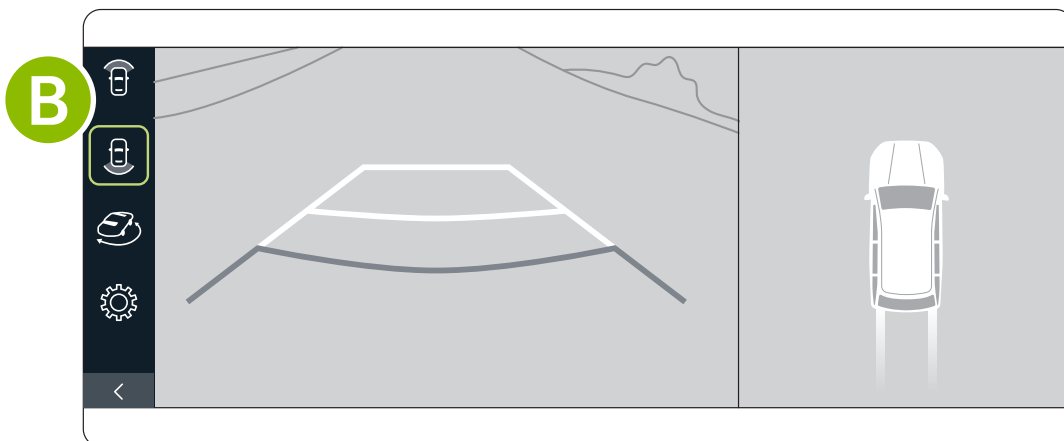

[Continued on next page](#)


Images are for illustrative purposes only and may not reflect actual feature or operation. Button configuration may vary.

When engaged, Surround View Monitoring is only a supplemental device. Drivers should not rely solely on the SVM information when parking and backing up. Drivers should always pay attention and directly check the left/right and rear.




## Surround View Monitor (SVM)\*†4

 [Continued from previous page](#)

To change the SVM settings, press the onscreen Settings icon  **A** while SVM is operating or pressing Setup, on the Infotainment System, select Vehicle, Driver Assistance, Parking Safety and Camera Settings.



**Surround View Monitor (SVM) - 3D Video**

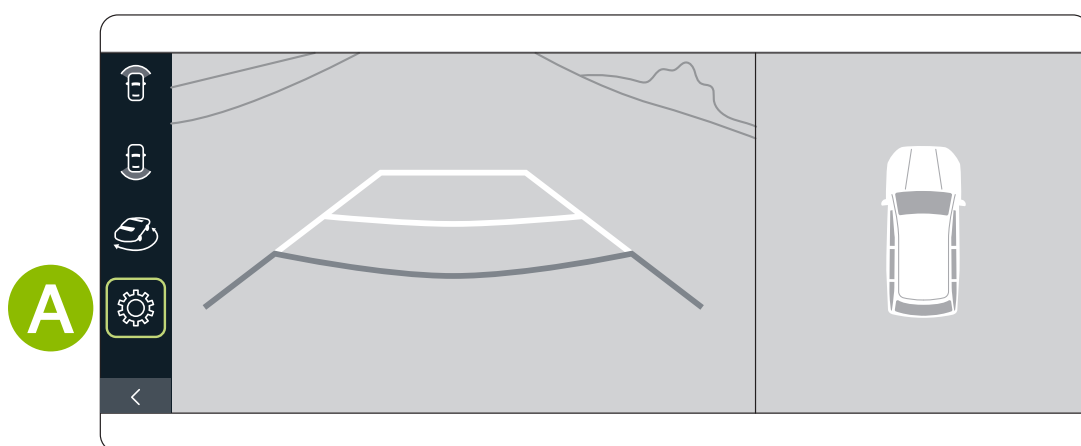

### QUICK TIP

- The Front View of SVM will turn off when the Gear Shift is moved into Park or Reverse or the Parking/View button is pressed.

### REMINDERS:

- The SVM camera is equipped with an optical lens to provide a wider angle of vision and may appear different from the actual distance
- You can also select PARKING SAFETY PRIORITY so the audio system volume will lower while SVM is activated
- Through normal use and after inclement weather or washing, the rear camera may become dirty or obstructed. Use a clean, microfiber cloth to remove any dirt, debris or spots that have accumulated on the lens
- Adjusting the Warning Methods will adjust settings for other driver assistance systems

*Images are for illustrative purposes only and may not reflect actual feature or operation. Button configuration may vary.*

*When engaged, Surround View Monitoring is only a supplemental device. Drivers should not rely solely on the SVM information when parking and backing up. Drivers should always pay attention and directly check the left/right and rear.*

*See section 6 in the Owner's Manual for more information.*





## Remote Smart Parking Assist 2 (RSPA2)\*†4

 
Remote Smart Parking Assist is designed to use the vehicle sensors to help park and exit parking spaces remotely.





**Remote Smart Parking Assist 2 (RSPA2) Video**

### To park with Remote Parking (from outside the vehicle), using the Smart Key:

1. While in the vehicle, with the vehicle stopped in front of the parking space, vehicle aligned, and the Gear Shift in Park, press and hold the Parking/View button **A**
2. Operating instructions will be displayed on the Infotainment System screen. When ready, exit the vehicle
3. Press and hold either the Forward **B** or Backward **C** button on the Smart Key, depending on how you want to park, and the vehicle will move in the direction of whichever button you press
4. Press and hold the Remote Start button **D** to turn off the vehicle

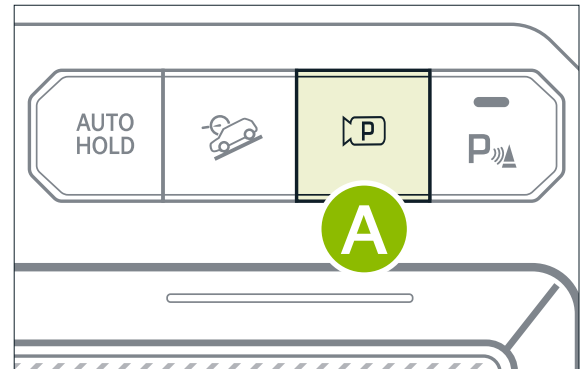

(Button located in center panel)

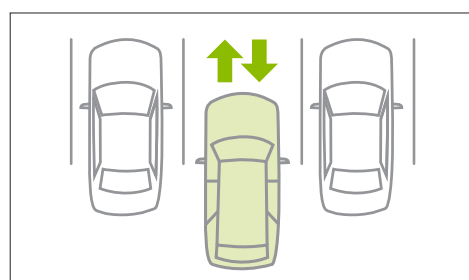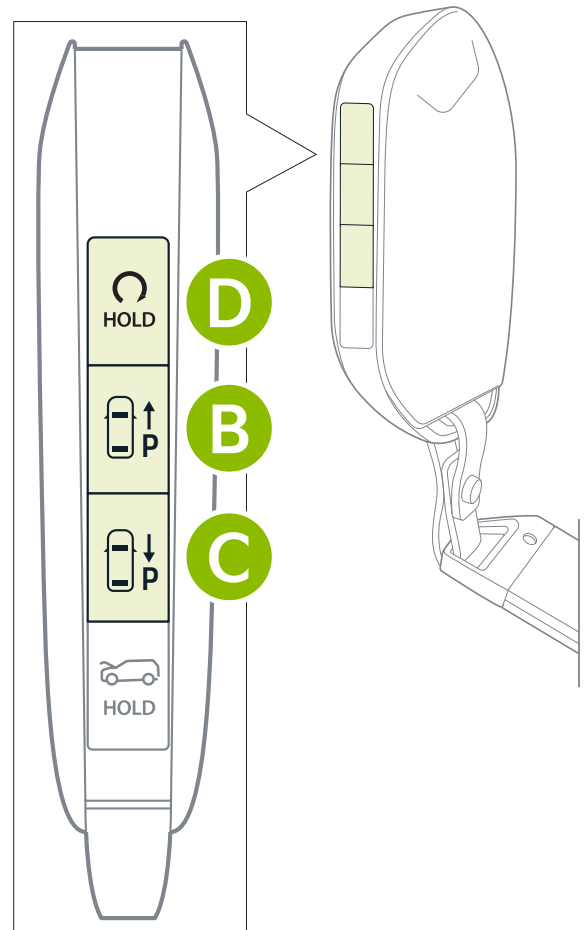  

Remotely moving forward or backward

[Continued on next page](#)

For additional RSPA features, review the vehicle's Owner's Manual.

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.



## Remote Smart Parking Assist 2 (RSPA2)\*†4

[Continued from previous page](#)

 
**To exit a parking space remotely, when outside the vehicle and vehicle is off:**

1. Press the lock button on the Smart Key
2. Press and hold the Remote Start button **A** within four seconds to start the vehicle
3. Press and hold either the Forward **B** or Backward **C** button on the Smart Key, depending on how your vehicle is parked. The vehicle will move in the direction of whichever button you press
4. Release the button to stop the vehicle

**To turn off RSPA at any point while it's operating:** press the Parking View button **D** or Parking Safety button **E**, press the Park button on the Gear Shift or press the Remote Start button **A** on the Smart Key.



Remote Smart Parking Assist 2 (RSPA2) Video

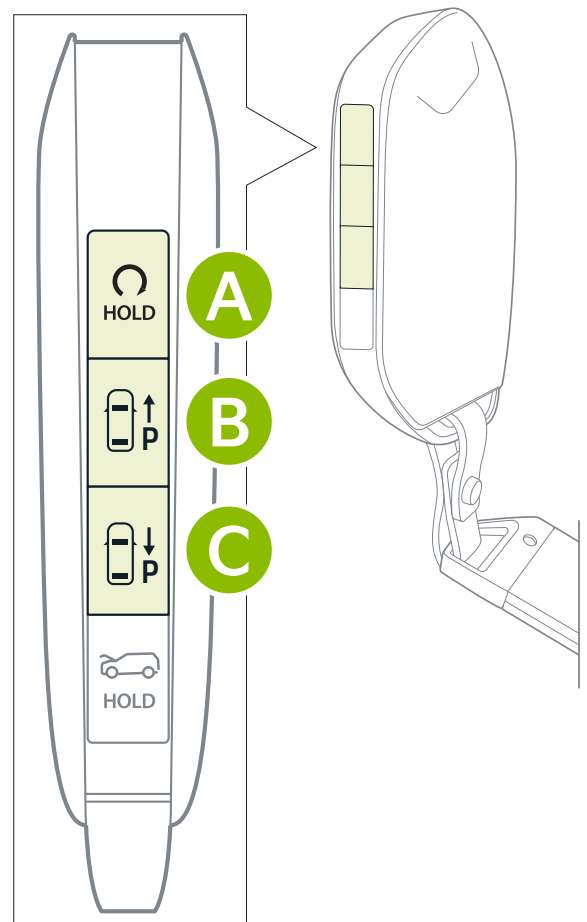

(Buttons located in center panel)

[Continued on next page](#)

For additional RSPA features, review the vehicle's Owner's Manual. Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.



# Remote Smart Parking Assist 2 (RSPA2)\*†4

[Continued from previous page](#)

**Warning Methods:** To adjust the Warning Volume settings, go to VEHICLE SETTINGS, DRIVER ASSISTANCE and under WARNING METHODS, you can adjust the Warning Volume.

### REMINDERS:

- Remote Smart Parking Assist will only operate if you are within 13 feet of the vehicle, with the Smart Key in your possession
- Remote Smart Parking Assist will not function when:
  - There is a parking space open, with a vehicle on one side only
  - When trying to park in a diagonal space
  - When the parking space is too narrow or near a wall
- Adjusting the Warning Methods will adjust settings for other driver assistance systems

*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 6 in the Owner's Manual for more information.*



## Rear View Monitor (RVM)<sup>†4</sup>

Rear View Monitor displays the area behind the vehicle to assist when parking or backing up. To turn RVM on/off, press the Parking/View button **A** on the center console or shift Gear Shift into Reverse.



(Button located in center panel)

 
### RVM Settings:

- **To access Camera Settings:** press the Settings icon **B** or the SETUP button on the Infotainment System. Select **VEHICLE**, DRIVER ASSISTANCE, PARKING SAFETY, then CAMERA SETTINGS
- You can also select PARKING SAFETY PRIORITY so the audio system volume will lower while RVM is activated

### The Rear View Monitor activates when the:

- POWER button is in the ON position
- Gear Shift is in the Reverse position

Press the Parking/View button when Gear Shift is in the Neutral or Drive position.

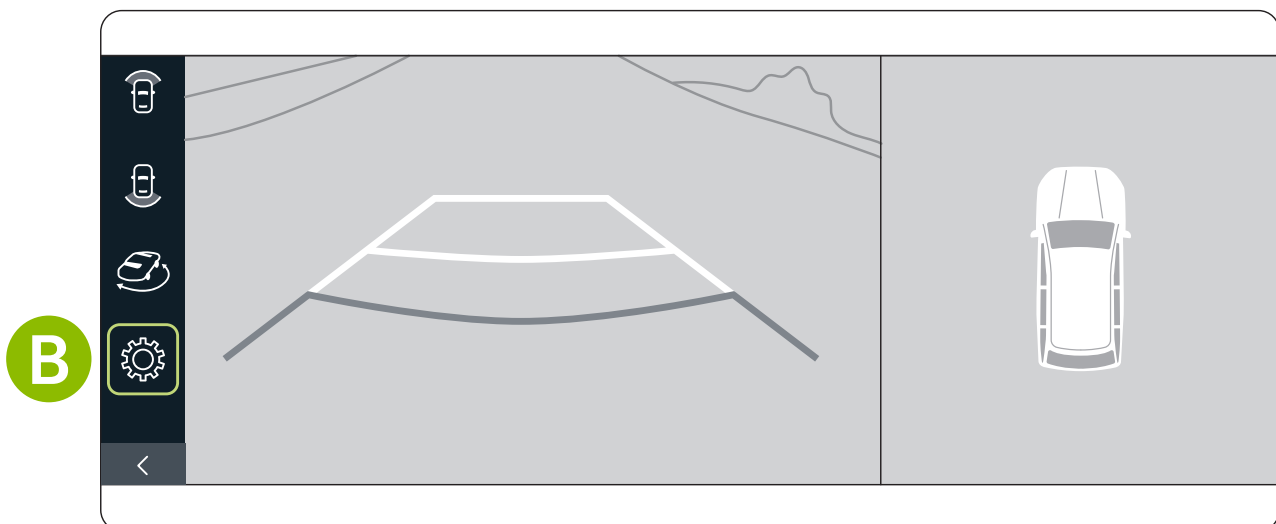

[Continued on next page](#)

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

When engaged, RVM is not a substitute for proper and safe backing-up procedures. Rear View Monitor may not display every object behind the vehicle. Always drive safely and use caution when backing up.




## Rear View Monitor (RVM)<sup>†4</sup>

 [Continued from previous page](#)

### REMINDERS:

- While camera is active, only the Infotainment System can be operated on the Steering Wheel and Instrument Cluster. All other features are disabled
- Rear View Monitor may not display every object behind the vehicle
- Through normal use and after inclement weather or washing, the rear camera may become dirty. Use a clean, microfiber cloth to remove any dirt, debris or spots that have accumulated on the lens

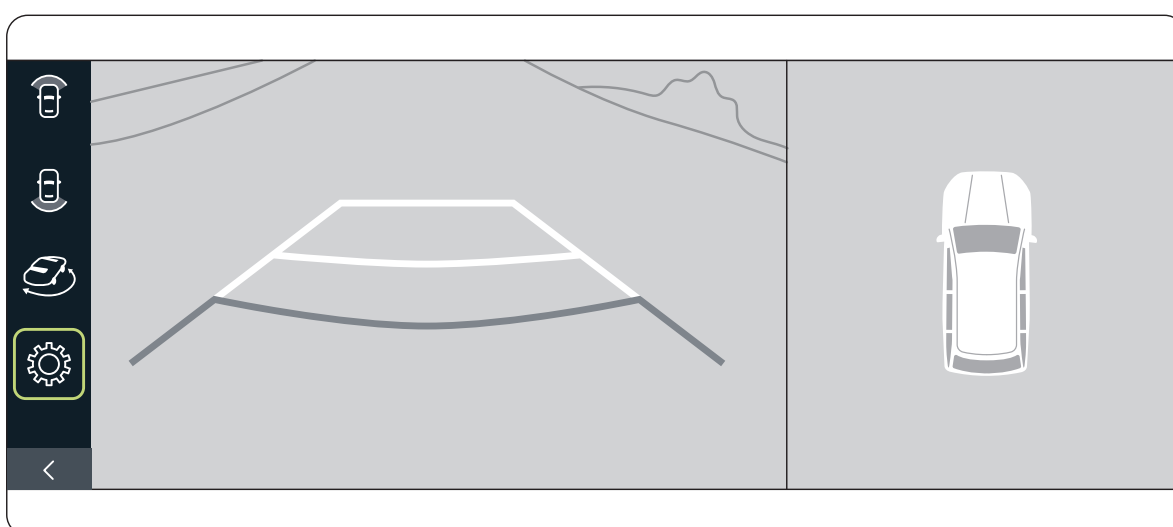

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

When engaged, RVM is not a substitute for proper and safe backing-up procedures. Rear View Monitor may not display every object behind the vehicle. Always drive safely and use caution when backing up.



## Rear Cross-traffic Collision-Avoidance Assist (RCCA)\*†4

Rear Cross-traffic Collision-Avoidance Assist is designed to detect vehicles approaching from the rear left or right while the vehicle is moving in reverse.

RCCA may warn the driver of a possible collision with a warning message and a warning sound. Also, in certain circumstances, RCCA may assist with braking to help avoid a collision.

When the rear-corner radar sensors detect approaching vehicles from the rear left or rear right side of the vehicle **A**, RCCA will sound a warning, the warning indicators on the outside rear-view mirror will illuminate and a message will appear on the Instrument Cluster **B** and the

 
 
Infotainment System. If RCCA detects that the collision risk has increased, RCCA may automatically apply the brakes to reduce your speed, potentially helping to minimize the effects of a possible collision.

### RCCA is designed to operate under the following conditions:

- When the gear shift is in Reverse
- When the vehicle is moving slower than 6 mph



Rear Cross-traffic Collision-Avoidance Assist (RCCA) Video

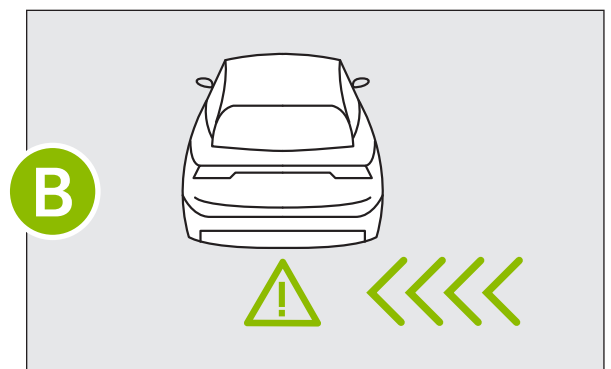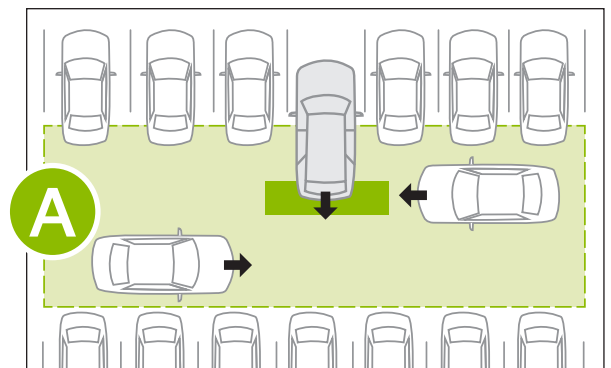

[\*Continued on next page\*](#)

*When engaged, RCCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.*

*Refer to section 6 in the Owner's Manual for more information.*

*Images are for illustrative purposes only and may not reflect actual feature or operation.*



# Rear Cross-traffic Collision-Avoidance Assist (RCCA)\*†4

[Continued from previous page](#)

### RCCA Settings:

- To enable RCCA: press the **SETUP** button on the Infotainment System. Select the **VEHICLE** button to enter the Vehicle Settings. Select DRIVER ASSISTANCE, and in PARKING SAFETY, scroll through the selections and press REAR CROSS-TRAFFIC SAFETY to toggle the features on or off
- **Warning Methods:** To adjust the Warning Volume settings, go to VEHICLE SETTINGS, DRIVER ASSISTANCE and under WARNING METHODS, you can adjust the Warning Volume, activate Haptic Warning

### REMINDERS:

- When a vehicle is approaching within the sensing range and moving faster than 3 mph, the RCCA system will show a warning
- Adjusting the Warning Methods will adjust settings for other driver assistance systems

*When engaged, RCCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.*

*Refer to section 6 in the Owner's Manual for more information.*





# Reverse/Forward\*/Side\* Parking Collision-Avoidance Assist (PCA)<sup>†4</sup>

Reverse/Forward/Side PCA is designed to detect pedestrians or objects behind the vehicle **A** and may warn the driver or assist with braking to help avoid a possible collision while the vehicle is moving in reverse.

### PCA Settings:

To enable PCA: press the **SETUP** button on the Infotainment System. Select **VEHICLE**, DRIVER ASSISTANCE, and in PARKING SAFETY, scroll through the selections and press the button to toggle **Backward Safety** and/or **Forward/Side Safety** on or off

- **Warning Methods:** To adjust the Warning Volume settings, go to VEHICLE SETTINGS, DRIVER ASSISTANCE and under WARNING METHODS, you can adjust the Warning Volume, activate Haptic Warning

### REMINDER:

- Adjusting the Warning Methods may adjust timing and volume levels for other driving assist systems.


*When engaged, PDW is not a substitute for proper and safe parking and backing-up procedures. Always drive safely and use caution when backing up. PDW may not detect every object in front of or behind the vehicle.*

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*Refer to section 6 in the Owner's Manual for more information.*



 Reverse/Forward\*/  
Side\* Parking  
Collision-Avoidance  
Assist (PCA) Video

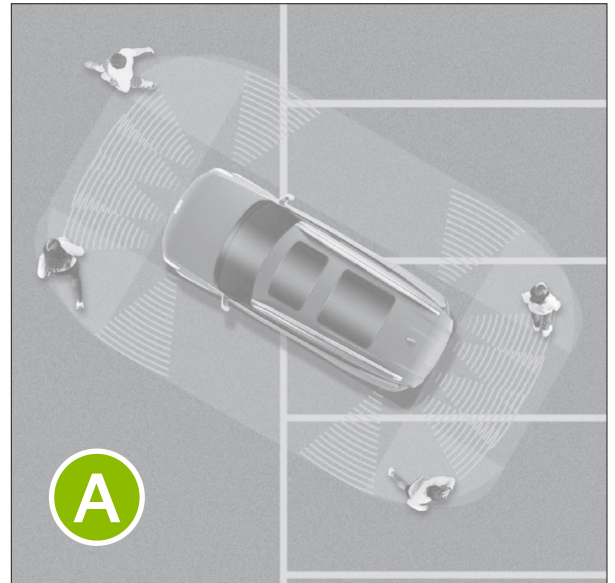



# Forward/Reverse/Side\* Parking Distance Warning (PDW)<sup>†4</sup>

While driving at low speed, Forward/Reverse Parking Distance Warning is designed to detect pedestrians or objects and may warn the driver to help avoid a possible collision.

PDW is activated when the Power button is on and the vehicle is in Reverse. To deactivate PDW, press the Parking Safety button **A** (LED illuminated), when vehicle is in Drive or Reverse. To activate, press button **A** again (LED not illuminated).

- **Warning Methods:** To adjust the Warning Volume settings, go to VEHICLE SETTINGS, DRIVER ASSISTANCE and under WARNING METHODS, you can adjust the Warning Volume

 
 
### REMINDERS:

- Adjusting the Warning Methods may adjust timing and volume levels for other driving assist systems
- If the vehicle is moving at speeds over 6 mph, Forward/Side Parking Distance Warning may not operate
- When more than two objects are sensed at the same time, the closest one will be recognized first

*When engaged, PDW is not a substitute for proper and safe parking and backing-up procedures. Always drive safely and use caution when backing up. PDW may not detect every object in front of or behind the vehicle.*

*Refer to section 6 in the Owner's Manual for more information.*

*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.*

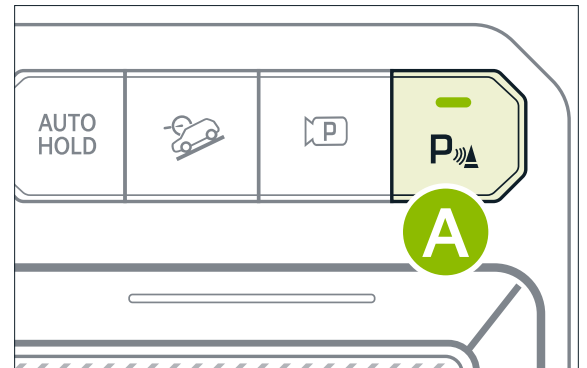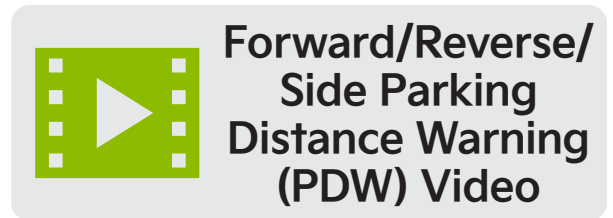

(Button located in center panel)



## Intelligent Speed Limit Assist (ISLA)\*†4

Intelligent Speed Limit Assist uses information from the detected road signs and the navigation system data may inform the driver of the speed limit and to help the driver maintain the vehicle within the speed limit.

When ISLA is on and active, the speed limit information will display an alert on the Instrument Cluster of the detected speed limit. When driving at a speed higher than the displayed speed limit, the speed limit is displayed in red.

 
Manual Speed Limit Assist assists the vehicle to adjust its speed according to the posted speed limit. When the cruising speed is set as the same as the speed limit, the vehicle is designed to adjust its speed if the posted speed limit changes.

### ISLA Settings:

- To enable ISLA on, press the **SETUP** button on the Infotainment System. Select the **VEHICLE** button to enter the Vehicle Settings. Select DRIVER ASSISTANCE, SPEED LIMIT, and then select one of the options:
  - **Speed Limit Offset:** The offset for Speed limit can be adjusted. The vehicle will warn the speed limit or adjust the driving speed when the current driving speed is higher than the recognized speed limit added with set tolerance value
  - **Speed Limit Assist:** Informs the driver of the posted speed limit, displays a message and may change the set speed to help the driver stay within the posted speed limit

[Continued on next page](#)

*ISLA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions. Images are for illustrative purposes only and may not reflect actual feature or operation. See section 6 in the Owner's Manual for more detailed information, limitations and conditions.*

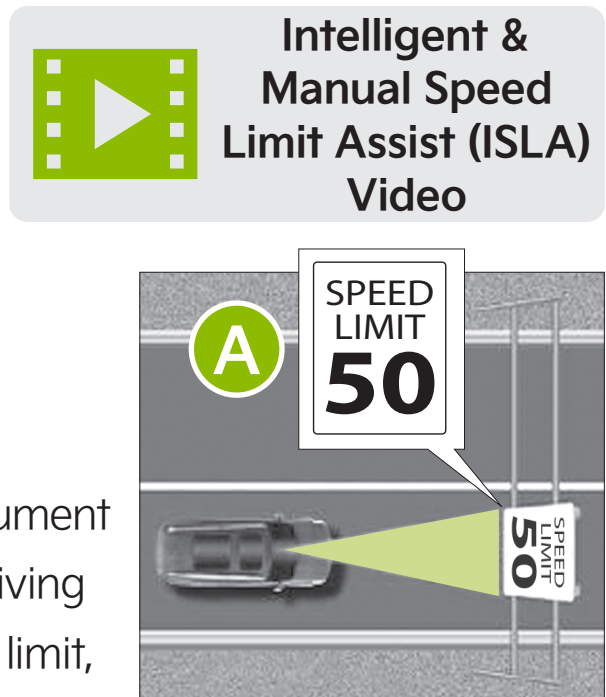



# Intelligent Speed Limit Assist (ISLA)<sup>\*†4</sup>

[Continued from previous page](#)

### ISLA Settings:

- **Speed Limit Warning:** Informs the driver of the posted speed limit and warns the driver when the vehicle is traveling faster than the posted speed limit
- **Off:** ISLA is disabled



**Intelligent &  
Manual Speed  
Limit Assist (ISLA)  
Video**

### QUICK TIP

- You can set a speed limit offset to the posted speed limit by going to Vehicle Settings, Driver Assistance, Speed Limit, then Speed Limit Offset. Set the offset to "0" if you want the vehicle to travel at the posted speed limit when ISLA is on.

### REMINDERS:

- Vehicle must be parked to change the speed settings
- Additional information may be displayed if additional road sign information is detected
- A red speed limit indicator may display if the posted speed limit is exceeded

 
*ISLA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions. Images are for illustrative purposes only and may not reflect actual feature or operation.*

*See section 6 in the Owner's Manual for more detailed information, limitations and conditions.*



# Instrument Cluster Illumination Control

Press switch **A** up or down to adjust display brightness of the Instrument Panel illumination.

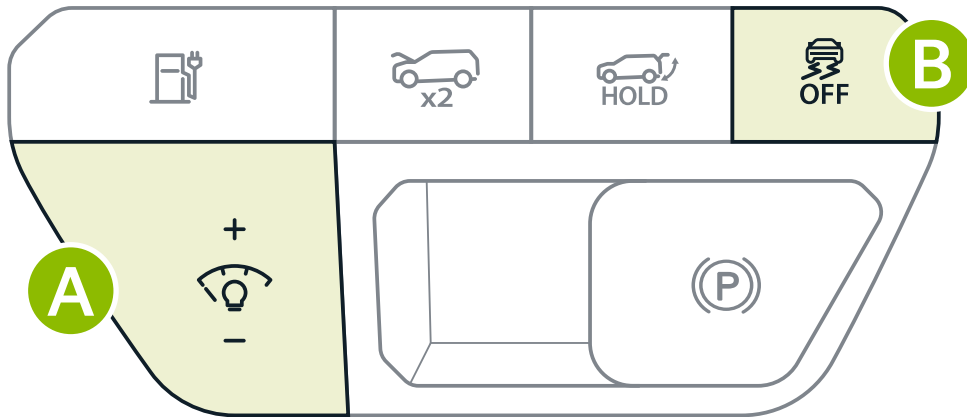

(Button is located on panel to the left of the Steering Wheel)


## Electronic Stability Control (ESC)<sup>†6</sup>

The ESC system is designed to help stabilize the vehicle during certain cornering maneuvers. It is a good idea to keep ESC turned ON whenever possible.

Press ESC OFF button **B** to disable Traction Control in ESC (ESC OFF indicator will illuminate).

To turn both Traction Control and Stability Control off, press and hold ESC OFF button **B** for more than 3 seconds (ESC OFF indicator will illuminate and an alert sounds).

### REMINDERS:

- ESC is active by default at vehicle startup
- The ESC Indicator Light  in the Instrument Cluster will illuminate whenever the ESC is in operation

*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.*



# Hill-start Assist Control (HAC)<sup>†6</sup>

The HAC system is designed to help prevent the vehicle from rolling backward when accelerating from a stop while on a steep incline.

The HAC system automatically activates whether the ESC is OFF or ON.

### QUICK TIPS

- When HAC is active (e.g., accelerating from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator. This is normal HAC operation
- HAC provides a two-second delay before the vehicle may start rolling backward

### REMINDERS:

- The HAC system does not operate when the Gear Shift is in the Park or Neutral position
- In the event of an HAC system malfunction, see an authorized Kia dealer for service
- HAC does not replace the need to apply brakes while the vehicle is stopped on an incline

*Refer to section 5 in the Owner's Manual for more information.*





# Power Windows, Window Lock & Central Door Lock

- A** Pull/Press to operate Driver's and Front Passenger's Windows Auto-Up/Down

 
### QUICK TIP

- Press the button again to stop Auto Up/Down function.

- B** Press to Unlock/Lock All Doors
- C** Press to disable Rear Passenger Windows and enable the Electronic Safety Lock\* system

### QUICK TIPS

- While driving with the rear windows down or with the sunroof\* in an open or partially open position, a wind buffeting or pulsation noise may be heard. This noise is a normal occurrence and can be reduced or eliminated by the following:
  - If the noise occurs with one or both of the rear windows down, partially lower both front windows approximately 1 inch
  - If the noise occurs with the sunroof open, slightly reduce the size of the sunroof opening

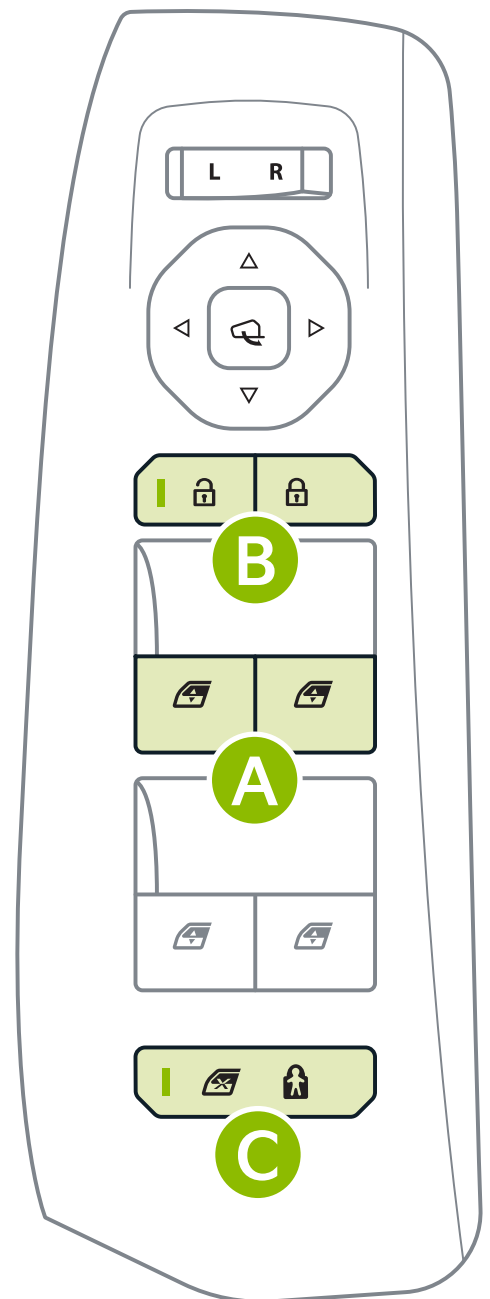

### REMINDERS:

- When pressed **C**, window controls for the Rear Passenger Windows are disabled
- When closing, be mindful of any nearby objects or persons

Refer to section 5 in the Owner's Manual for more information. Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.





### Automatic Door Lock/Unlock

When enabled, the Automatic Door/Unlock feature may automatically lock all doors when the Gear Shift is moved out of the Park position. To automatically unlock all doors, select **Auto unlock on shift to P** or **Auto unlock vehicle off**.

### Power/Heated Outside Mirrors

 
Mirror heaters automatically turn ON/OFF at the same time the Rear Window Defroster is turned ON/OFF. Rear Window Defroster button\* is located on climate control system panel.

### Electronic Child Safety Lock System\*

Press button **A** to lock the rear passenger doors. An indicator will illuminate showing the system is active. This system is activated once the button is pressed. To deactivate, press the button again.



Electronic Child Safety Lock System Video

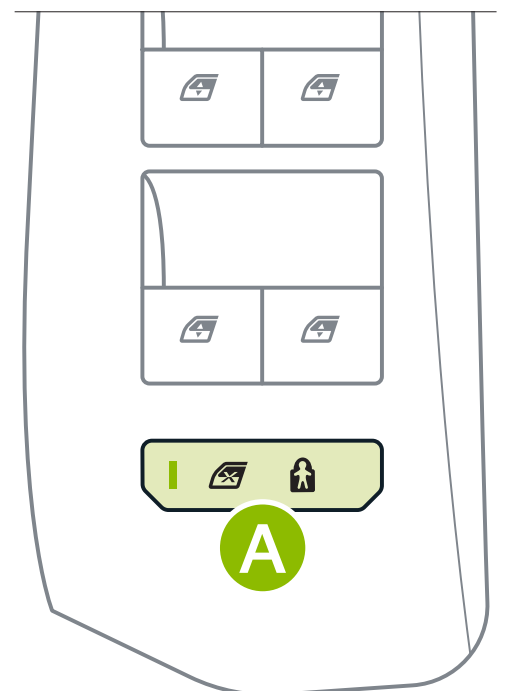

*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.*



### Power Folding Outside Mirrors\*

Press mirror switch to the left or right **A** to select mirrors. Then press arrows **B** to adjust mirror position.

To automatically fold and unfold both the outside rearview mirrors, press the folding mirror button **C**.

#### QUICK TIP

- To automatically fold mirrors when exiting vehicle, press the LOCK button once on the Smart Key.

#### REMINDER:

- To lock position of mirrors, toggle switch to the neutral (center) position.



 
*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.*



## EV Gear Shift

### To start the vehicle:

1. Depress the brake pedal
2. Press the Power button **A** while Gear Shift is in Park or Neutral **B**

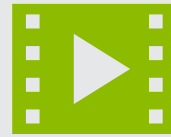

Power Button and Gear Shift Video

To turn the vehicle power off, press the Power button. To use the Power button, you must have the Smart Key fob on your person.

### Power Button modes:

- **OFF:** The vehicle is off
- **ACC (Accessory):** The vehicle is in accessory position. Limited functions are available
- **ON:** Some vehicle functions are on. Warning lights can be checked
- **START/RUN:** The READY indicator will illuminate and the vehicle is ready to drive

 
 
### Gear Shift positions:

**P:** Park - Press to place in Park **B**. To move out of Park, rotate stalk **C** to D, N or R

**D:** Drive

**N:** Neutral

**R:** Reverse

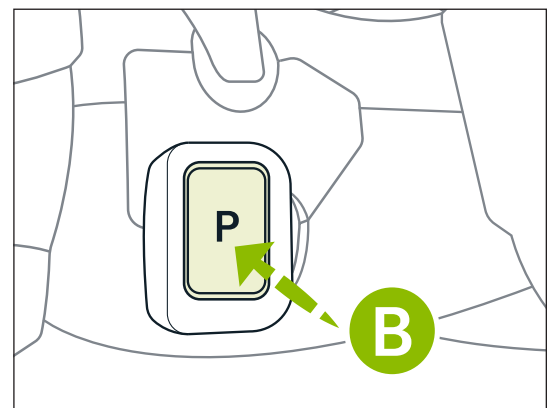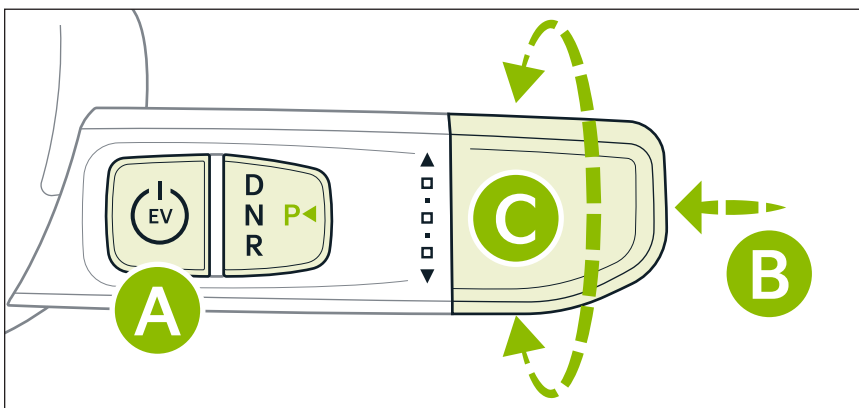

### REMINDER:

- The vehicle is equipped with a shift-by-wire system and a shift-lock system that prevents you from shifting gears without depressing the brake pedal.

*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.*



## STEERING WHEEL CONTROLS

### Heated Steering Wheel\*

Press button **A** to turn ON/OFF the steering wheel heater while the POWER button is in the ON or READY position. The steering wheel heater will turn off automatically after 30 minutes, or when button is pressed again to deactivate.



**Tilt/Telescoping/  
Heated Steering  
Wheel Video**



*(Located on Driver's Door Panel)*

#### QUICK TIP

- If ignition is cycled, the Heated Steering Wheel turns OFF. Press button again to turn ON.

#### REMINDER:

- If the steering wheel becomes too warm, turn the system off. The heated steering wheel may cause burns even at low temperatures, especially if used for long periods of time.

 
*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.*



## Headlights & High Beams

### To operate:

- Rotate the lever to change the Headlight function
- Push the lever to turn High Beams ON
- Pull the lever to flash Headlights/High Beams

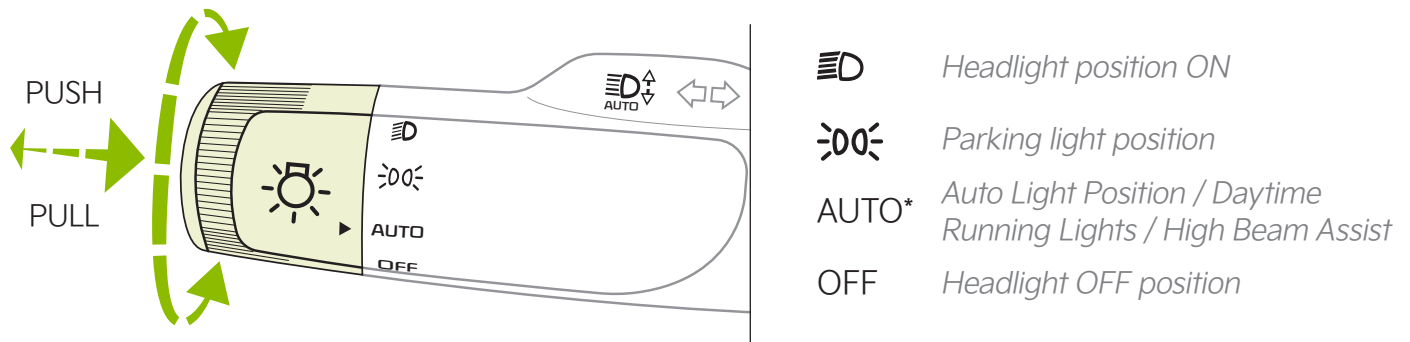

**AUTO Light position** - When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

**Daytime Running Lights (DRL)** - DRL may help others to see the front of your vehicle during the day. The lights will be on automatically when the ignition or POWER button\* is ON and the headlight switch is in the AUTO position, unless one of the following occurs:


- Parking brake is applied
- Engine is turned off

*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.*



### High Beam Assist (HBA)

 High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light detected from oncoming vehicles and road conditions.

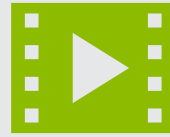

**High Beam Assist (HBA) Video**

To enable HBA, toggle the light switch to the AUTO Light position and turn on the high beams by pushing the lever away from you. The High Beam Assist indicator will illuminate.

HBA does not operate below certain speeds, or in some lighting and driving conditions. Please be aware of your surroundings and exercise proper road etiquette when operating a vehicle using the high beams.

#### REMINDERS:

- HBA will operate when vehicle speed exceeds 20 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously. If the lever is pulled toward you while HBA is operational, HBA will turn off
- If the light switch is switched to the headlight position, HBA will turn off and low beams will be on continuously
- The DRL system turns off when parking brake is applied
- DRL only operates during the daytime

*Refer to section 5 in the Owner's Manual for more information.*



 
## Turn Signals

To operate:

**Turn Signals** - Slightly move the lever up/down to activate One-Touch Lane Change Signal. Move the lever Up/Down for Right/Left Turn Signal

**One-Touch Lane Change Signal** is activated by briefly pressing the Turn Signal Lever slightly up or down for less than 1 second and then releasing. The lane change signal will blink 3-7 times.

To activate or deactivate the One Touch Turn Signal function or choose the number of blinks (3, 5, or 7) by selecting Vehicle, Lights, and One Touch Turn Signal.

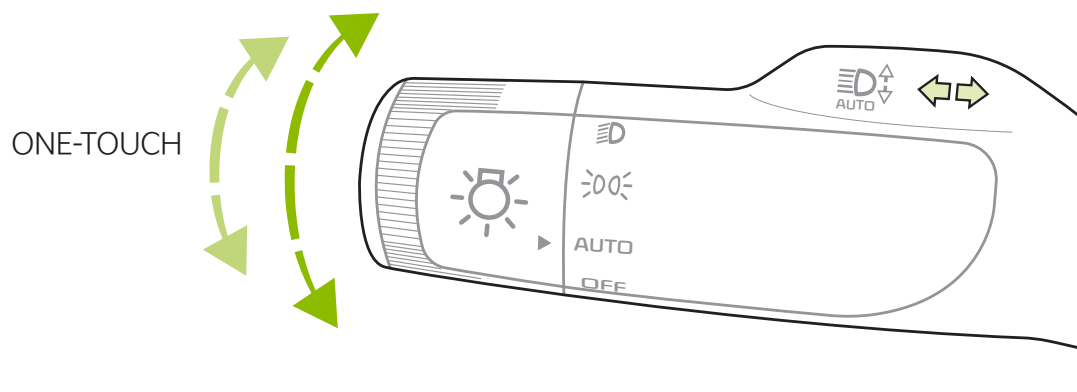

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.






# Windshield/Rear Wipers & Washers
 
### To operate Windshield Wipers and Washers:

- Move the lever Up/Down to change front Wiper modes
- Press the switch **A** Up (fast) / Down (slow) to adjust Intermittent Wipe Speed
- Pull the lever to spray and wipe front windshield



**Wipers and Wiper Stalk Video**

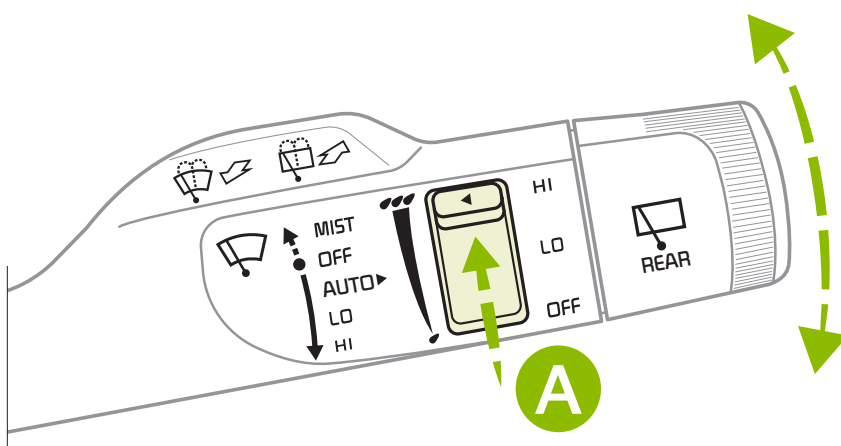

**WINDSHIELD MIST:** Single wipe

**OFF:** Wiper off

**INT/AUTO:** Auto control wipe (rain sensing)

**LO:** Slow wipe

**HI:** Fast wipe

### Rain Sensing (Auto Control Wipe):

- The rain sensor located on the upper end of the windshield glass is designed to sense the amount of rainfall and controls the wiping cycle for the interval selected. The more it rains, the faster the wiper operates. When the rain stops, the wiper stops
- To vary the speed setting, press the Wiper Switch **A** up/down
- If the wiper lever is set in AUTO mode when the Power button is ON, the wiper will operate once to perform a self-check of the system

### QUICK TIPS

- Pressing switch **A** up increases intermittent wipe frequency and wipe speed. Pressing switch **A** down decreases frequency of wipes
- When the wiper is not in use or washing the vehicle, set the wiper switch in the OFF position to stop the auto wiper operation.

*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 4 in the Owner's Manual for more information.*

 


### Lifting Wipers (Wiper Service Mode)

To lift the windshield wipers to clean windshield, inspect or replace wiper blades or raise wipers in snow/ice conditions without damaging the hood, the blades need to be moved to the service position **A**.

With the ignition ON, turn the ignition OFF, and within 20 seconds move the wiper switch to the MIST position and hold the switch for more than two seconds until the wiper blade is in the fully up position.

To return wipers to normal position, turn the ignition ON, then activate MIST.

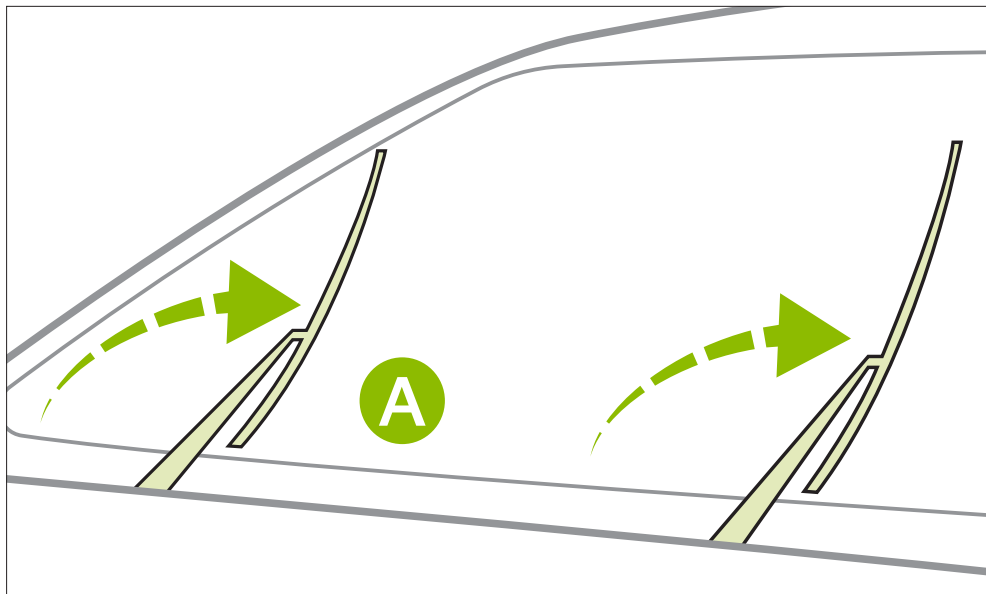


*Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 4 in the Owner's Manual for more information.*



### Power Tilt/Telescoping Steering Wheel<sup>†20</sup>

 To adjust the Steering Wheel to the desired angle and distance, press the power steering wheel switch **A** up/down and forward/backward.

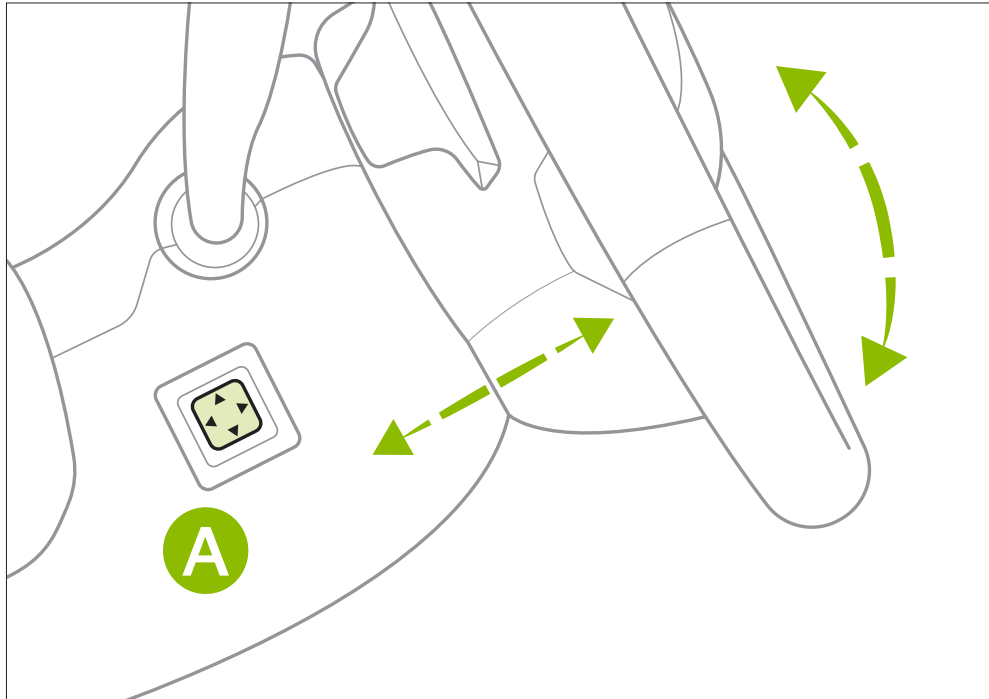

*Do not attempt to adjust steering wheel position when vehicle is in motion as this may cause you to lose control of the vehicle.*

*Refer to section 5 in the Owner's Manual for more information.*

*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.*



## Android Auto™ †3 Setup

**Android Auto™ compatible smartphone setup** — Download the Android Auto™ app from the Google Play™ Store. Open the Android Auto™ app and proceed with the onscreen instructions to complete setup on the device.

### Cable Connection setup for Android Auto™:

1. Press the **SETUP** key on the Infotainment System. Press DEVICE CONNECTION, select PHONE PROJECTION and then select ANDROID AUTO OPTIONS. Review all terms, conditions and requests on the head unit and phone. If you agree, accept them in order to use Android Auto™
2. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone. From the vehicle's home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps

### QUICK TIPS

- If Android Auto™ randomly disconnects:
  - Ensure the USB cable is certified by the phone manufacturer for both power and data
  - Clean the phone's port, which the USB cable connects to, with disposable compressed air
  - The phone should not be disturbed while driving as this can cause a disconnection at the phone's USB port
  - Visit the phone manufacturer's website for Android Auto™ app concerns

### REMINDERS:

- Android Auto™ compatibility requires OS Android™ 5.0 or higher, the phone manufacturer's USB cable provided and data plan with applicable feature(s). Always update your phone to the latest operating system release
- Android Auto™ runs on your smartphone cellular data service. Normal data rates will apply.
- Wireless Android Auto™ system only works for certain Android™ models. Use the manufacturer's USB cable when wireless feature is not available

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.*



## Apple CarPlay<sup>®†3</sup> Setup

**Apple CarPlay<sup>®</sup> compatible smartphone setup** — Connect the Apple CarPlay<sup>®</sup> compatible iPhone<sup>®</sup> with the vehicle's USB port using the manufacturer's cable provided with your iPhone<sup>®</sup>.

1. Press the SETUP key on the Infotainment System. Press DEVICE CONNECTION, select PHONE PROJECTION and then select APPLE CARPLAY OPTIONS. Select APPLE CARPLAY<sup>®</sup>. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Apple CarPlay<sup>®</sup>
2. From the Infotainment System, select the Apple CarPlay<sup>®</sup> button, where you'll see all the Apple CarPlay<sup>®</sup> supported apps

### QUICK TIPS

- If Apple CarPlay<sup>®</sup> randomly disconnects:
  - Ensure the USB cable is certified by the phone manufacturer for both power and data
  - Clean the phone's port, which the USB cable connects to, with disposable compressed air
  - The phone should not be disturbed while driving as this can cause a disconnection at the phone's USB port
  - Visit the phone manufacturer's website for Apple CarPlay<sup>®</sup> app concerns

### REMINDERS:

- Apple CarPlay<sup>®</sup> compatibility requires iOS<sup>®</sup> software 8.0 or higher, the phone manufacturer's USB cable provided and data plan with applicable feature(s). Always update your phone to the latest operating system release
- Apple CarPlay<sup>®</sup> runs on your smartphone cellular data service. Normal data rates will apply

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.*



## Bluetooth® Wireless Technology<sup>†3,18</sup>

**A Volume button:** Press up/down to raise/lower speaker volume

 
**Mute button:** Push to mute the microphone during a call

**B Voice Recognition button:** Press to activate voice recognition/bring up menus with voice command prompts from the system. Press and hold to start voice recognition of a connected smartphone via phone projection (button operation may vary depending on smartphone specifications)

**C Call / End Call button:** Press to receive/place/end calls. In vehicles with navigation, if no phone is paired, press button to pair a phone



**Steering Wheel Controls Video**

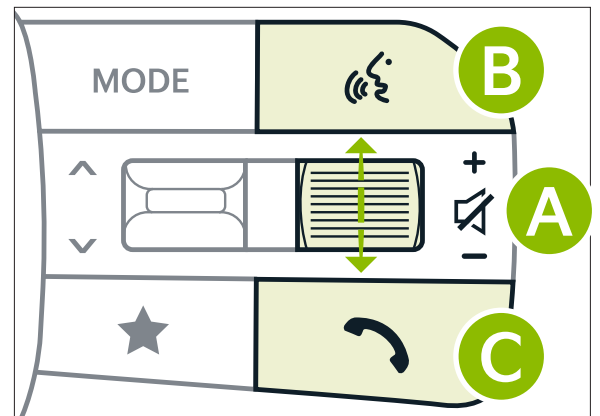

(Buttons located on left side of Steering Wheel)

### QUICK TIPS

- Phone book transfer upload time varies by phone model and with number of phone book entries
- Because of differences in phone quality, service providers and *Bluetooth®* Wireless Technology chip programming, functionality may differ from one phone to another
- The system may register or pair multiple *Bluetooth®* devices

[Continued on next page](#)

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

Bluetooth® Wireless Technology†3,18

 
[Continued from previous page](#)

Pairing a Phone:

For instructions on how to pair a phone, refer to the Car Infotainment System’s Quick Reference Guide or your vehicle’s Quick Start Guide.

How to Place a Call:

- **Option 1:** Press the Call / End Call button **A** (displays the phone screen with call history)
- **Option 2:** Press the Voice Recognition button **B**. Then say the command “Call {name}” or “Dial {number}” followed by contact name or number

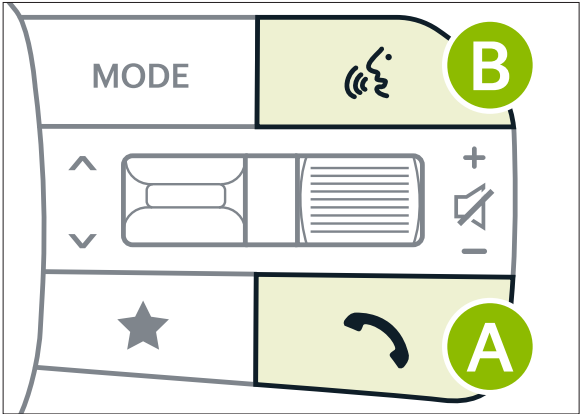

(Buttons located on left side of Steering Wheel)

QUICK TIPS

- During the pairing process, be sure to accept the connection requests on the phone for contacts download and to allow acceptance of all future *Bluetooth®* connection requests.
- When using the voice command feature, wait for the system to BEEP before speaking the command.

[Continued on next page](#)

*Bluetooth® wireless Technology audio and calling functions are supported when connected to a Bluetooth® enabled device (sold separately).*

*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. See your Owner’s Manual for more details.*

*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.*

*For more information, refer to the Car Infotainment System Quick Reference Guide. For Bluetooth® Wireless Technology FAQs, go to [www.kia.com](http://www.kia.com), Owners section, or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA.*

†LEGAL DISCLAIMERS ON [PAGE 152](#) | \*IF EQUIPPED



Bluetooth® Wireless Technology† 2,17

[Continued from previous page](#)

Voice Recognition & Phone Contact Tips



Voice Recognition  
Tips Video

The system may have difficulty understanding some accents or uncommon names. Improve the performance by making a few simple changes to your phone contacts, listed below. To help optimize the *Bluetooth® Wireless Technology* Voice Recognition system, see other tips and reminders under Quick Tips:

- Use full names (first and last names) vs. short or single-syllable names (e.g., “John Smith” vs. “Dad,” “Smith Residence” vs. “Home”)
- Avoid using special characters, emojis or hyphenated names (e.g., @, &, #, /, -, \*, +, etc.)
- Avoid using acronyms (e.g., “In Case of Emergency” vs. “ICE”) or words with all capital letters
- Spell words completely, no abbreviations (e.g., “Doctor Smith” vs. “Dr. Smith”)

QUICK TIPS

- *Bluetooth®* Music Streaming - If the *Bluetooth®* music is inaudible or too low, you may need to turn up the volume on the connected phone
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Close windows and turn off A/C - Open windows, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with Voice Recognition
- Press the Voice Recognition button and say “Help” to get a list of available commands
- The system may register or pair multiple *Bluetooth®* devices. See the Car Infotainment System Quick Reference Guide for more information on setup and limitations

†LEGAL DISCLAIMERS ON [PAGE 152](#) | \*IF EQUIPPED



## Steering Wheel Audio Controls<sup>†18</sup>

- A Audio MODE button:** Press to cycle through FM/AM/SiriusXM®/Media modes

**Audio System ON/OFF:** Press to turn power on; Press and hold to turn power off

- B Seek/Preset button:**

FM/AM/SiriusXM® Modes: Press up/down to advance through Preset Stations. Press and hold to auto seek

**Media Mode:** Press up/down to move Track Up/Down. Press and hold up/down to fast forward/rewind (except for *Bluetooth®* Audio)

- C Volume button:** Press up/down to raise/lower volume

**Mute button:** Press to mute/unmute all audio (Media pauses in some Media modes when pressed)

 
- D Custom button ★:** Press to access user-selected feature. Press and hold the button to select one of the features available



Steering Wheel Controls Video



Quick Control Menus, Haptic Buttons & New Features Video

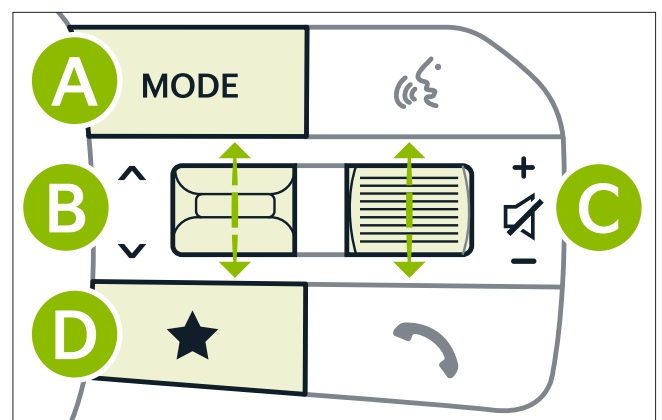

(Buttons located on left side of Steering Wheel)

*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.*

*Your vehicle's steering wheel buttons may differ from those in the illustrations. See the Owner's Manual or the Car Infotainment System Quick Reference Guide. For further audio system operation, refer to pages 93-106.*



## Kia Connect Activation<sup>\*†1</sup>

Follow these steps to activate your Kia Connect system:

1. Enter the activation screen on your Infotainment System:
  - a. Press the SETUP key
  - b. Press Kia Connect icon
  - c. Press Activate
2. Read and agree to Terms of Service and Privacy Policy and press SUBMIT
3. Enter number or email address to receive a verification code, then press SUBMIT
4. Click on the link and a page will open requesting you to create an account
5. Provide the information needed and select SAVE to create the account
6. A page will open displaying your verification code. Enter this code on the infotainment system screen. Press OK and SUBMIT, then press OK again
7. On your phone, select I HAVE ENTERED MY VERIFICATION CODE and a link will be provided to download the Kia Access App. After installing the app, log in and enjoy



**Kia Connect  
Activation Video**




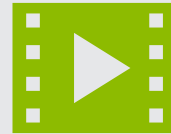 
**Kia Connect & Kia  
Access app Video**

*For further Kia Connect operations, refer to the Car Infotainment System Quick Reference Guide.*




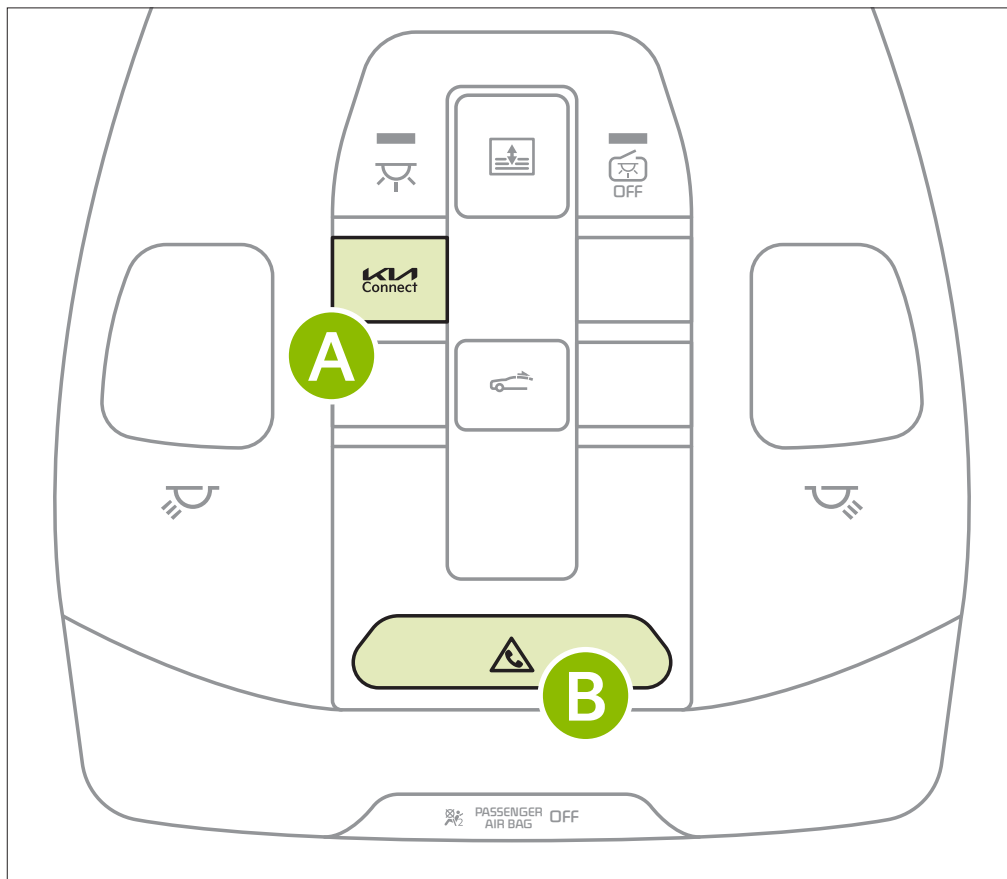 
## Kia Connect Assistance<sup>\*†1</sup>

**Kia Connect**  **A** - Press to connect to a virtual assistant to hear information about the Kia Connect features.



**Kia Connect Assistance Video**

**Roadside Assist**  **B** - Press to connect to a Roadside Assistant where you can request vehicle towing services.



(Buttons located on overhead console\*)

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle. Images are for illustrative purposes only and may not reflect actual feature or operation.



## Kia Access App<sup>†2</sup> Download

Go to an app marketplace to download the Kia Access App. Once you download the app,



**Download the  
Kia Access App**

make sure you register your vehicle and

start an account (refer to Kia Connect<sup>†1</sup> Activation page). Get to know your new Kia and the available convenient features on the app.

### QUICK TIPS

- The smartphone and vehicle need to be connected to a cellular network with good wireless signal strength to use Kia Connect<sup>†1</sup>. If these conditions are not met, remote commands may not execute or may take longer to execute. It will also affect voice commands
- To use Remote Start or Remote Start with Climate Control feature, all doors, hood and trunk/liftgate must be closed and locked
- Activate Remote Start or Remote Start with Climate Control feature before getting into the vehicle, which will allow vehicle interior to reach a desired temperature. If the driver does not enter the vehicle within 10 minutes, the Remote Start will turn off the engine
- The quickest way to obtain accurate vehicle status through the app is by pressing the refresh button on the app or refreshing the web page when using the customer web portal
- The Kia Connect<sup>†1</sup> app will stay connected to the vehicle, as long as the vehicle has been started within seven days. To reconnect the Kia Connect<sup>†1</sup> app, restart the vehicle

*For further Kia Connect operations, refer to the Car Infotainment System Quick Reference Guide.*



## Kia Access App<sup>†2</sup> Feature Guide

The Kia Access App Features Guide is a guide to help you utilize the app to its full potential by detailing each feature and how to adjust various settings. Below are some of the topics included:



**Kia Access App  
Features Guide**

 
- Remote Commands
- Set Climate
- Schedule Remote Start/Climate
- Schedule Charge
- Schedule Service
- Dealer Settings
- Manage Vehicles and Profiles

*For further Kia Connect operations, refer to the Car Infotainment System Quick Reference Guide.*



## Kia Connect with Navigation<sup>\*†1,8</sup>

- FM/AM/SiriusXM<sup>®†16</sup>/Media (USB, *Bluetooth*<sup>®†3</sup> Audio)

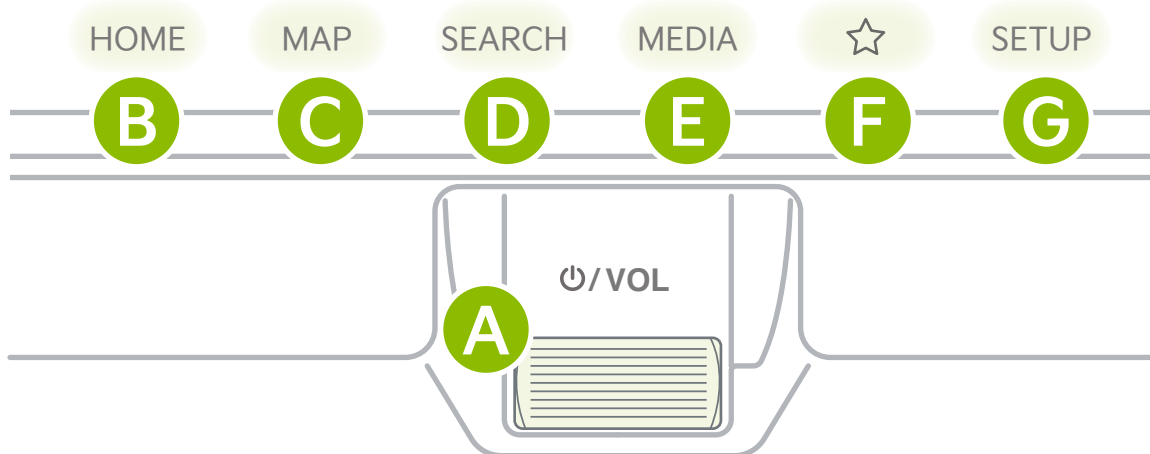

- A** Press to Power ON/OFF. Rotate to adjust Volume
- B** Press to display the HOME screen
- C** Press to display the MAP screen for the current position/Voice mode
- D** Press to display the SEARCH function
- E** Press to display the MEDIA screen
- F** Press to go to the preset feature
- G** Press to display the Settings screen/channels/tracks/songs/files



**Quick Control Menus, Haptic Buttons & New Features Video**



**Navigation System Important Tips Video**



**EV Features & Settings Video**

**To adjust the sound settings:** Press the **SETUP** button on the Infotainment System. Select the onscreen SOUND button. Select the menu item to adjust settings.

**Radio Presets:** To save a preset, when in Radio Mode, press the ADD STATION button.

**SiriusXM<sup>®</sup> Smart Favorites:** In Radio mode, choose SiriusXM<sup>®</sup>, then select any of the first ten favorites, and during song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

[\*Continued on next page\*](#)

*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.*





## Kia Connect with Navigation<sup>\*†1,8</sup>

- FM/AM/SiriusXM<sup>®†16</sup>/Media (USB, *Bluetooth*<sup>®†3</sup> Audio)

[Continued from previous page](#)

**Custom Key** ☆: To program the Custom Button to one of the available features, press and hold the Custom Button ☆.

Select one of the available features you would like the Custom Button to open.

**Map/software updates** - To keep your map and software up to date, Kia provides over-the-air updates. You can also visit the official Kia update webpage at <https://update.kia.com/US/EN/Main>.

**Note**, visiting a dealer for a software update may include an additional charge.



**Navigation System  
Important Tips  
Video**



**EV Features &  
Settings Video**



**Over-the-Air  
Updates Video**

[Continued on next page](#)

For further Kia Connect with Smart Navigation operations, refer to the Car Infotainment System Quick Reference Guide.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the audio system controls while driving.



# Kia Connect with Navigation<sup>\*†1,8</sup>

- FM/AM/SiriusXM<sup>®†16</sup>/Media (USB, *Bluetooth*<sup>®†3</sup> Audio)

[\*Continued from previous page\*](#)

### QUICK TIPS

- When connected to Android Auto™ or Apple CarPlay® on your smartphone, the smartphone's navigation system may also be available
- This system supports Android Auto™ and Apple CarPlay® (USB-C connection only)
- A warning screen may appear periodically to remind users that the navigation system should be operated when the vehicle power is on to prevent battery discharge

### REMINDER:

- To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

*For further Kia Connect with Smart Navigation operations, refer to the Car Infotainment System Quick Reference Guide. For further audio system operation, refer to pages 43-48.*

*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the audio system controls while driving.*



## Digital Clock - Infotainment System

Press SETUP on the Infotainment System, select General, then select Date/Time from the menu to adjust.

### QUICK TIPS

 
- The clock can be set to adjust automatically. To enable auto time setting, DAYLIGHT SAVINGS must be selected in the Settings Screen
- To manually set the time and date, the GPS time must be turned off in the Clock Settings

## USB-C Charger Ports\*

The USB-C Charger Ports are located on the center panel and behind the Center Console. Devices can be recharged using a USB-C cable. The Power button needs to be in the ACC/ON/RUN/START position to operate the USB Charger Ports.



**USB-C Ports and  
Power Outlets  
Video**

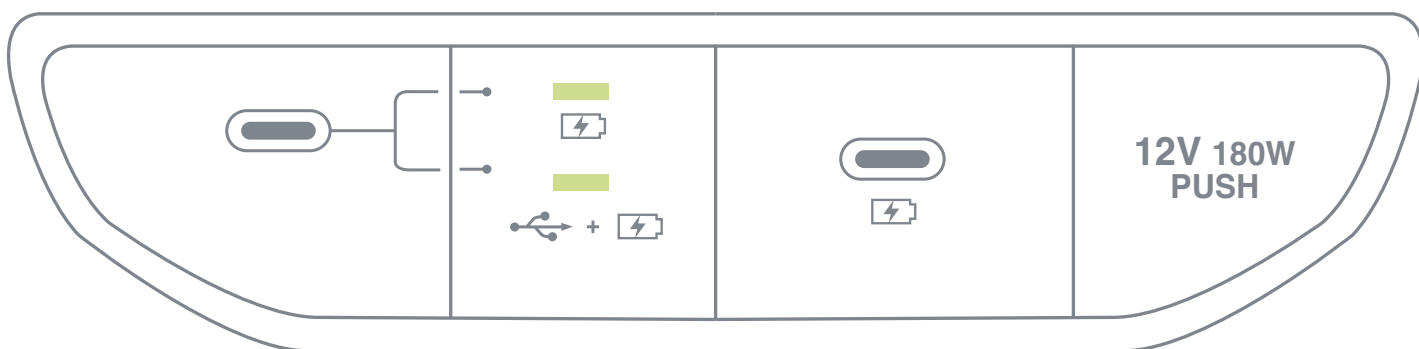

Refer to section 5 in the Owner's Manual for more information.

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.



# USB-C Ports & Power Outlets\*

 
**Multimedia USB-C Port A:** Use the Multimedia USB-C port to connect audio devices and smartphones.



**USB-C Ports and Power Outlets Video**

The USB-C port A can also be used to stream data. Press the button B to cycle between charging and streaming data. When the top LED is illuminated, the port is charging only. When the bottom LED is illuminated, the port is streaming and charging.

**Power Outlets C:** Use the power outlet for mobile phones and other devices designed to operate on a 12V (180W max) power outlet.

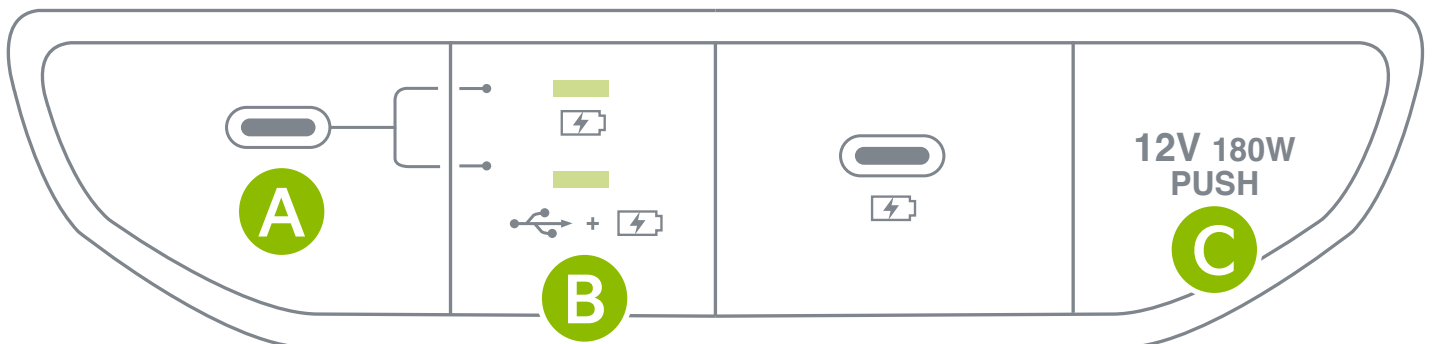

### QUICK TIP

- The power outlets are inactive when ignition is in the OFF position.

### REMINDERS:

- Only use cables made by your device manufacturer. Third party cables may damage your device
- The Multimedia USB-C data port is located to the left of the Power Outlet. The USB Charger Port does not support data transfer

*Refer to section 5 in the Owner's Manual for more information.*

*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.*



## Wireless Smartphone Charging System<sup>\*†22</sup>

 
Charge a compatible Qi<sup>™</sup> Certified smartphone wirelessly by placing it on the charging pad **A** in the front of the center console while the ignition is on.



**Wireless  
Smartphone  
Charging Video**

1. Enable Wireless Charging in the Vehicle Settings on the Infotainment System. Press the SETUP button, VEHICLE to enter Vehicle Settings, CONVENIENCE then select WIRELESS CHARGING SYSTEM FOR MOBILE DEVICES
2. Place a compatible smartphone on the center of the charging pad **A**
3. Indicator light **B** may change to amber once the wireless charging begins
4. Once charging is complete, the amber light may change to green

Requires Qi<sup>™</sup> enabled device or Qi<sup>™</sup>-enabled case

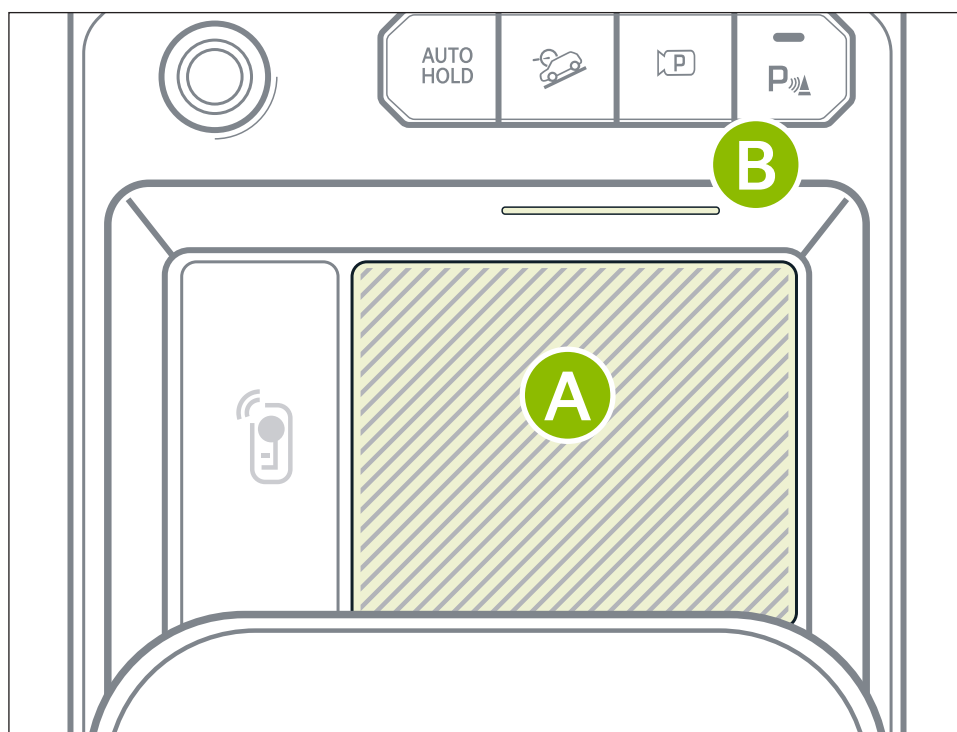

[\*Continued on next page\*](#)

Refer to the section 4 in the Owner's Manual for warnings and instructions.

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.



# Wireless Smartphone Charging System<sup>\*†22</sup>

[\*Continued from previous page\*](#)

### QUICK TIPS

- The smartphone must be a compatible phone with Qi™ function available
- Wireless charging must be enabled in Vehicle Settings
- If wireless charging does not work, move smartphone around the pad until the charging indicator turns amber. Avoid placing other metal items in the bin while charging so as to not to impede the charging area
- Removing the phone case may improve charging efficiency and ensure a secure connection
- For wireless charging to occur, all doors (excluding rear hatch) must be closed and the Smart Key Fob must be detected inside the vehicle

### REMINDERS:

- Some smartphone models are not Qi™ certified, which may effect the speed or performance of the wireless charging
- Wireless charging technology allows for a device to be charged using inductive charging. See your Owner's Manual for more detailed information and the back page for legal disclaimers
- The wireless charger uses inductive charging, which is less efficient than conventional charging through a cable
- **Charging Performance** - Device position on the wireless charging system can affect charging performance. Other factors that may affect the charging rate includes foreign objects, such as coins or pens, and phone case thickness
- If driver door is opened, charging will be disabled

*Refer to the section 4 in the Owner's Manual for warnings and instructions.*

 


# Automatic Climate Control System

- A** Driver ONLY select button
- B** SYNC button - Press to sync the driver and passenger temperature
- C** Infotainment System Screen on/off button
- D** Front-windshield defroster button
- E** Rear-window defroster button
- F** Air intake control button
- G** Air conditioning (A/C) on/off button
- H** AUTO (automatic control) button
- I** Fan speed control/OFF button
- J** Front/rear climate control switching button
- K** MODE selection button
- L** Driver's side temperature control button
- M** Passenger's side temperature control button



Climate Control System Video

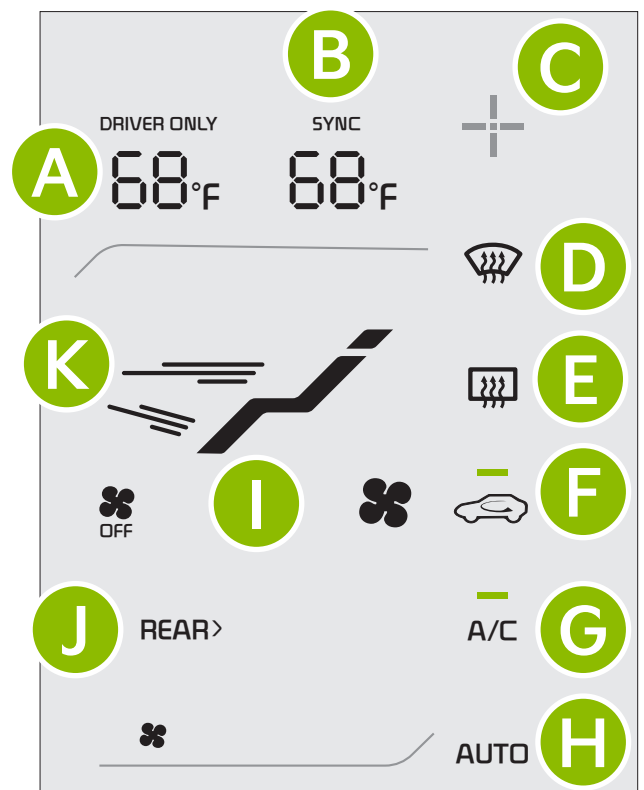

(Climate controls on center dash)

## Climate Control Auto Function

Press AUTO to select Full Auto Operation. The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected. Press the temperature control button **A** to the desired temperature.

[Continued on next page](#)

 
Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 4 in the Owner's Manual for more information.






# Automatic Climate Control System

[Continued from previous page](#)

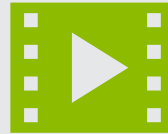



Climate Control System Video

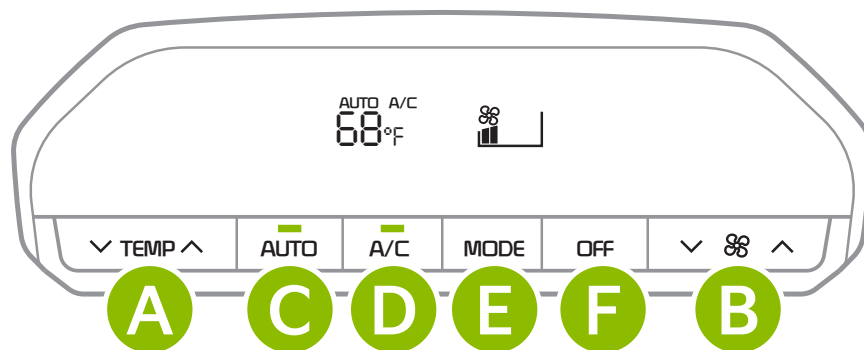 - A** Rear temperature control button
- B** Rear fan speed control button
- C** Rear AUTO (automatic control) button
- D** Rear air conditioning (A/C) button
- E** Rear MODE selection button
- F** Rear climate control OFF button



(Rear passenger climate control panel)

**Auto Defogging System:** Auto defogging is designed to reduce the fogging up of the inside of the windshield by automatically sensing the moisture of the inside of the windshield. The system will automatically change to defrost mode when needed.

Auto Defogging is set ON by default. To cancel Auto Defogging, press and hold the Front Defrost button  for three seconds when the vehicle power is on (the defrost button light will flash three times and the ADS OFF icon will illuminate). To turn Auto Defogging on again, press and hold the Front Defrost button  again for three seconds and the defrost button light will flash six times and ADS OFF icon will turn off.


[Continued on next page](#)

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 4 in the Owner's Manual for more information.

# Automatic Climate Control System

[Continued from previous page](#)


**Driver Only Ventilation:** Driver Only Ventilation restricts air flow to the driver’s side vents only. This can help to improve driving range by limiting the power drawn from the battery. Press DRIVER ONLY button **A** to enable air flow through the driver’s side vents only.



Climate Control System Video

 


## Defrost Outside and/or Inside Windshield:

1. Set Front Fan Speed to the highest position
2. Set **Temperature** **B** to **Hot**
3. Press the **Front Defrost** **C** button 

**Air Flow Modes:** To select Air Flow Modes, press the Mode **D** selection button:

-  Face-Level
-  Bi-Level
-  Floor-Level
-  Floor/Defrost-Level

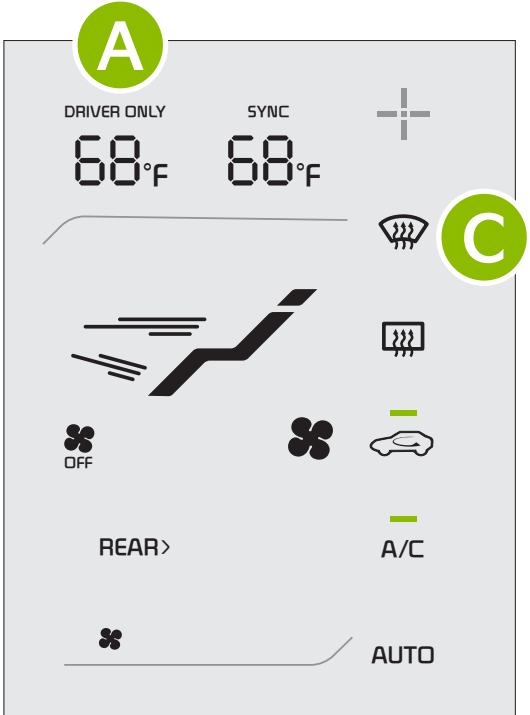

[Continued on next page](#)

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 4 in the Owner’s Manual for more information.


\*IF EQUIPPED



# Automatic Climate Control System

[Continued from previous page](#)

### QUICK TIPS

- Defrost mode  activates A/C and opens Fresh Air Vent to help dehumidify the air and improve defog performance
- During Auto Operation, the A/C indicator will not illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

### REMINDERS:

- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility
- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control
- When in AUTO mode, Air Flow mode and Fan Speed do not display on the Climate Control Display
- Cold or warm ambient air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)
- Continuous use of the A/C and heater may allow the Energy Consumption to increase, especially excessive use of the heater

*Refer to section 5 in the Owner's Manual for more information.*




## Electronic Parking Brake (EPB)

The Electronic Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.




Electronic Parking Brake (EPB) / Auto Hold Video

 
### Applying the Parking Brake

Pull up the EPB switch **A**. Ensure that the indicator light  **BRAKE** is illuminated on the Instrument Cluster.

### Releasing the Parking Brake

The EPB will automatically release when the brake pedal is engaged and shifter is shifted out of Park to Drive, or to Reverse or shifted out of Neutral to Drive, or to Reverse.

Manually, depress the brake pedal, then press the EPB switch **A** down with the ignition switch in the ON position. Ensure that the indicator light  **BRAKE** is OFF.

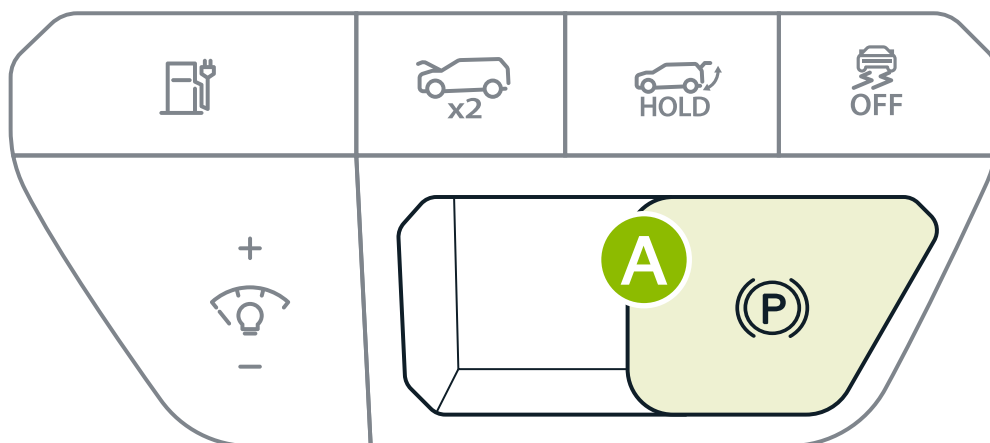

(Located on panel to the left of steering wheel)

### QUICK TIPS

- When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB
- With the EPB system activated, pull up and hold the EPB switch again to increase brake pressure if parked on a decline or incline

[Continued on next page](#)

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.



# Electronic Parking Brake (EPB)

[Continued from previous page](#)

## REMINDERS:

 
- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned on
- If the warning light does not illuminate temporarily, or continues to remain lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving
- A click or electric brake motor sound may be heard while operating or releasing the EPB, but these conditions are normal and indicate that the EPB is functioning properly



Electronic Parking Brake (EPB) / Auto Hold Video

## Auto Hold

Auto Hold temporarily maintains the vehicle at a standstill even if the brake pedal is released. Auto Hold can be turned on/off using the AUTO HOLD switch **A** on the center panel. Before Auto Hold will operate, the driver's door, engine hood and trunk must be closed, and the driver's seat belt must be fastened.

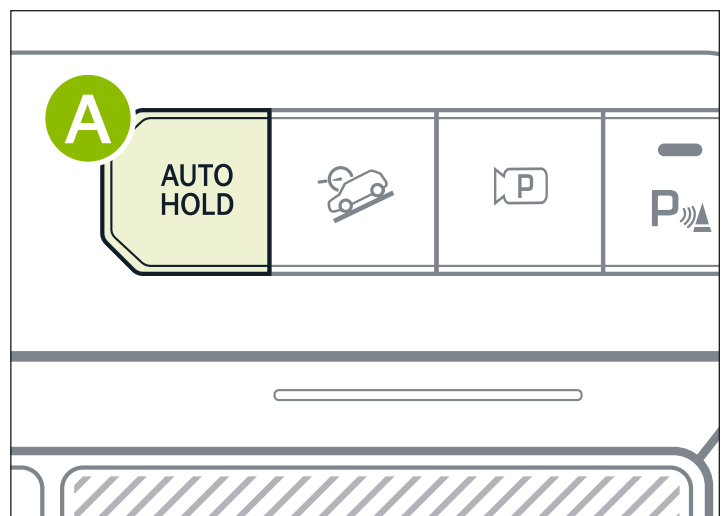

(Located on center console)

The Auto Hold indicator has four states:

**Standby (white):** With vehicle in Park, at a standstill, and AUTO HOLD switch **A** turned ON, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto Hold indicator will remain white.


[Continued on next page](#)

*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.*


## Auto Hold

[Continued from previous page](#)

 
**Engaged (green):** When coming to a complete stop and depressing the brake pedal, the Auto Hold indicator changes from white to green.

**OFF (not illuminated):** The indicator will turn off when the AUTO HOLD switch  is turned off or when the EPB is manually turned on.

**Malfunction (yellow):** When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.



**Electronic Parking Brake (EPB) / Auto Hold Video**

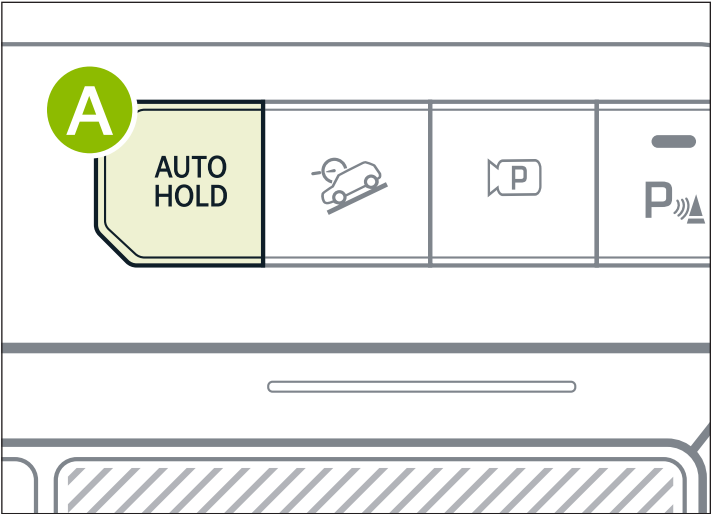

(Located on center console)

### REMINDERS:

- To reduce the risk of an accident, do not activate Auto Hold while driving downhill, backing up or parking your vehicle
- Do not solely rely on the Auto Hold system to keep the vehicle stopped. Always pay attention to traffic and road conditions, and be prepared to depress the brakes
- Auto Hold maintains ON or OFF between ignition cycles
- Auto Hold only operates when vehicle is in Drive, Neutral or Reverse

 
*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.*



## Seat Warmers / Ventilated Seats<sup>\*†15</sup>

(Driver & Front Passenger)


**A Seat Warmers** — Press the top of the button once for high setting (3 amber LEDs lit), again for middle setting (2 amber LEDs lit), again for low setting (1 amber LED lit). Press again to turn OFF.

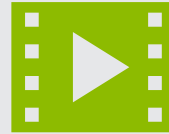


**Seat Warmers /  
Ventilated Seats  
Video**

**B Ventilated Seats** — Press the bottom of the button once for high setting (3 blue LEDs lit), again for middle setting (2 blue LEDs lit), again for low setting (1 blue LED lit). Press again to turn OFF.

 **Rear Seat Warmers** — To turn the rear seat warmers on, press the CLIMATE button on the Infotainment System screen. Then press REAR WARMER, and adjust as needed.

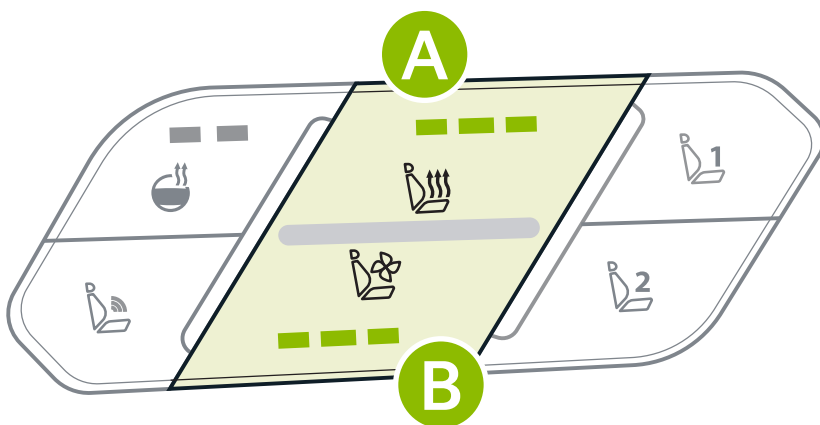

(Located on Driver's Door Panel)

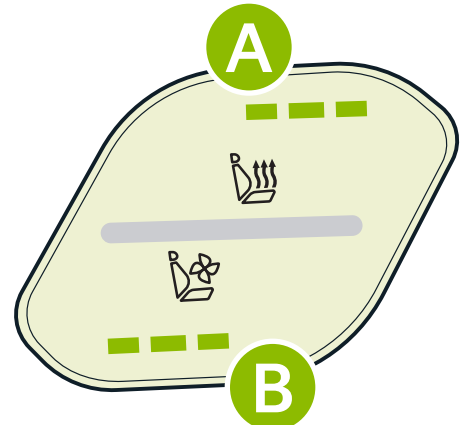 

(Located on Passenger's Door Panel)

### QUICK TIPS

- With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature
- System is OFF by default

### REMINDER:

- Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information
- You can also press and hold buttons to turn off the seat warmer / ventilation

*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.*



 


# Infotainment System Seats Settings\*

To adjust the settings for Seating Easy Access, Seat Position change alert, Smart support, Ergo-motion seat, press the **SETUP** button on the Infotainment Screen. Press the **VEHICLE** button, then SEATS to access the settings.



**2nd-Row Seats Settings Video**

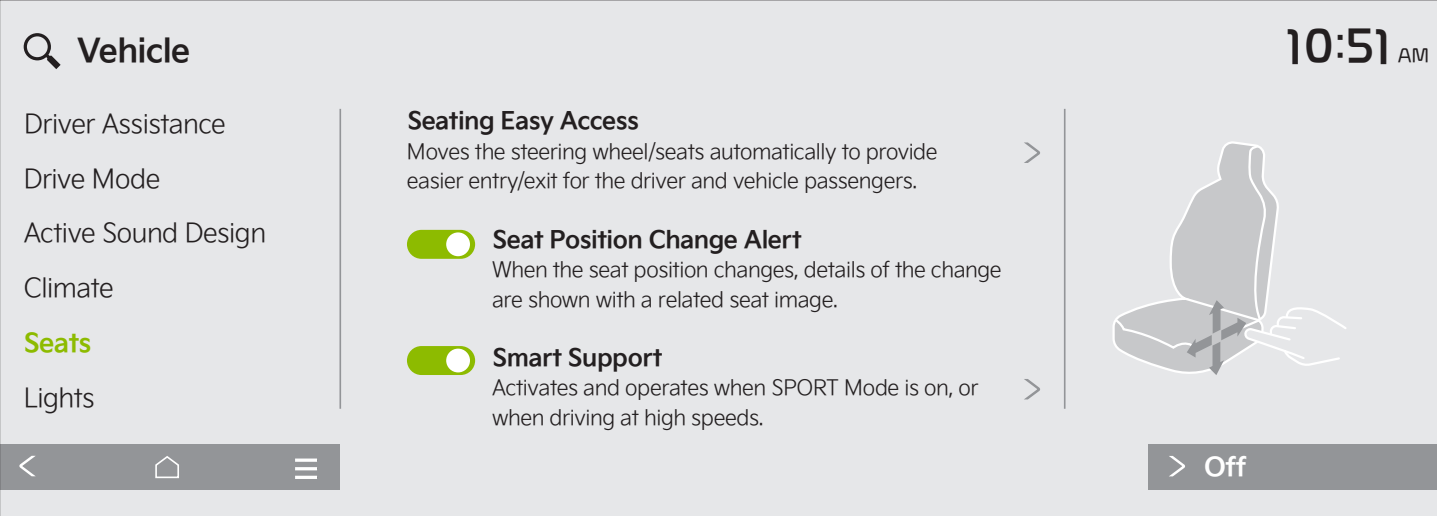

Refer to section 5 in the Owner’s Manual for more information. Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.


# Driver Position Memory System\*

 The integrated system stores into memory the position of the Driver’s Seat, the Outside Rearview Mirrors, Instrument Panel Illumination brightness and Head-Up Display settings.

To store settings into memory,

- 1. Press Park on the Gear Shift with the vehicle power on.
- 2. Adjust the Driver’s Seat, Outside Mirrors and other settings.
- 3. Press and hold one of the memory buttons 1 or 2 **A**.

The system will beep once when memory has been stored.

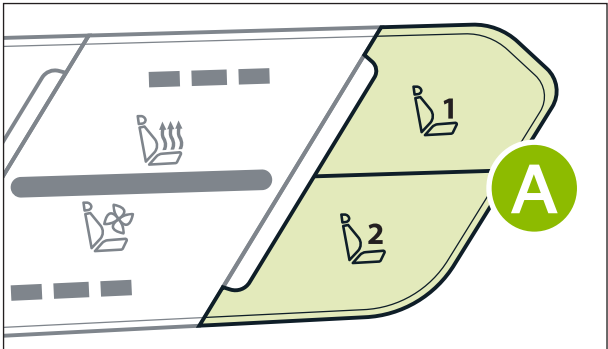

(Located on Driver’s Door Panel)

Refer to section 5 in the Owner’s Manual for more information. Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

\*IF EQUIPPED




# Front Seat Headrest Adjustment<sup>\*†7</sup>

 **To raise headrest:** Pull headrest up.

**To lower headrest:** Press lock **A**, then press the headrest down.

### QUICK TIP

- For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest from underneath.

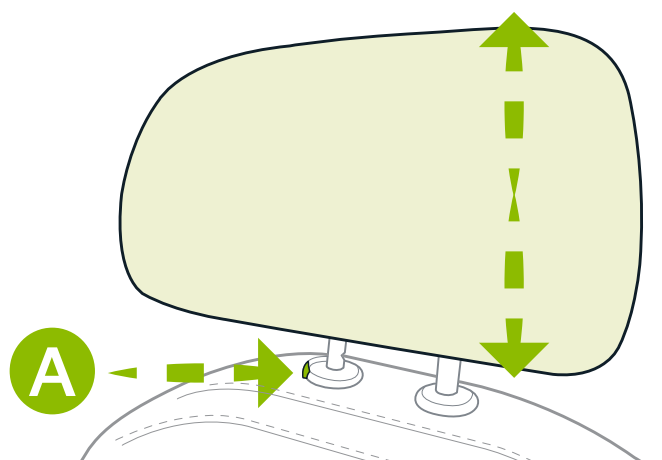

### REMINDERS:


- The headrest only moves up and down as described above. It does not adjust forward or backward
- Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident

Refer to section 4 in the Owner's Manual for more information. Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.




# Power Adjustable Driver's Seat<sup>\*† 13</sup>

 
 
 
Move/Press controls to adjust the Seat forward/backward, the Seat Cushion tilt up/down, the Seatback forward/backward, Lumbar forward/backward/up/down and Leg Support in/out.




2nd-Row Seats:  
Power Switches,  
Walk-In Buttons  
Video




Seats Overview -  
6 & 7 Passenger  
Video

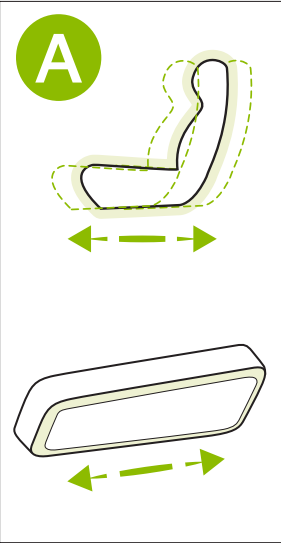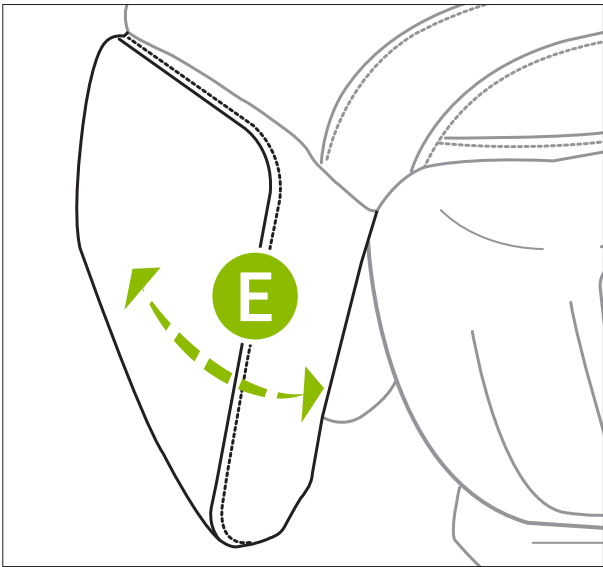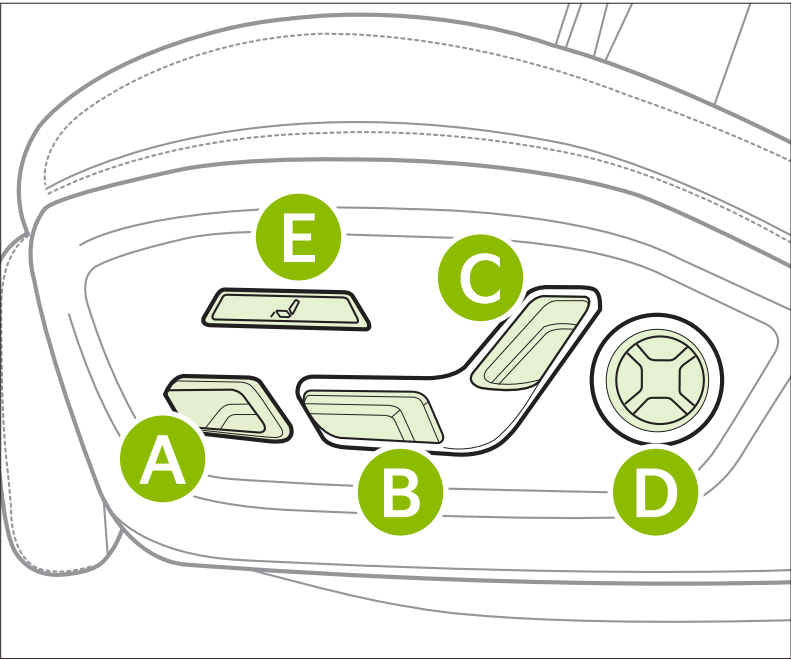


Seat

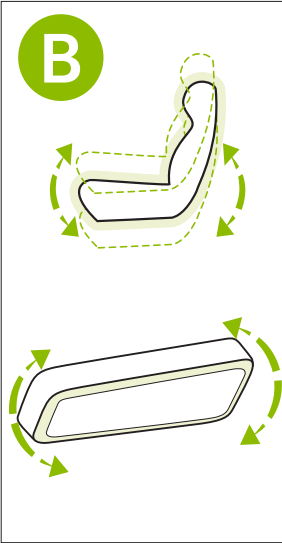 


Seat Cushion

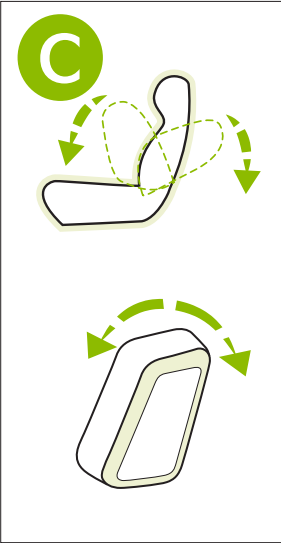 

Seatback

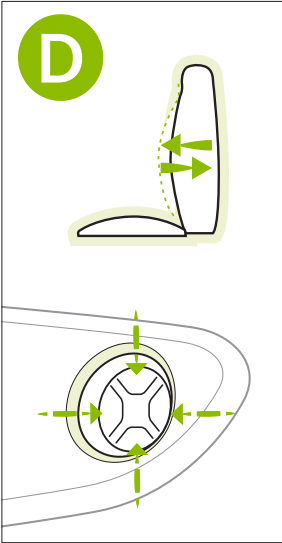 

Lumbar<sup>\*</sup>

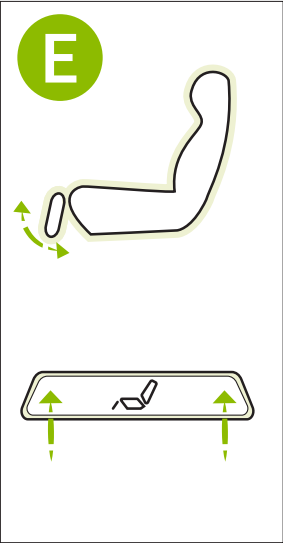 

Relaxation Mode<sup>\*†</sup>

**REMINDER:** Do not attempt to adjust the Seat while the vehicle is moving. This could result in loss of control of the vehicle.

Always keep the seatback in an upright position whenever the vehicle is in motion. If a seat is reclined during an accident, the restraint system's ability to restrain the passenger will be greatly reduced.

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 4 in the Owner's Manual for more information.

<sup>†</sup>LEGAL DISCLAIMERS ON [PAGE 152](#) | <sup>\*</sup>IF EQUIPPED




# Relaxation Seats\* / Ergo Motion\*† 13

 **Relaxation Mode** - Press the rear part of the button **A** to activate Relaxation Mode **B**. Press the front part of the button **C** to return seat to its original position.



**Relaxation Mode  
& Ergo Massage  
Video**

**Ergo Motion Mode** - Press the Ergo Motion button **D** on the door panel to activate the Ergo Motion mode. Press again to turn off.

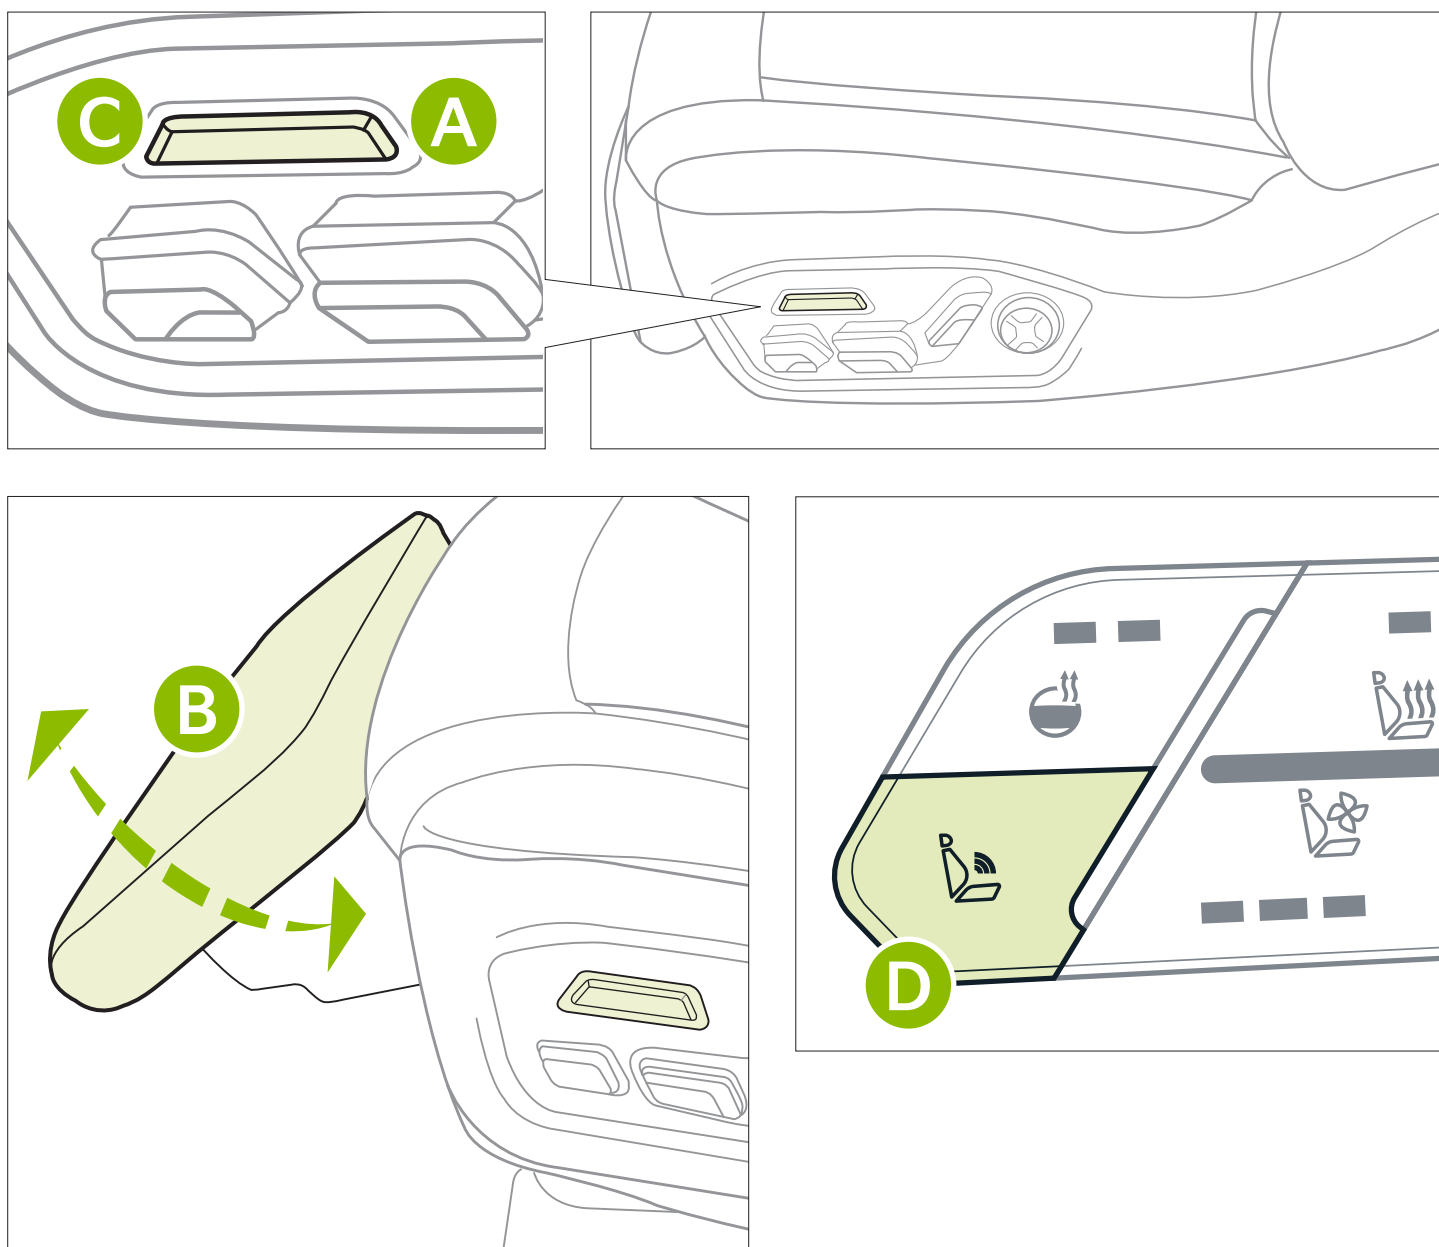

*Do not use Relaxation Mode while the vehicle is moving. Using Relaxation Mode could distract the driver and increase the risk of injuries in the event of a collision or sudden stop.*

*If you operate Relaxation Mode, the seat belt may not adhere to your chest firmly, so use this Mode only when parked/stopped or while resting.*

*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.*



## 2nd-Row Seats - Walk-In Switches

To access the 3rd Row Seats:

 
- Move the 2nd-Row seatbelt to the seatbelt holder
- Press the 2nd-Row Seat Walk-In Switch, located on the 2nd-Row Seat Cushion **A** and the top of the 2nd-Row Seatback **B**




**2nd-Row Seats:  
Power Switches,  
Walk-In Buttons  
Video**

When pressed, the 2nd-Row Seat will tilt and slide forward.

Press switch again to return the 2nd-Row Seat to its original position.

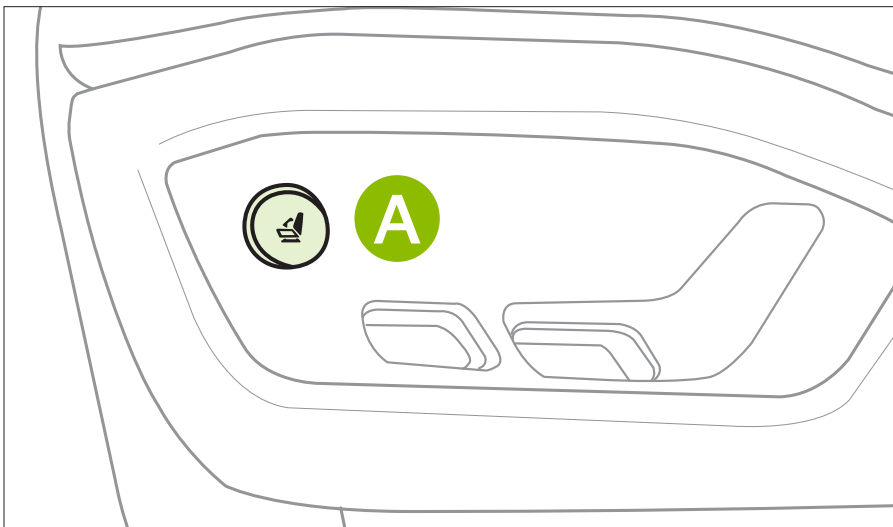

(Located on 2nd Row seat cushion)

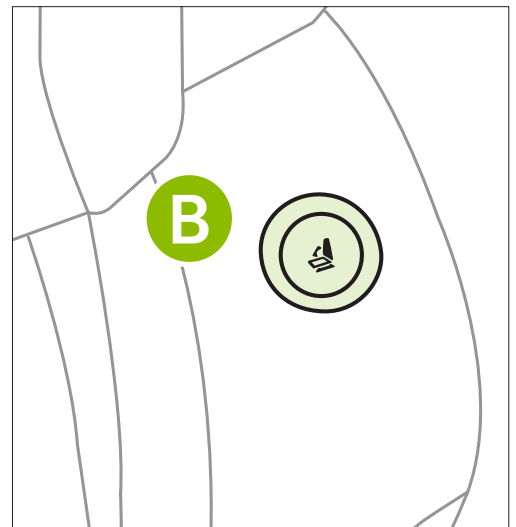 

(Located on the top of the  
2nd-Row Seatback)

[Continued on next page](#)


*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.*

## 2nd-Row Seats - Walk-In Switches

 [\*Continued from previous page\*](#)

To move the 1st-Row Passenger Seat:

- Press the front part of the button **A** to tilt the 1st-Row Seat forward
- Press the rear part of the button **A** to tilt the 1st-Row Seat rearward
- Press the front part of the button **B** to slide the 1st-Row Seat forward
- Press the rear part of the button **B** to slide the 1st-Row Seat backward

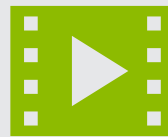

**2nd-Row Seats:  
Power Switches,  
Walk-In Buttons  
Video**



**2nd-Row Seats:  
Settings -  
Infotainment  
System Video**



*(Located on the side of the 1st Row  
Seatback)*

*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.*



## 2nd-Row Seats - Slide and Fold/Unfold

To slide the seats forward/backward, pull up on the lever **A**.



 
 
 
 
Remote Folding/  
Unfolding Seats  
Video

**To Fold/Unfold using the lever **B**:**

1. Lower the rear headrest(s) to the lowest position
2. Pull up on the folding lever to fold the seatback
3. Release the lever to secure it, and ensure the seatback is secure
4. To unfold, hold the folding lever while returning the seatback to a secure position, and then release the lever

To fold the seat use the Seat Folding button **C** in the cargo area.

**REMINDER:** Always make sure the Seatback is locked in place when unfolded.

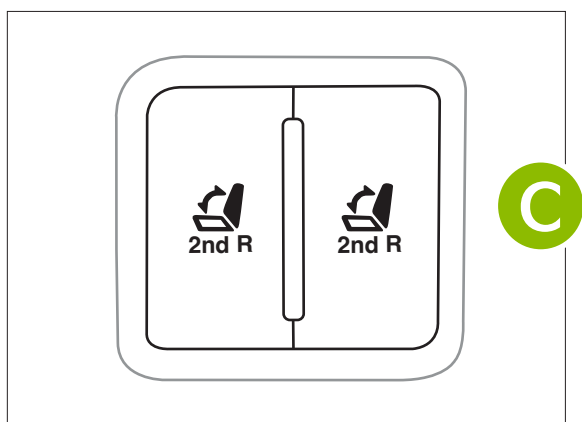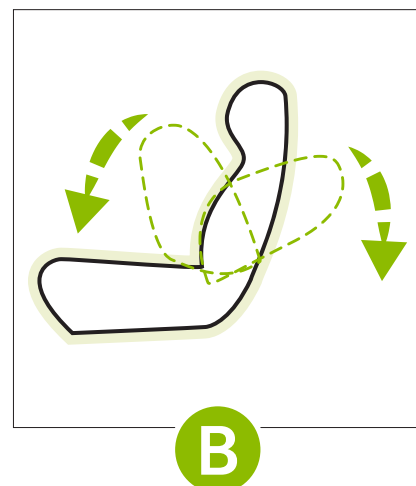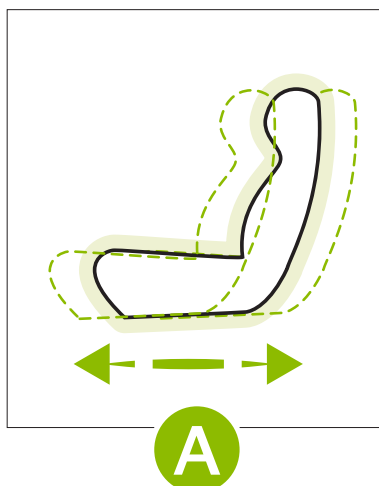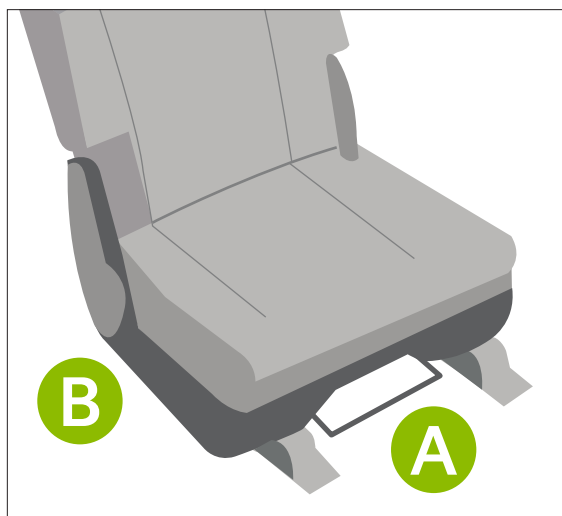

*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 4 in the Owner's Manual for more information.*





### 3rd-Row Seats - Reclining and Folding

To tilt the 3rd-Row seats while sitting, lean forward and pull on the adjustment strap located on the side of the 3rd-Row seatback **A**, and adjust the seatback.

Then release to secure the seatback.

To fold the 3rd-Row seats, from the cargo area, pull on the seat folding straps **B**.

 
 
To unfold, return the seat to its original position, then pull on the strap to adjust the seatback. Release the strap to secure in place. Unfold the headrest.



**Reclining & Folding  
Seats Video**

#### QUICK TIPS

- After adjusting seats, gently rock the seat back and forth to ensure it is secured in place.
- Always make sure the seatback is locked in place when unfolded.

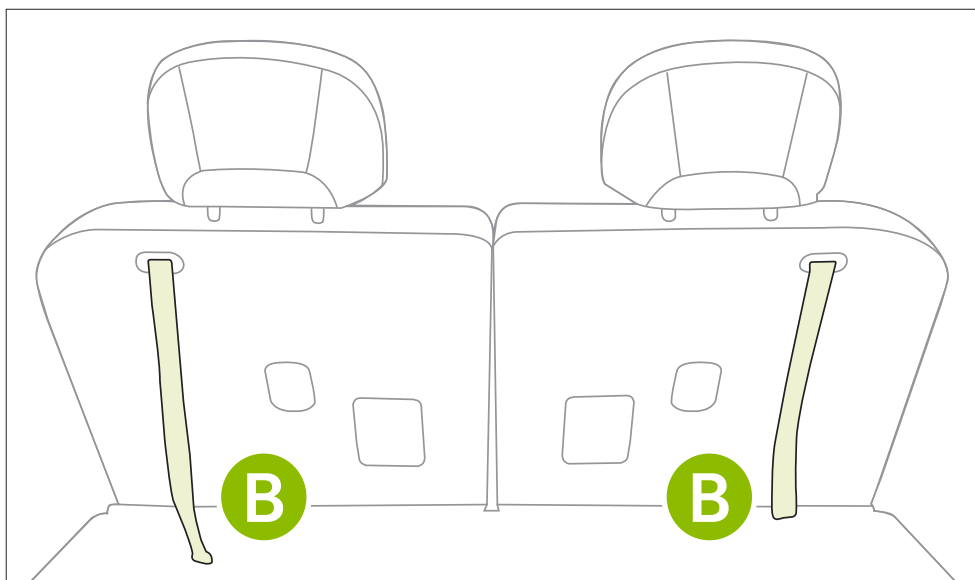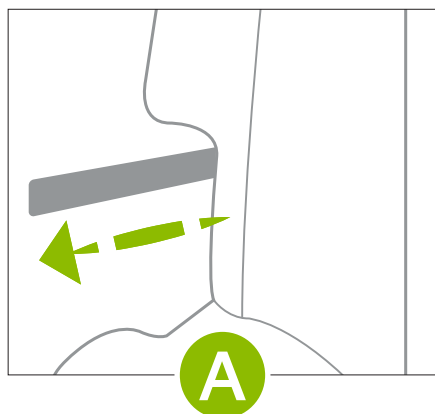


*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 4 in the Owner's Manual for more information.*




# Rear Occupant Alert (ROA) with Door Monitoring<sup>†11</sup>

 Rear Occupant Alert (ROA) with Door Monitoring can help alert the driver when a rear passenger may be left in the vehicle. The alert will be a message on the Instrument Cluster stating to “Check rear seats” **A** and an alert will sound.

The factory default is set to ON. To turn the system on or off, go to Vehicle Settings on the Infotainment System by selecting SETUP, VEHICLE, CONVENIENCE, then REAR OCCUPANT ALERT and check/uncheck the box.

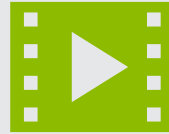

**Rear Occupant Alert (ROA) with Door Monitoring video**

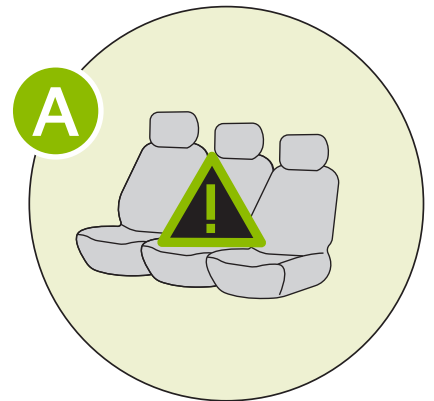 

(Message on Cluster Display)

### REMINDERS:

- Always be sure to check the passenger areas before leaving the vehicle
- ROA uses a rear door opened/closed history, which is reset after the driver turns the vehicle off, exits the vehicle and locks the door remotely. So even if a rear door does not reopen, Rear Occupant Alert (ROA) alert can occur
- ROA notifications also require a Kia Connect<sup>†1</sup> subscription, a compatible smartphone, and a wireless signal with good coverage to function. Normal cellular service rates may apply

*When engaged, Rear Occupant Alert is not a substitute for one's attention within the vehicle. Always check the vehicle interior when exiting the vehicle.*

*See section 5 in the Owner's Manual for more information. Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.*



### Full Display Mirror (FDM)\*

 
The Full Display Mirror® (FDM)®\* is a 9.6-inch wide conventional optical and digital mirror. To switch between optical and digital (camera view) modes, push or pull the lever **A**.



**Full Display Mirror (FDM) Video**

- A** Mode switching lever
- B** Camera indicator showing the camera is operating normally
- C** Display area showing the setting adjustment - brightness and tilt
- D** Menu button - Press to show display area and select item to adjust
- E** Select/adjustment button - Press to select/adjust item displayed

**REMINDER:** The digital mode is operable when the EV Power button is in the ON/START mode. The display turns off when the EV Power button is switched to other modes.

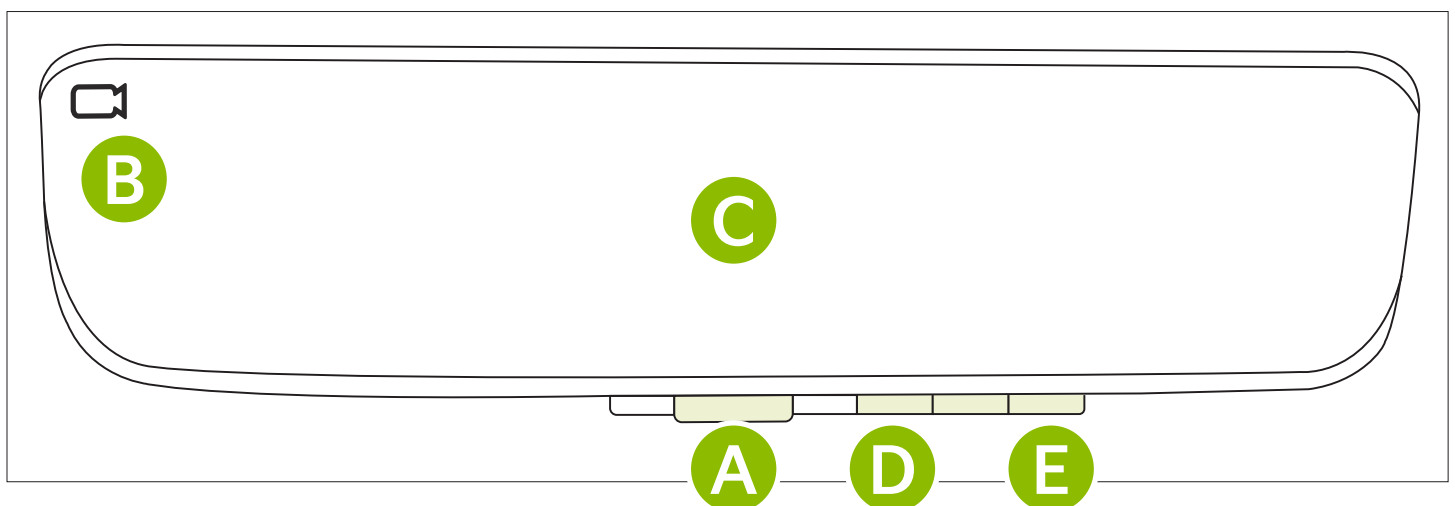

See section 5 in the Owner's Manual for more information. Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.




## HomeLink<sup>®</sup>†<sup>3</sup> with Auto-Dimming Rearview Mirror\*

 The HomeLink<sup>®</sup> / Auto-Dimming Rearview Mirror\* is designed to reduce glare from a vehicle's headlights located in the rear and also connect up to three electronic transmitters into one location.



HomeLink<sup>®</sup>  
Support Link

- A** HomeLink<sup>®</sup> Channel 1
- B** HomeLink<sup>®</sup> Channel 2
- C** HomeLink<sup>®</sup> Channel 3
- D** Garage Door Opener Status Indicator: Closing or Closed
- E** HomeLink<sup>®</sup> Operation Indicator
- F** Garage Door Opener Status Indicator: Opening or Open
- G** HomeLink<sup>®</sup> User Interface Indicator

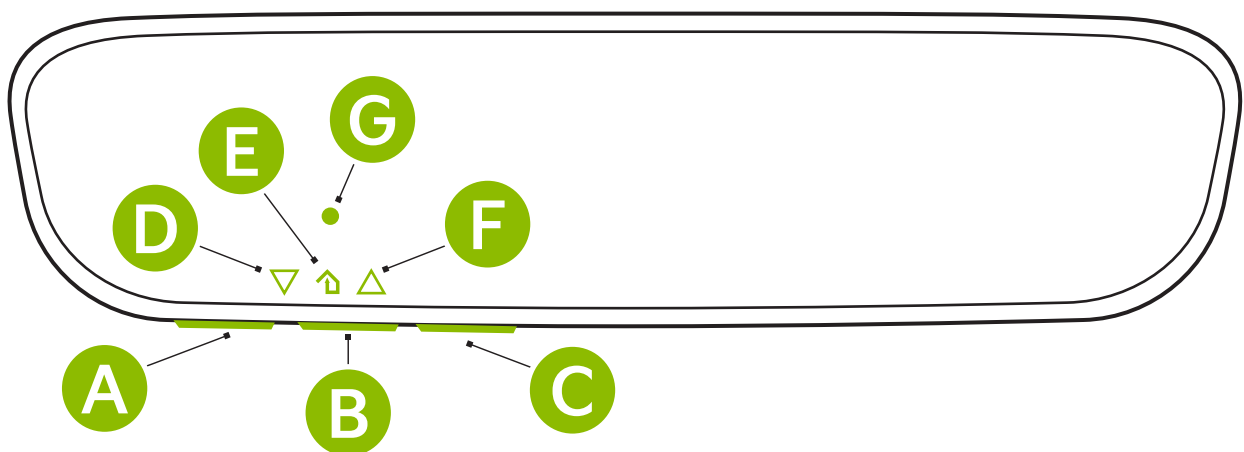

[Continued on next page](#)

If your garage door opener was manufactured in 2011 or later, and you're unable to program your vehicle's HomeLink<sup>®</sup> system, you may need to purchase a HomeLink Repeater Kit.

For more information, go to [www.HomeLink.com](http://www.HomeLink.com) or call (800) 355-3515.

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

# HomeLink<sup>®†3</sup> with Auto-Dimming Rearview Mirror\*

[Continued from previous page](#)

## How to Sync Transmitter with HomeLink<sup>®\*</sup>

 


HomeLink<sup>®</sup>  
Support Link

If programming for the first time, begin with Step 1 (repeating this step will delete all information).

To program non-rolling and rolling code garage door openers and other devices:

1. Press and hold the left **A** and **B** buttons simultaneously until the indicator light **C** begins to flash (to reprogram buttons, skip this step)
2. Press and hold the desired button **A** **D** or **B** and hold the button on the transmitter while it is approximately 1 to 3 inches away from the mirror. The HomeLink<sup>®</sup> Indicator light **E** will flash rapidly once the frequency signal has been successfully programmed

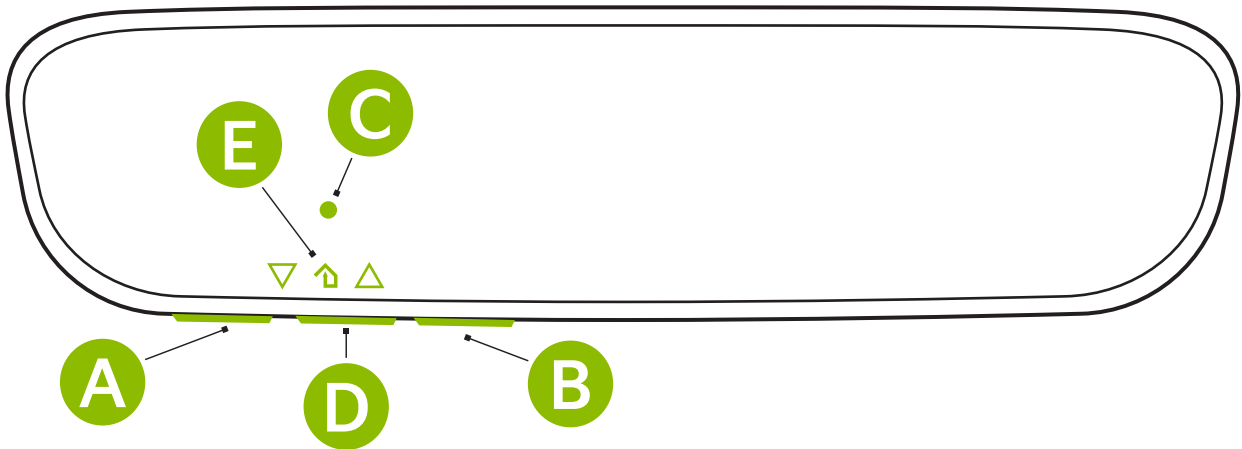

### QUICK TIPS

- You can reprogram a single HomeLink<sup>®</sup> button by repeating Step 2
- Erasing the programmed buttons will delete all trained transmitters

[Continued on next page](#)

For more information, go to [www.HomeLink.com](http://www.HomeLink.com) or call (800) 355-3515.

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

†LEGAL DISCLAIMERS ON [PAGE 152](#) | \*IF EQUIPPED

## HomeLink<sup>®†3</sup> with Auto-Dimming Rearview Mirror\*

[Continued from previous page](#)

To finish programming rolling code garage door openers, complete these steps:

 
3. Locate the “learn” or “smart” button on the garage door’s motor head unit. Press and release the button and complete Step 4 within 30 seconds
4. Firmly press and release the programmed HomeLink<sup>®</sup> button up to three times

### Operating HomeLink<sup>®</sup>:

Press one of the programmed HomeLink<sup>®</sup> buttons.

### Erasing programmed buttons:

Press and hold the **A** and **B** buttons simultaneously for approximately 20 seconds, and then release both buttons within 30 seconds.

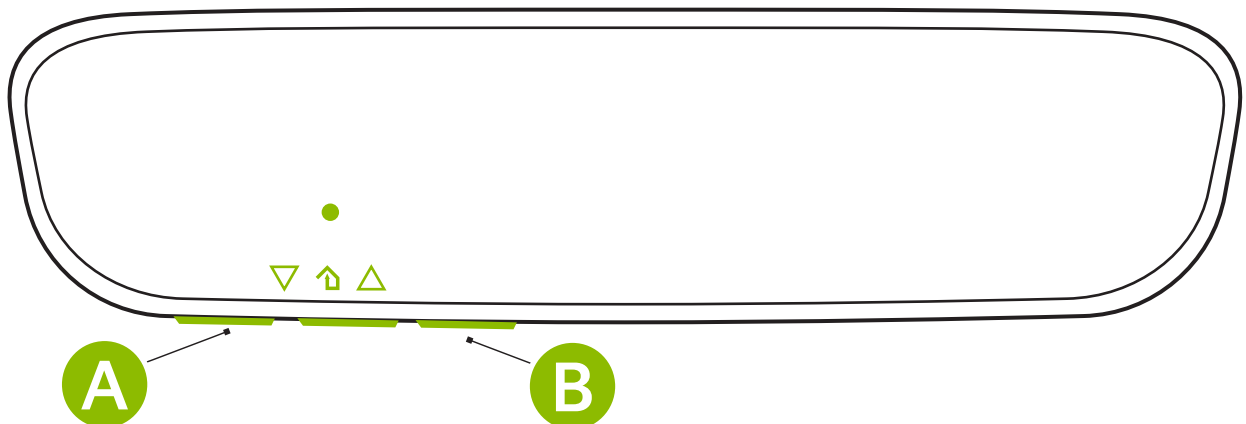

*If your garage door opener was manufactured in 2011 or later, and you're unable to program your vehicle's HomeLink<sup>®</sup> system, you may need to purchase a HomeLink Repeater Kit.*

*For more information, go to [www.HomeLink.com](http://www.HomeLink.com) or call (800) 355-3515.*

*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.*





## OTHER KEY FEATURES
  
### Electronic Hood / 12V Battery Access

**Opening the Hood:** Press the hood unlock button **A**, located on the Instrument Panel. Press it again within 3 seconds to unlock the hood. Then lift the unlocked hood upwards, halfway and release it to open fully by itself.

The Hood may also be unlocked by pressing and holding the hood unlock button **B** on the Smart Key for approximately 1.5 seconds. After unlocking the Hood, lift the Hood upwards.

**To Close the Hood:** Lower the Hood and firmly push it down.

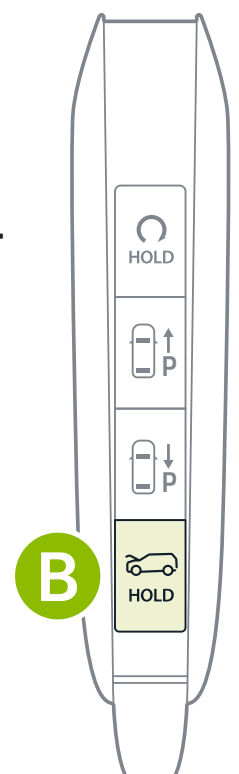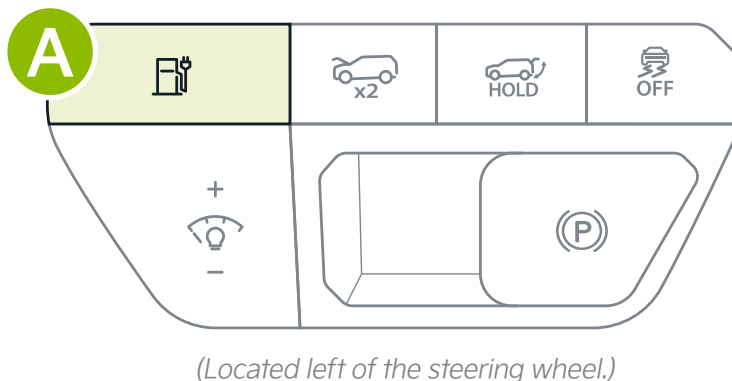


**Electronic Hood / Frunk - Smart Key, Hood Open Button Video**



**12V Battery Access & Manually Opening the Hood Video**

### Sun Visor<sup>†19</sup>

 Use the Sun Visor to shield direct light through the front or side windows. Slide the Sun Visor out and adjust as needed.

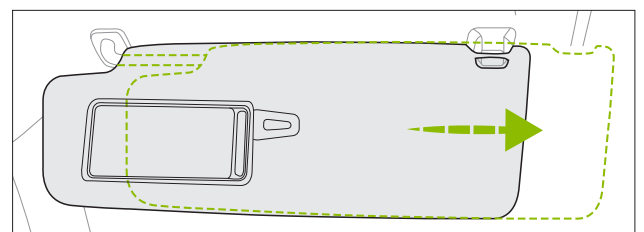

#### REMINDERS:

- Sun Visor may not shield all direct light
- Do not operate the vehicle if Sun Visor is impairing your visibility
- Be aware of your seating position when adjusting or swinging Sun Visor around from the front or side windows

*Refer to section 4 in the Owner's Manual for more information. Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.*





## Exterior Flush Door Handle Operation

**Manual Type** - To unlock the driver's door, with the Smart Key in your possession:

- Push the engraved button **A** on the door handle - the hazard lights will blink twice, a chime will sound twice, and the door unlocks
- Press on the front of the door handle. Then the rear handle will pop out
- Pull on the door handle to open the door

To lock the doors using the Smart Key, press the lock button **B**.

**Electric type** - When the "Approach Unlock" feature is activated in Vehicle Settings, the door handles will pop out when you approach the vehicle with the Smart Key in your possession.

 
 
**To activate the "Approach Unlock" feature:** press the SETUP button on the Infotainment System. Select VEHICLE, then DOOR and select APPROACH UNLOCK.

When you're within one foot of the vehicle with the Smart Key in your possession, the outside door handles will slide out, the doors will unlock, the Hazard Warning Flashers will blink twice, and a chime will sound twice. Then pull the door handle to open the door.

To lock the electric door handles, press the sensor/engraved button **A** on the door handle or use the lock button on the Smart Key.



Exterior Flush  
Door Handles  
Video

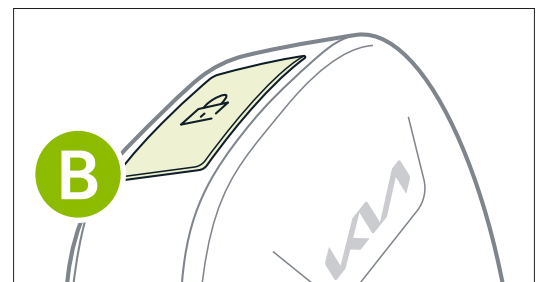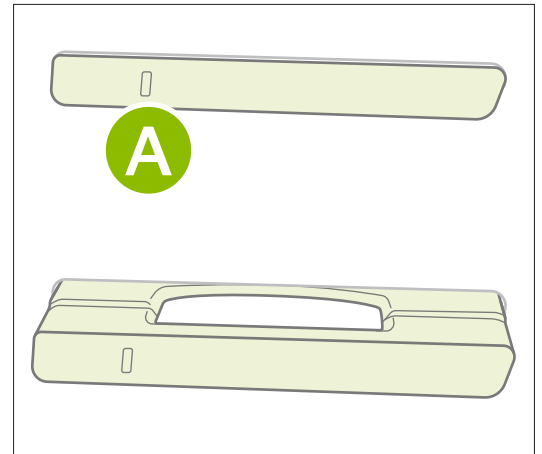

[Continued on next page](#)

*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.*



# Exterior Flush Door Handle Operation

[\*Continued from previous page\*](#)

### QUICK TIP

- To remove ice from door handles, tap around the door handle perimeter using your hand until the door handle pops out. Press in and pull out a few times to remove any ice residue

### REMINDER:

- After unlocking the doors, if one of the doors has not been opened, the doors will re-lock automatically after 30 seconds.

 
 


## Smart Key with Remote Start / Remote Smart Parking Assist (RSPA)<sup>†10</sup>


- A** Press to lock All Doors. Press twice within 2 seconds to sound the horn
- B** With 2-Press Unlock enabled, to unlock Driver's Door only, press once. Press twice in 4 seconds to unlock All Doors (To change the setting of the 2-Press Unlock feature, go to Vehicle Settings, Door, then 2-Press Unlock)
- C** Press and hold for more than 1 second to unlock Liftgate. **Manual liftgate:** Lift the Liftgate handle to manually open Liftgate

**REMINDER:** The Liftgate unlocks when the Smart Key fob is within close proximity of the vehicle Liftgate.


- D** Press and hold more than 0.5 seconds (half a second) for Panic Alarm. To turn off Alarm, press any button
- E Emergency Key:**
- Use to lock/unlock Driver's Door by turning once or all doors by turning twice
  - Use to enable/disable Child Safety Locks
  - Use to unlatch rear center seatbelt lower anchor

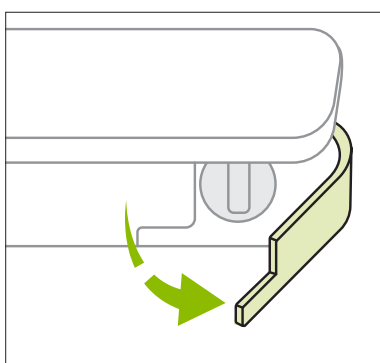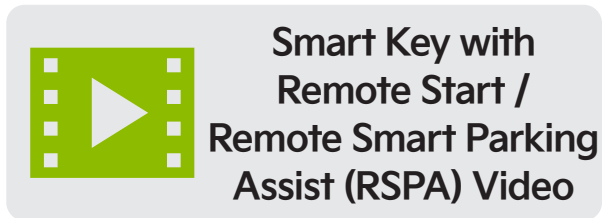

 With handle open, pull cover open to reveal keyhole.

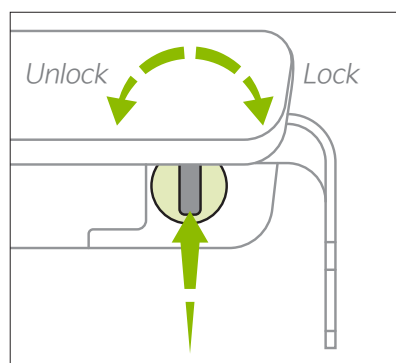

 Insert Emergency Key. Turn key to lock/unlock.

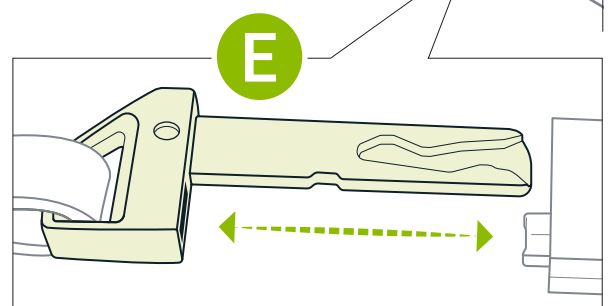

[Continued on next page](#)


Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

# Smart Key with Remote Start / Remote Smart Parking Assist (RSPA)<sup>†10</sup>

 
[Continued from previous page](#)

**A Remote Start\***: Lock the doors by pressing the door lock button **B** within 32 feet distance from the vehicle. Within four (4) seconds of pressing the door lock button **B**, press and hold the Remote Start button **A** for more than two (2) seconds to start the vehicle. To stop the Remote Start operation, press the button again. If the driver does not enter vehicle within ten (10) minutes of starting the vehicle, the vehicle will automatically turn off.

**Remote Smart Parking Assist (RSPA)\*** - To park or exit a parking space remotely press **C** and **D** as needed, see instructions on [page 69](#).

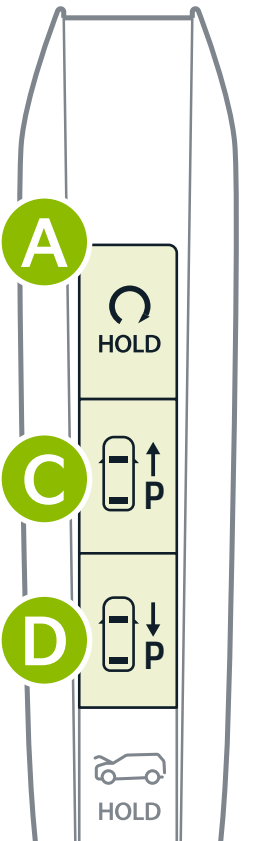

(Back edge of key fob)

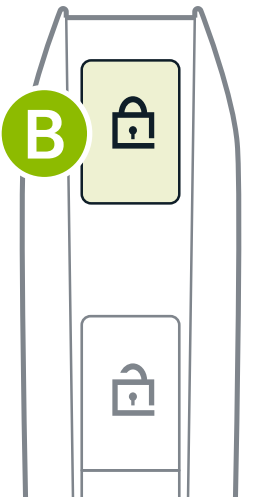 

(Front edge of key fob)

## QUICK TIPS

- If the battery is weak or the smart key is not working properly, check that the shift lever is in the P(Park) position. Place the Smart Key on the key recognition area located on the center console, and then press the Power button for about 10 seconds in the ACC state. With the vehicle in the off position, restart the vehicle
- The Smart Key’s signal can be blocked by the normal operation of a cell phone or smartphone. To help prevent this, store each device separately
- Remote button configuration may vary depending on vehicle options
- One/two button press or mechanical key turn logic can be changed in Vehicle Settings
- When reinserting the mechanical key in its holder, make sure it is pushed all the way in until there is a click sound

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 4 in the Owner’s Manual for more information.

<sup>†</sup>LEGAL DISCLAIMERS ON [PAGE 152](#) | <sup>\*</sup>IF EQUIPPED



### Digital Key 2<sup>\*†3</sup>

Digital Key 2, through your smartphone, can be used to lock and unlock your vehicle and allow you to start or power off your vehicle, without needing to have a key fob.

 
#### Digital Key 2 Setup for Smartphones with Ultra-Wide Band Technology (UWB):

1. First, ensure your Smart Key is inside the vehicle and turn the vehicle on
2. Download the Kia Access App, start an account, and activate Kia Connect<sup>†1</sup> in your vehicle's Infotainment System
3. Open the Kia Access App and select DIGITAL KEYS **A**
4. Press CREATE OWNER KEY
5. When your vehicle's infotainment system detects your device, the CONTINUE TO WALLET APP button will illuminate. Select it to open the wallet app
6. Press CONTINUE and the wallet app will pair and add your digital key


**REMINDER:** Actual steps may vary between devices.



Digital Key 2  
Operation Video

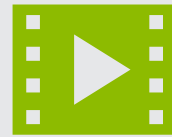

 Digital Key 2  
Setup, Registration  
& Sharing Video

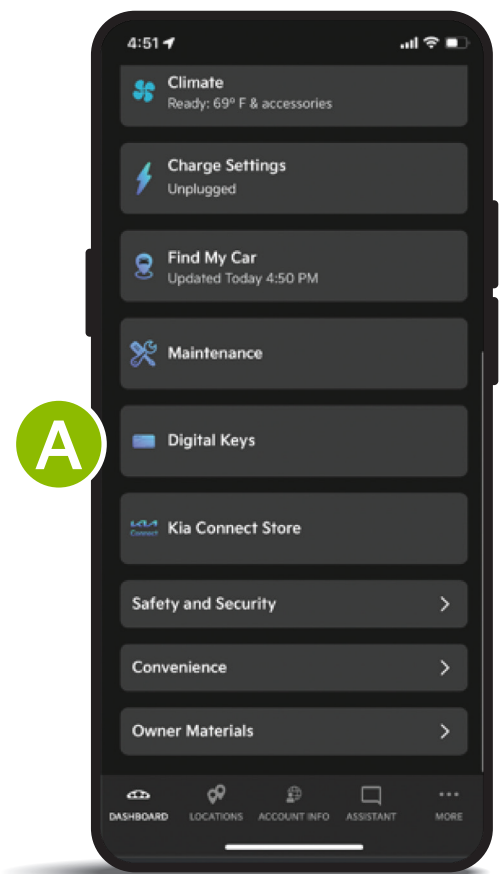

[Continued on next page](#)

*Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device.*

*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.*

# Digital Key 2<sup>\*†3</sup>

[Continued from previous page](#)

## Digital Key 2 Setup for Smart-phones without Ultra-Wide Band Technology (UWB):

1. Download the Kia Access App, start an account, and activate Kia Connect<sup>†1</sup> in your vehicle’s Infotainment System
2. Ensure your Smart Key is inside the vehicle and vehicle is on
3. On the vehicle’s **Infotainment System**, select SETUP
4. Press VEHICLE, then DIGITAL KEY
5. Select SMARTPHONE and MY SMARTPHONE KEY
6. Open the **Kia Access App** and select DIGITAL KEY
7. Press CREATE OWNER KEY and place your smartphone in the authentication pad (wireless charging pad) **A** to complete registration
8. Click SAVE on the Infotainment System and a message will appear showing the process is in place
9. When your vehicle’s infotainment system detects your device, the CONTINUE TO WALLET APP button will illuminate. Select it to open the wallet app
10. Press CONTINUE and the wallet app will pair and add your digital key
11. When the Infotainment System is done pairing, remove the smartphone and continue the steps to open the Digital Key in your smartphone’s wallet app



(Charging pad located in center console)

[Continued on next page](#)

### QUICK TIP

- When in the wallet app, click on the Digital Key and select the menu icon to adjust other settings or use other features

**REMINDER:** Actual steps may vary between devices.

*Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device. Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.*

†LEGAL DISCLAIMERS ON [PAGE 152](#) | \*IF EQUIPPED





# Digital Key 2<sup>\*†3</sup>

[Continued from previous page](#)

### Using your Digital Key 2 (Smartphones with UWB):

1. To unlock your vehicle, simply have your smartphone on your person and as you approach the driver's door, the doors will unlock
2. To start your vehicle with Digital Key 2, with your smartphone in the vehicle, press the brake pedal and the Engine Start/Stop button

### Sharing your Digital Key 2:

1. Open the wallet app, click on the Kia Digital Key and select the menu icon to enter settings
2. Press INVITE and SET ACCESS, to set the level of access of the shared Digital Key. The default is "unlock and drive," or you can select "unlock only"
3. Then select INVITE and input the name of the contact to whom you want to send the Digital Key
4. Select SEND, and CONFIRM to share your Digital Key. The invitation will show pending, until your contact has accepted the invitation and activated the shared Digital Key

When sharing a Digital Key, the receiver of the share invitation must have the same smartphone operating system, e.g., Apple® to Apple® and Samsung™ to Samsung™.

**Revoking shared Digital Key access:** You can also revoke a digital key using the wallet app on your smartphone. Open the wallet app, click on the **Kia Digital Key** and select the menu icon to enter settings. Select the contact and click on **Revoke Access**.

**To delete shared keys and the owner key:** Go to the Vehicle Settings\* on the Infotainment System. Press SETUP, VEHICLE, DIGITAL KEYS, SMARTPHONE KEY, SMARTPHONE KEY. Select the Digital Key and press DELETE.

**REMINDER:** Actual steps may vary between devices.

*Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device.*

[Continued on next page](#)





# Digital Key 2<sup>\*†3</sup>

[Continued from previous page](#)

### QUICK TIPS

- You can set the Access for the Shared Digital Key before inviting the contact
- If the smart phone digital key does not operate, move the smart phone around the door handle slowly until it vibrates

### REMINDERS:

- Digital Key 2 is currently only compatible with Apple iPhone® & iWatch®, Google™ Wallet and Samsung™ smartphones
- Your iPhone® Wallet or Samsung Wallet app content may vary as the apps are updated. The actual steps for Digital Key 2 setup, usage and sharing may change
- During the Digital Key saving process, the process will cancel when:
  - The smart phone is removed from the in-vehicle authentication pad
  - Changing the infotainment system screen
  - The vehicle is powered off or the gear is shifted
  - There is no smart key (saving process will not begin)
- You may need to set up language for Samsung smartphones
- Currently compatible devices:
  - For **Apple iPhone®** (Ensure the device has the latest version of iOS®):
    - iPhone XS® or later.
    - iPhone 11 Pro® or later (for passive entry or remote features on compatible cars)
  - For **Apple Watch®** (Ensure the device has the latest version of watchOS®):
    - Apple Watch Series 5® or later
    - Apple Watch Series 6® or later (for passive entry or remote features on compatible cars)
  - For **Samsung™ Phones:** Ensure the device has the latest version of Android OS™ and latest application version of Samsung™ Wallet)
    - Galaxy S20™ or later
    - Galaxy Note20 5G™ or later
    - Galaxy Z Flip 5G™ or later
    - Galaxy Fold 2™ or later
  - For **Google™ Smartphones:** Ensure the device has the latest version of Google™ operating system and latest application version of Google™ Wallet

*Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device.*

 


## OTHER KEY FEATURES

### Finger Print Module (FPM)

Use the FPM to access driver profile, personal information and exit valet mode.


To enroll a driver's fingerprint, go to DRIVER'S PROFILE in the Infotainment System:

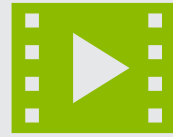

**Finger Print  
Module (FPM)  
Video**

1. Press Driver 1, Security
2. Press Fingerprint Identification, Set/Delete Fingerprint, then Set Password. Then press Consent and Settings
3. Place finger on sensor **A**
4. Follow onscreen instructions until scanning is complete
5. When the message "Saving Fingerprint" appears and the status is displayed on the Infotainment System screen, enrollment is complete

 **REMINDER:** A maximum of two fingerprints can be enrolled.

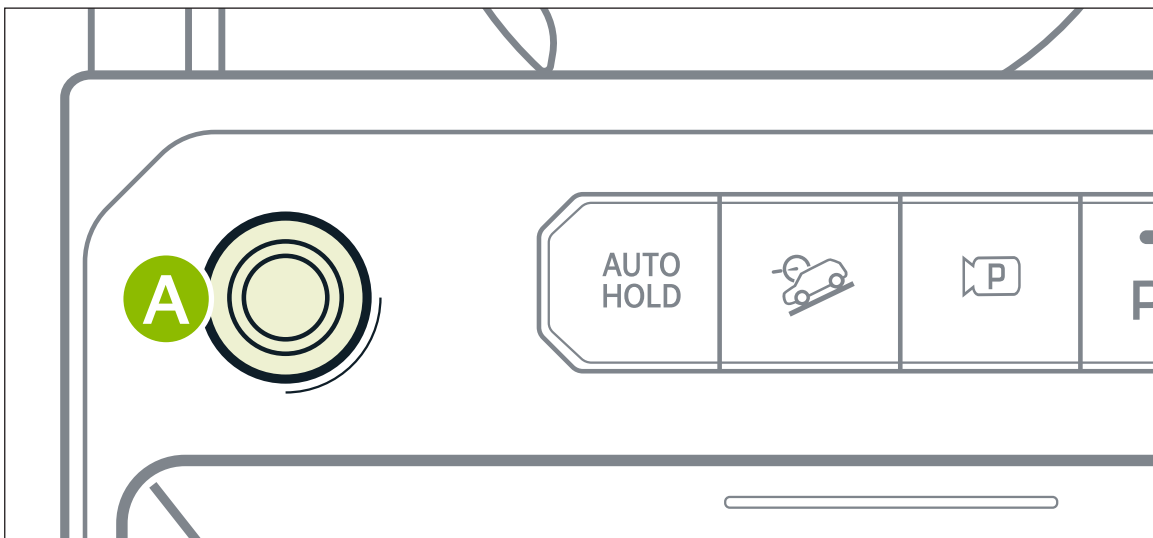

(Button on center console)

Refer to section 5 in the Owner's Manual for more information. Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.



### Smart Power Liftgate<sup>\*†17</sup>

 
The Smart Power Liftgate can be operated from several controls to either open, close or lock the Liftgate. The Smart Power Liftgate will close the

Liftgate, lock all doors and Liftgate and then activate the security system.

#### Approach Unlock (Opening with no-touch activation):

When the Smart Key fob is on your person and you are near the back of the vehicle, within close proximity, the hazard lights will blink and a chime will sound for about 3 seconds as an alert that the Smart Power Liftgate is about to open. Then the alert system will blink and chime two additional times before opening the Smart Power Liftgate.

**Opening/Closing from Inside the Vehicle:** Press and hold the Smart Power Liftgate Open/Close button\* **A** to automatically open/close the Liftgate.

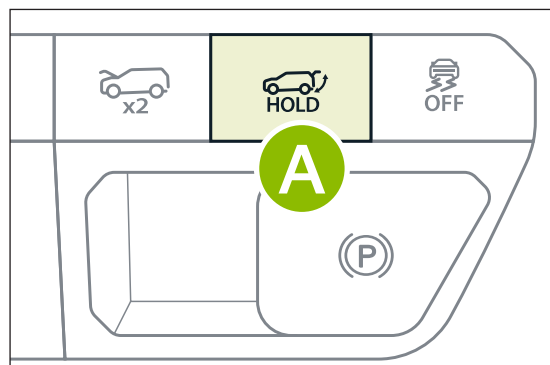

(Button on driver's panel to the left of steering wheel)

#### QUICK TIP

- To cancel the Smart Power Liftgate while automatically opening or closing, press any button on the Smart Key fob.

[Continued on next page](#)

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.



## Smart Power Liftgate<sup>\*†17</sup>

[Continued from previous page](#)

### Opening/Closing from Outside

**the Vehicle:** To open the Smart Power Liftgate automatically, press the Liftgate Release button **A** on the exterior of the Liftgate. Automatically close by pressing the Smart Power Liftgate Close button\* **B** located inside the Liftgate lid.

 
**Liftgate Settings:** The Smart Power Liftgate is OFF by default. To adjust the settings for Opening Height and Opening

Speed, press the **SETUP** button on the Infotainment System. Select the onscreen **VEHICLE** button to enter the Vehicle Settings. Go to DOOR, SMART LIFTGATE.

- **Opening Height:** Select POWER LIFTGATE OPENING HEIGHT and choose one of the options. Optional steps to *manually* program the Opening Height:
  - Open Liftgate and manually position the Liftgate to your preferred opening height
  - Depress and hold the close button on the Liftgate for 3 seconds or more
  - Once the system sounds the alert that the programming is complete, manually close the Liftgate
- **Opening Speed:** Select POWER LIFTGATE SPEED and choose FAST or NORMAL



Smart Liftgate  
Operation, Opening  
Height/Speed  
Adjustment Video

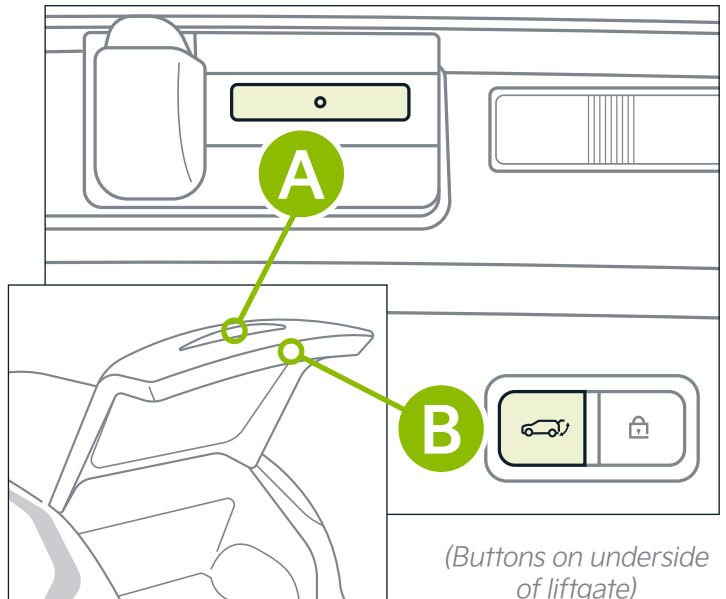

(Buttons on underside  
of liftgate)

[Continued on next page](#)

Refer to section 5 in the Owner's Manual for more information. Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.




# Smart Power Liftgate<sup>\*†17</sup>

 [Continued from previous page](#)

## Smart Key:


To open the Smart Power Liftgate, press and hold the Smart Key Liftgate button on the key fob **A** until the Liftgate begins opening. Press again and hold to close.

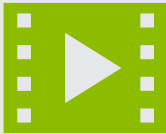

Smart Key - Remote Start, Remote Smart Parking Assist (RSPA) Video

### QUICK TIPS

 - The liftgate must be unlocked before it can be opened by the liftgate Release button
- The liftgate unlocks automatically and then can be opened manually when the Smart Key is within close proximity to the vehicle
- The Smart Key Liftgate button **A** must be held to close the liftgate. Releasing these buttons mid operation will cause the liftgate to halt its motion and sound a warning chime. This is normal operation

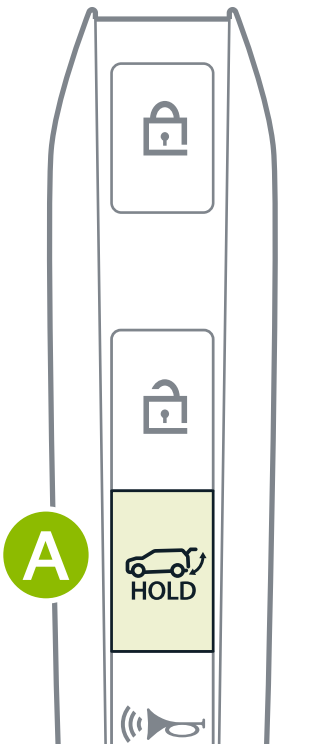

## REMINDERS:

- Smart Power Liftgate may be damaged if attempting to open or close manually
- If going through a car wash, remind the attendant to keep the vehicle in Neutral and keep the engine running. Also, disable the Smart Power Liftgate lid control using the button inside the glove compartment, turn off the auto rain-sensing wipers and fold in the mirrors
- Ensure all obstacles are out of the way of the liftgate lid when operating the Smart Power Liftgate
- The default liftgate opening/closing speed is set to fast
- The liftgate opening/closing speed setting cannot be changed when the Power Liftgate function is turned off or if the liftgate is not completely closed

*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.*

†LEGAL DISCLAIMERS ON [PAGE 152](#) | \*IF EQUIPPED



### Map/Room Lamps

#### Automatic on/off function\* **A**:

The Interior Lights turn on when the door is opened and automatically turns off in approximately 30 seconds.

 
When using the Smart Key to unlock the doors the lamp turns on for about 30 seconds and then turns off.

When the interior lights are on, they will turn off immediately when the vehicle is started or all doors are locked.

When the door is opened in the “OFF” or “ACC” position, the interior light turns on for a maximum of about 5 minutes and then turn off. If the vehicle is in ON position, it will stay on continuously.



**Overhead Console  
- Sunroof and  
Room Lamp Video**

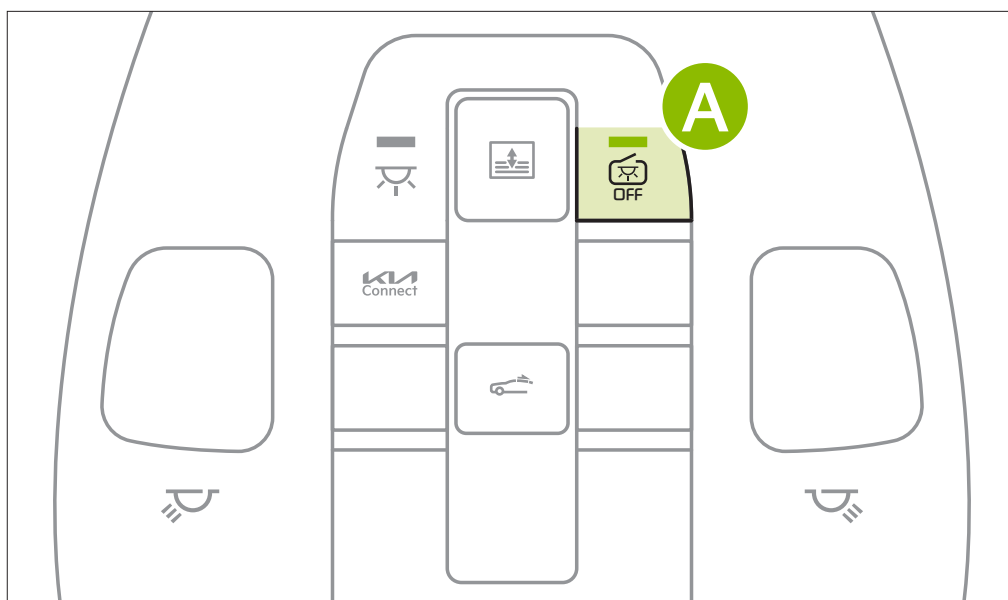

(Buttons located on overhead console\*)

#### QUICK TIPS

- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause 12V battery discharge

[Continued on next page](#)

*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.*

## Map/Room Lamps

 
[Continued from previous page](#)

### Map Lamp/Room Lamp Operation

- Press the button **A** to turn on the Driver's/Passenger's Map Lamp on/off
- The brightness of the map lamps can be changed by pressing and holding either buttons **A** for about 1.5 seconds or more while the lamp is on. Release the button at the desired brightness to save the setting
- Press button **B** to turn all the Map/Room Lamps on/off



**Overhead Console  
- Sunroof and  
Room Lamp Video**

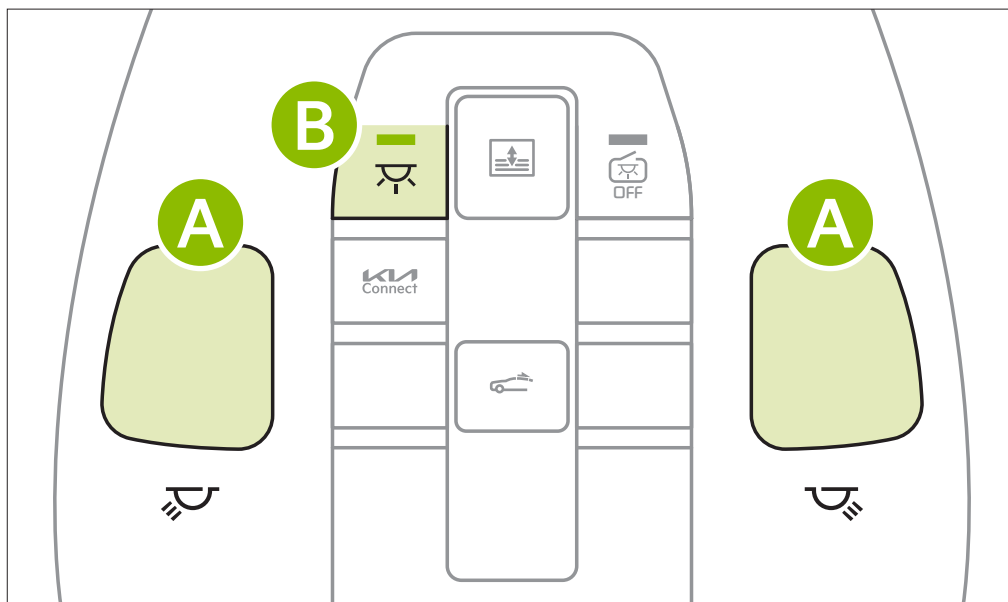

*(Buttons located on overhead console\*)*

### QUICK TIPS

- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause 12V battery discharge

*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.*



 


## Sunroof Operation

The Sunroof and Sunshade operation is controlled through a multidirectional switch/lever, and the ignition needs to be in the ON position to operate the Sunroof/Sunshade.

### Slide the Sunshade and Sunroof:

- **Auto Open:** Slide the lever **A** backward to the farthest position and release
- **Auto Close** (Sunroof only): Slide the lever **A** forward to the farthest position and release

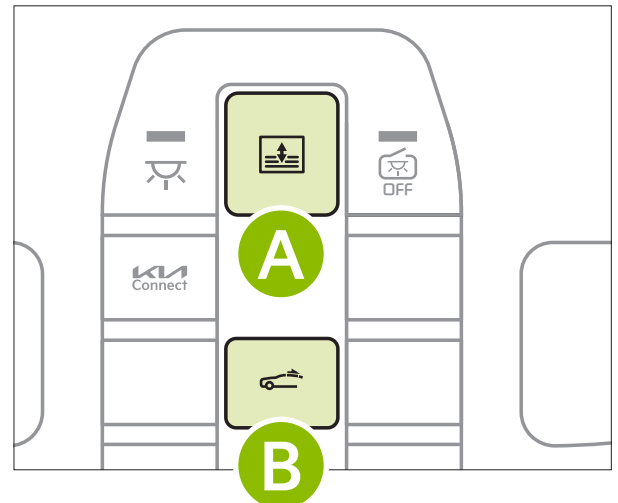

### Slide the Sunroof (with Sunshade open):

- **Open:** Press the Sunroof lever **A** backward and press again forward/backward until you reach the desired detent position (manual slide feature)
- **Close:** Press the Sunroof lever **A** forward and press again forward/backward until you reach the desired detent position (manual slide feature)

### Tilt the Sunroof:

- **Raise:** Push lever **A** upward
- **Lower:** Push lever **A** forward

### Rear Sunroof\*:

- Press the Rear Sunroof lever **B** to automatically slide the sunshade open and closed

[Continued on next page](#)

*Do not adjust the sunroof or sunshade while driving. This could result in loss of control of the vehicle. Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 4 in the Owner's Manual for more information.*



# Sunroof Operation

[\*Continued from previous page\*](#)

### QUICK TIPS

- To stop the Sunroof at any position, push or pull the Sunroof control lever in any direction
- Adjusting the sunroof past the first stop position (normal), in the fully opened position, may cause wind buffeting noise

### REMINDERS:

- Sunshade needs to remain open while Sunroof is open and vehicle is moving
- When closing, be mindful of any nearby objects or persons

*Do not adjust the sunroof or sunshade while driving. This could result in loss of control of the vehicle. Refer to section 4 in the Owner's Manual for more information.*



## OTHER KEY FEATURES

### Tire Mobility Kit

The Tire Mobility Kit is designed to temporarily seal certain types of tire damage.

 
For operational information, please refer to the Owner's Manual.



**Tire Mobility Kit  
Video**

**A** Sealant Bottle

**B** Compressor

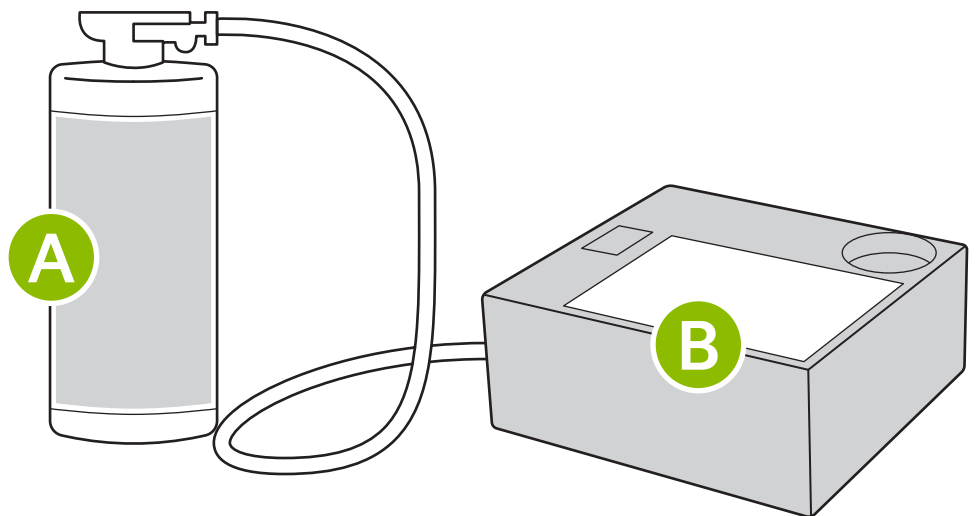

#### QUICK TIPS

- The Tire Mobility Kit is a temporary fix and is to be used for one tire only; the tire should be inspected as soon as possible
- The kit should only be used for sealing/inflating passenger car tires; do not use for inflating any other type of tires
- Some damaged tires cannot be sealed completely; do not use the kit if it appears a tire is damaged beyond repair

#### REMINDERS:

- After tire is properly sealed, drive cautiously and never exceed 50 mph or 120 miles on a tire that has been properly sealed with the Tire Mobility Kit
- Accessory spare tire kit is available for purchase

*Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 6 in the Owner's Manual for more information.*



# Occupant Detection System (ODS)<sup>†9</sup> / Passenger Airbag Off Indicator<sup>†14</sup>

ODS is designed to detect the presence and position of the front passenger and adjusts or turns off airbag deployment accordingly.

 
Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the “PASSENGER AIR BAG OFF” light **A** will illuminate.

### REMINDERS:

- Do not allow an adult passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated off because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat, or move to another seat in the vehicle
- For more information on the Occupant Detection System/ Passenger Airbag Off Indicator, please refer to the Owner’s Manual
- For maximum protection, always wear your seat belt

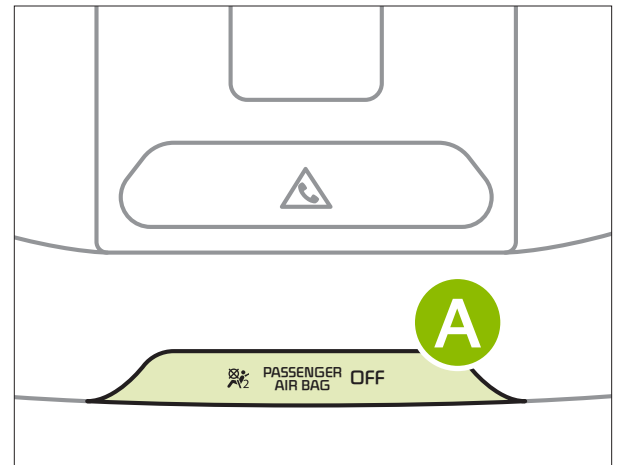

(ODS Indicator located below overhead lamp)

*Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 3 in the Owner’s Manual for more information.*



### Seat Belts<sup>†14</sup>

 
 
#### To properly fasten your safety belts:

1. Insert the belt tongue plate **A** into the buckle **B** until it clicks.
2. Position the lap portion of the belt across your lap as low on the hips as possible **C**. Adjust the belt to a snug fit by pulling up on the shoulder portion **D**.


#### Seat belt retractor locks:

Retractor locks allow lap/shoulder seat belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

During a strong stop, sudden turn or certain collisions, seat belt retractors are designed to automatically lock the belts to reduce the risk of injury.

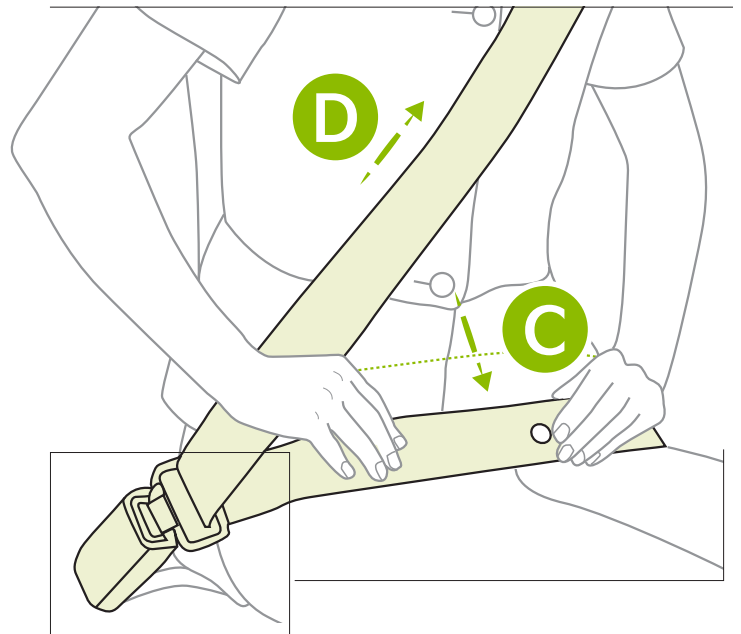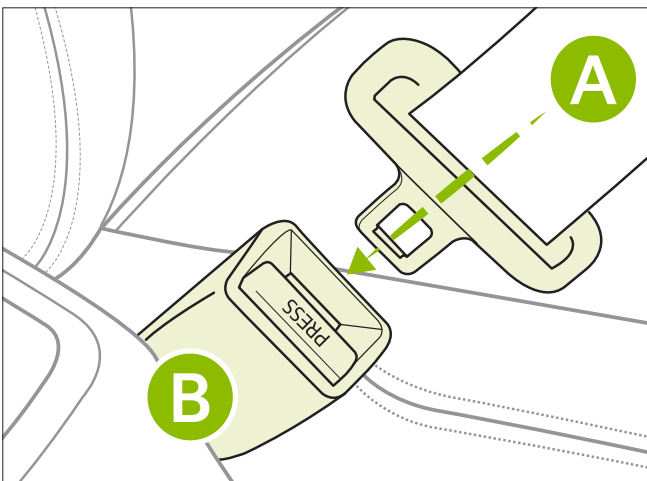

*Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 3 in the Owner's Manual for more information.*

<div>  <div>EV9 NORMAL MAINTENANCE SCHEDULE</div> </div>	MAINTENANCE INTERVALS (UP TO 64,000 MILES) <sup>A</sup>							
	8,000	16,000	24,000	32,000	40,000	48,000	56,000	64,000
Check tire pressure and tread wear; Rotate tires	P	P	P	P	P	P	P	P
Climate control air filter	I	R	I	R	I	R	I	R
Brake fluid	I	I	I	I	I	R	I	I
12V Battery condition	I	I	I	I	I	I	I	I
Steering gear rack, linkage & boots	I	I	I	I	I	I	I	I
Air conditioner compressor/refrigerant	I	I	I	I	I	I	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I
Brake discs and pads	I	I	I	I	I	I	I	I
Suspension ball joints	I	I	I	I	I	I	I	I
Cooling system	I	I	I	I	I	I	I	I
Drive shafts and boots		I		I		I		I
Reduction gear fluid				I				I

P = Perform

R = Replace

I = Inspect<sup>B</sup>

‡ If equipped.

A. See the Owner's Manual for complete maintenance schedule.

B. If necessary, adjust, correct, clean or replace

C. If TOP TIER detergent gasoline is not available, one bottle of fuel additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

D. As it is normal for engine oil to be consumed during driving, the engine oil level should be checked on a regular basis. The engine oil change interval for normal operating conditions is based on the use of the recommended engine specification. If the recommended engine oil specification is not used, then replace the engine oil according to the maintenance schedule under severe operating conditions.

E. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.

F. Transfer case oil and rear axle oil should be changed anytime they have been submerged in water.

G. Inspect for excessive tappet noise and/or engine vibration and adjust if necessary.

H. The drive belt should be replaced when cracks occur or tension is reduced excessively.

QUICK TIP

- Check your Maintenance Schedule or schedule an appointment with a dealer using your Kia Connect<sup>†1</sup> account by logging into your Kia Access App or your account on <https://owners.Kia.com> (Vehicles equipped with Kia Connect<sup>†1</sup> only)

†LEGAL DISCLAIMERS ON [PAGE 152](#)

|

\*IF EQUIPPED



# DISCLAIMERS

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

**Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.**

1. **Kia Connect:** Purchase/lease of certain 2025 and newer Kia vehicles with Kia Connect includes a complimentary 3-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 3-year Kia Connect subscription expires, continued access to the full suite of Kia Connect services available on your Kia will require a paid subscription at the then-current subscription rate or your use of certain Kia Connect features may immediately terminate. Use of Kia Connect is subject to agreement to the Kia Connect Privacy Policy (available at [owners.kia.com/us/en/privacy-policy.html](https://owners.kia.com/us/en/privacy-policy.html)) and Terms of Service (available at [owners.kia.com/us/en/terms-of-service.html](https://owners.kia.com/us/en/terms-of-service.html)). Complimentary Kia Connect subscription is transferable to subsequent owner during the original Kia Connect service term. Only use Kia Connect when safe to do so. Kia Access app is available from the Apple® App Store® or Google Play Store™. Kia America, Inc. reserves the right to change or discontinue Kia Connect at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. Kia Connect features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit [www.kia.com](https://www.kia.com) or your authorized Kia dealer. Apple® and App Store® are registered trademarks of Apple Inc. Google™ and its logos are trademarks of Google LLC.
2. Kia Access app for smartphone and smartwatch requires enrollment of vehicle in Kia Connect. Remote features require a KiaConnect subscription, a compatible smart device, and a wireless signal with good coverage to function. Normal cellular service rates may apply. Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command. Remote feature support varies by model, model year and trim; remote climate control not supported and other vehicles not equipped with fully automatic temperature control.
3. **Android Auto™, Apple CarPlay®, Bluetooth® Wireless Technology, Google Play™ Store, iPhone®, SiriusXM®, Sportmatic®, Digital Key 2, Homelink®:** Fair Use of Trademark - The commentary reference to trademarked material is for educational purposes only and not an endorsement by or of the holder of the mark.  
  
**Android Auto:** Vehicle user interface is a product of Google and its terms and privacy statements apply. Requires the Android Auto app on Google Play store and an Android compatible smartphone running Android 5.0 Lollipop or higher. Data plan rates apply.
4. **Driver Assist Features - Blind-Spot Collision-Avoidance Assist (BCA), Rear Cross-Traffic Collision-Avoidance Assist (RCCA), Lane Keeping Assist (LKA), Blind-Spot View Monitor (BVM), Safe Exit Assist (SEA), Lane Following Assist 2 (LFA2), Forward Collision-Avoidance Assist 2 (FCA2), Forward Collision Warning (FCW), Intelligent Speed Limit Assist (ISLA), Highway Driving Assist 3 (HDA3), Leading Vehicle Departure Alert (LVDA), Smart Cruise Control (SCC) with Stop & Go, Navigation-based Smart Cruise Control (NSCC), Remote Smart Parking Assist 2 (RSPA2), Rear Occupant Alert (ROA) with Door Monitoring, Reverse Parking Collision-Avoidance Assist (PCA), Reverse/Forward Parking Distance Warning (PDW), Rear View Monitor (RVM), Augmented Reality Head-Up Display (HUD), 3D Surround View Monitor (SVM):** When engaged, these features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.
5. **Driver Attention Warning (DAW):** When engaged, Driver Attention Warning is not a substitute for safe driving and may not detect all instances of driver fatigue or inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
6. **Electronic Stability Control (ESC)/ Traction Control System (TCS)/ Hill-Start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.
7. **Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.
8. **Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.
9. **Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model. Children age 12 and under should always be seated in the REAR seats. ODS is not a substitute for one's attention and may not detect all occupants within the vehicle. Always check the vehicle interior when exiting the vehicle.
10. **Power Button with Smart Key:** Always come to a complete stop before turning the power on or off. However, if you have an emergency while the vehicle is in motion and must turn the power off, you can turn the power off to the ACC position by pressing the Power button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the power by pressing the Power button with the shift lever in Neutral (N). With the power off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control.
11. **Rear Occupant Alert with Door Monitoring:** When engaged, ROA with Door Monitoring is not a substitute for one's attention. Always check the vehicle interior when exiting the vehicle.
12. **Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. On certain audio systems, for access to Enhanced Roadside Assistance\*, a connected mobile phone via *Bluetooth®* within the cellular service coverage area is required.
13. **Seat Adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.
14. **Seat Belts / Airbags:** For maximum protection, always wear your seatbelt.
15. **Seat Warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.
16. **SiriusXM®:** SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at [www.siriusxm.com](https://www.siriusxm.com). Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. ©2023 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.
17. **Smart Liftgate with Auto Open:** Driving with the trunk open may be unlawful and can draw dangerous exhaust fumes into your vehicle.
18. **Steering-Wheel-Mounted Controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.
19. **Sun Visors:** Sun Visor may not shield all direct light. Do not operate the vehicle if Sun Visor is impairing your visibility.
20. **Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion..
21. **Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.
22. The **myQi logo** is a registered trademark of The Chamberlain Group, Inc.